

Multifunctional Wireless Speaker

User Manual



Thank you for choosing our product.
Please read this manual carefully before using it.

after-sales.service1@hotmail.com

 
 
CONTENTS

Prodcut Overview.....	1
Light Function Instruction	2
Sleep Music	3
Bluetooth Mode.....	3
USB/TF Card Playback	4
Time Mode	4
Alarm Mode	5
Sleep Timer	6
Safety Instructions	7
Download the App	8

after-sales.service1@hotmail.com


Product Overview

Overview of Button Functions

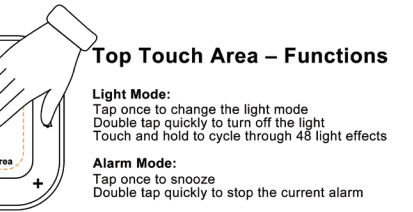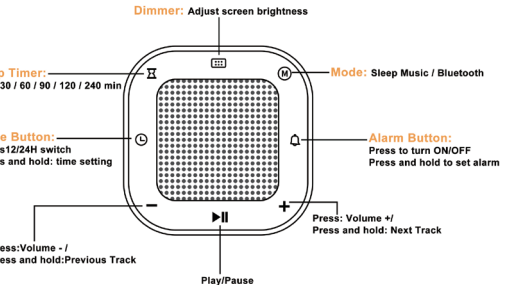

after-sales.service1@hotmail.com

 1

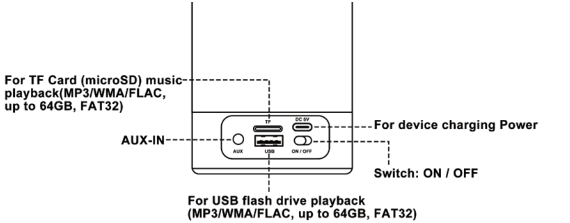

Light Function Instruction

Different light modes and 48 different colors optional, Touch on the top metal-mesh net to change the LED light mode.

1. Tap once: 30% brightness, gentle lamplight.
2. Tap twice: 60% brightness, soft lamplight.
3. Tap three times: 100% brightness, brightest light.
4. Tap four times: Breathing light with slow color transitions.
5. Tap five times: Aurora Lights — enjoy the beautiful northern lights effect with dynamic color transitions.
6. Tap six times: Lights off.
7. To select a specific color, press and hold the top metal-mesh net until the desired color appears, then release. (Tip: For 48 kinds colors, each color represents a code shown on the LED display for easy identification). Turn off the light: double-tap the top metal-mesh net at any time.

after-sales.service1@hotmail.com

2

Sleep Music Mode

1. Turn on Sleep Music Mode
Press the "M" button once to turn on Sleep Music Mode. The device will begin playing sleep music.

2. Track Selection
Press and hold the "+" or "-" button to play the next/previous music.

A total of 32 tracks accompany you to sleep.
Press the "+" or "-" button once to increase or decrease the volume.

3. Turn Off Sleep Music Mode
Press the "M" button twice to quit the Sleep Music Mode.

Bluetooth Mode

1. Turn the BT On
Press the "M" button twice to enter Bluetooth mode.
A prompt tone will sound, and "BT" will begin flashing on the display screen, indicating that the device is ready to pair.

2. BT Pairing
Turn on the BT of your phone and find the device (T15) in your BT list, then click it to complete the pairing. Upon successful pairing, the device will emit a prompt, and the "BT" icon will remain steady.

3. Pause/Play, Volume +/-, Previous/Next
Press the ">||" button to Pause/Play.

after-sales.service1@hotmail.com

3

- Press the "+" or "-" button once to increase or decrease the volume. Press and hold the "+" or "-" button to play the next/previous song.
4. Turn the BT Off
Press the "M" button to quit the BT mode.

USB Drive /TF Card Playback Mode

This device supports music playback from both USB flash drives and TF (microSD) cards

How to Use:

1. Insert a USB drive or TF card with MP3/WAV files.
2. The device will automatically start playing if it's newly inserted.
3. If already inserted, press the M button to switch to USB or TF mode.
4. Pause/Play, Volume +/-, Previous/Next
 - Press the ">||" button to Pause/Play.
 - Press the "+" or "-" button once to increase or decrease the volume.
 - Press and hold the "+" or "-" button to play the next/previous song.
5. Exit USB Drive /TF Card Playback Mode
 - Press the "M" button to switch to another mode.

- Notes:**
- Supports USB Drive /TF Card up to 64GB.
 - Supported audio formats: MP3,WMA,FLAC.
 - For best compatibility, store audio files in the root directory.

Time Mode

1. 12H/24H Time Format Setting
Press the "⌚" button to switch the "12H" or "24H" time format.

after-sales.service1@hotmail.com

4

2. Time Setting

Note: Some devices sync time automatically via Bluetooth. If not, you can set the time using the following method.

- Press and hold the "⌚" button to enter the time setting. The "Hour" icon on the display area is flashing. Press the "+" or "-" button to adjust the "Hour", then press the "⌚" button to confirm. And then the "Minute" icon is flashing.
- Press the "+" or "-" button to adjust the "Minute", then press the "⌚" button to confirm.

3. Adjust the brightness of the clock

Press the "☀️" Dimmer button to adjust the clock display brightness. There are four levels: 100%, 50%, 10%, OFF.

Alarm Mode

1. Alarm Setting

- Press and hold the "🔔" button for 2 seconds to enter alarm setting mode. The "Hour" icon on the display area will start flashing. Press the "+" or "-" button to adjust the alarm "Hour." Then press the "🔔" button to confirm. And then the "Minute" icon is flashing.
- Press the "+" or "-" button to adjust the alarm time: "Minute", then press the "🔔" button to confirm.
- Please press "+" or "-" button to adjust the sounds volume (U04-U16), press the "🔔" button to confirm.

2. Snooze Function

- When the alarm sounds, the LED light turns on automatically.
- Tap the top metal-mesh surface to activate Snooze mode.

after-sales.service1@hotmail.com

5

- The alarm will sound again after 9 minutes.
- During snooze, the alarm icon will flash.

3. Stop Alarm

When the alarm goes off, you have 3 options to stop the alarm for the day.

1. Press any button on the top of the device
2. Quickly double tap the top metal-mesh surface
3. Without Any Action:
If there is no operation within 15 minutes, the alarm will automatically turn off for the day.

4. How To Disable the Alarm Completely?

When the alarm icon appears, the alarm is active and will ring next time. To disable it:
Press the "🔔" button until the icon disappears. The alarm is now off and won't ring. To reactivate it, press the "🔔" button again.

Sleep Timer

Press the "⌚" button to cycle through timer options: OFF / 30 / 60 / 90 / 120 / 240 minutes.

The corresponding icon will light up. If no icon is displayed, the sleep timer is disabled.

- After the selected time has passed, the speaker and night light will automatically turn off.
- To check the remaining countdown time after the sleep timer has been set, press the "⌚" button once. The remaining time will briefly appear on the display.
- To use the sleep timer again, simply repeat the above steps.

after-sales.service1@hotmail.com

6

Safety Instructions

In order to prevent some dangerous situations during using, please read the safety instructions.

1. Please do not place the product near heaters, microwave ovens, rice cookers, pressure cookers and other heating equipment to prevent the product from overheating and causing a fire.
2. Please do not drop or hit the product to avoid explosion of the product.
3. When used by children, please ensure normal operation under adult supervision.
4. Do not use in low temperature and humid environment, the normal use environment is 0-45C .
5. Do not disassemble or repair the product without authorization.
6. When not in use, please unplug the product charger from the socket to avoid consuming battery life or causing damage.

after-sales.service1@hotmail.com

7

Download the App

1. Scan the QR code below using your phone's camera.
2. Download the App to your phone from the provided link.



CE FC RoHS

after-sales.service1@hotmail.com

8

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction