


AM FM Radio Instructions

Model: DR-01

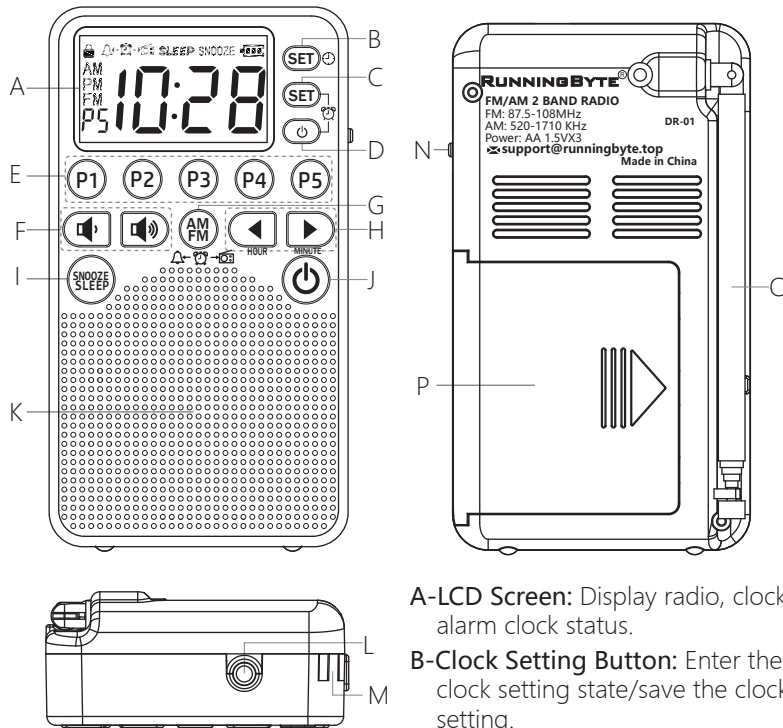

- C-Alarm Setting Button:** Enter the alarm setting state/save the alarm setting.
- D-Alarm ON/OFF Button:** Turn the alarm on/off.
- E-Preset buttons:** Preset your favourite channels and listen to the preset channels.
- F - Volume Up and Down Buttons:** Adjust the radio volume.
- G-AM/ FM Switch & Alarm Tone Select Button:** Switch between AM and FM bands/Select alarm tones (beep or radio) in alarm setting mode.
- H - Radio Tune/Hour, Minute adjustment Buttons:** Tune+, Turn-/Set hours and minutes in the clock and alarm setting state.
- I-SNOOZE/SLEEP Buttons:** Set the sleep timer and snooze.
- J-Radio ON/OFF Button:** Turn the radio on and off.
- K-Speaker:** Built-in loud speaker.
- L-Headphone Jack:** Support 3.5mm headphones to give you private listening.
- M: Hand Strap Fixing Hole.**
- N-Key Lock/Unlock:** Lock key/unlock key.
- O-FM Antenna:** receives FM radio signals.
- P-Battery Compartment.**

Features:

1. **Clock:** 12-hour clock
2. **Alarm clock:** The alarm can be set to beep or radio; Any channel you preferred can be set as an alarm.
3. **Radio:** support AM/FM 2 band; Support manual radio search and automatic search; Easy to preset stations, support 10 preset stations (5 AM + 5 FM).
4. Built-in loud high-quality speaker and 3.5mm headphone jack (headphones not included).
5. Powered by 3 AA batteries (batteries not included).

Product Specifications:

Power: 3X1.5V AA Batteries (batteries not included)

Frequency range: FM: 87.5-108MHz
AM:520-1710KHz

Speaker: 57mm

Headphone jack: 3.5mm (headphones not included)

Size: 66*28*118mm

Net weight: 117.6g

In the box:

Pocket Radio*1
Instruction*1

🕒 Set the Clock:

With the radio off, press the **(SET)** button to enter the clock setting mode, then the hour and minute will flash on the screen, press the **(◀)** button to set the hour, press the **(▶)** button to set the minute, and finally press the **(SET)** button to save the clock time.

🔌 Turn ON/OFF the Radio:

With the radio off, press the **(🔌)** button to turn on the radio.
With the radio on, press the **(🔌)** button to turn off the radio.

📻 Switch Bands between AM and FM:

With the radio on, press the **(AM FM)** button toggle between AM and FM bands.

📶 Stations Search:

1. Auto stations search:

With the radio on, press and hold the **(◀)** or the **(▶)** button for one second. The unit will automatically locate the next strong and clear station.

2. Manual stations search:

With the radio on, click the **(◀)** or **(▶)** buttons. With each click, the frequency decreases or increases.

📁 Preset

1. Favourite radio stations Preset, use P1 (Preset 1) as an example:

Turn on the radio, press and hold the **(P1)** button for 1 second during your favourite station is playing until the P1 is flashing on the screen and it will be saved automatically. Presetting of P2-P5 is the same with the operation as P1 above.

2. Listen to preset stations use P1 (Preset 1) as an example:

With the radio on, Click the **(P1)** button and the preset station will be played.

3. Tip:

This radio supports 10 preset stations(5 stations for AM band (P1-P5) and 5 stations for FM band (P1-P5)).

When listening to the preset stations, please check whether the corresponding AM/FM band is selected.

Radio Volume

With the radio on, click the  or  button to adjust the volume and the volume level U0-U16 will be displayed on the screen.

SleepTimmer

With the radio on, click the  button to set the radio auto-off after playing for a certain time from 10-90 minutes.

Set Alarm:

1. Set the alarm time and sound:

With the radio off, click the  button to enter the alarm setting mode, then the alarm time and ring mode will flash on the screen, click the  button to set the hour, click the  button to set the minute and click the  button to set the alarm sound (beep or radio). Finally, click the  button to save the alarm setting.

2. Set the specified station as an alarm:

Turn on the radio, find the channel you want to set as an alarm, press and hold the  button for a second and you will hear a tone while the screen will display , indicating that the station you are listening to has been set as an alarm and will automatically turns on at the alarm time.

3. Turn on/off the alarm:

With the radio off, click the  button, and the icon  (beep alarm) or the icon  (radio alarm) will appear on the screen to indicate that the alarm is on. Then click the  button again, both icon  (beep alarm) and icon  (radio alarm) will disappear on the screen, indicating that the alarm has been turned off.

4.To silence alarm:

If the alarm is beep, click any button (except snooze button), the alarm will stop and sound again next day. If no operation after the beep alarm goes off, the beep will stop after 2 minutes and sound again after 9 minutes, and it will not sound again that day after a total of four repeated times.

If the alarm is radio, press the  button to turn it off and it will sound again the next day. if no operation after the radio alarm goes off, the radio alarm will turn off after 60 minutes.

5.Snooze:

While the alarm (beep or radio)goes off, press the  button, the alarm will sound again when the snooze period(9 minutes) is over and this can be repeated 4 times.

Lock/Unlock buttons

Push the slide switch  on the right side of the radio to the lock point to lock all buttons, and the icon  will appear on the screen, indicating that all buttons are locked.

Push the slide switch  on the right side of the radio to the unlock point to unlock all buttons, and the icon  on the screen disappears, indicating that all buttons are unlocked.

TROUBLESHOOTING

Button invalid:

- Check the Lock/Unlock button on the right side of the radio.

No sound:

- Adjust the volume.

Alarm does not work:

- Please check if the alarm has been turned on.

Poor radio reception:

- Increase the distance between the unit and your TV or mobile phone.
- please open the telescopic antenna and change the length and direction to improve the FM reception.
- The magnetic antenna inside the radio is used for AM reception, rotating the radio body can achieve better reception when the signal is weak.
- When used indoors, try to get better signal strength as close to the window as possible
- If the reception is still weak please replace the batteries.

If the problem remains unsolved:

- Please contact us on amazon or by email we will do our best to make you satisfied.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.