

	Product Information 1. Power Button - When the device is off, please press and hold the power button for approximately 5 seconds untill the screen turns on. - When the device is on, press and hold the power button for approximately 3 seconds to access reboot or power-off menu. - Short press on power button will only turn off/on the screen but leave the device on. 2. RESET Use a pin or paper clip to reset the device. 3. USB Connect to a USB flash drive. 4. Micro SD Card Insert Micro SD Card(max 32GB) here. 5. DC Connect power adapter to the device.	6. Mounting Hole 7. Security Lock Slot 8. Stand Leg Installation Hole - To install the frame stand, rotate in clockwise direction. - To uninstall, rotate in counterclockwise direction. Make sure to always use the power off button on the device Never disconnect power when Frameo is running! Getting Started Congratulations on your brand new Uhale photo frame! If you are new to using Uhale then start by downloading the Uhale Photo App, then follow the Uhale Frame quick setup. Once you have set up your Uhale frame, you can start connecting it to your friends and family. Download Uhale App Uhale Frame Quick Setup When starting your frame, you will need to set up the frame. - Uhale Frame may request to upgrade to the latest version. Upgrading to the latest version is recommended. - Select a language as default. - Connect your frame to the internet by connecting it to Wi-Fi.	- Set the date and time. - Name the photo frame (E.g. Jack's Frame). - Set the location of the photo frame (E.g. Living Room, Kitchen, Office). Start Using Uhale App Before conncting with your friends and family, you need to download Uhale Photo App on your mobile device and connect the photo frame with the Uhale Photo App. After connecting the photo frame with the Uhale Photo App. You can either share pictures and videos on Uhale Photo App or Uhale Web at: https://uhale.zeasn.tv Connecting a new friend - Make sure that your friend has installed the Uhale Photo app. - Click the “add friend” icon on your frame. A dialog will appear and show both the QR code and paring code (valid for 12 hours). - Now share the QR code or the paring code in whatever fashion you prefer e.g. SMS, E-Mail, phone call, to your friend. - Once the frame is connected to your friend’s Uhale App, you will be able to find them in “manage account” page on the frame. Navigating your Uhale Frame Swipe left or right to go through your photos.	To access the menu, simply tap once on the screen. In the menu, In the menu you will find quick access to the add friends and the settings. From the menu it is also possible to make relevant settings for the currently displayed photos, such as hide, adjust. Photos tab with a curated view of your library making it easy to find and relive your photos and videos. Settings Through the settings, you can personalize your frame. Manage Photos Show/hide Photos Select photos to hide by tapping them. Hidden photos will NOT be deleted and you can always select them to be shown again.
说明书尺寸：12*18cm(此页不印刷)	Support To download the full User Manual Guide, please visit our website www.euphroframes.com If you have any problem while using the device, please contact us at help@euphroframes.com Warranty To activate 1-year free warranty for your device, please visit our website www.euphroframes.com, and fill out the warranty activation form within 14 days of the date you receive the product.	Weather & Time Enable and disable the weather and time. When enabled, the weather and time are displayed on the home page, and when disabled, they are not displayed. Backup and restore Backup frame to external storage (e.g. microSD card) Tap to make a backup of your photos. The time of the latest successful backup is also displayed here. Restore from backup Before you attempt to restore your frame, start by confirming that your backup is up-to-date. This is done by confirming the date under “Backup frame to external storage (e.g. microSD card)”. If the last backup is too old or if no backup is made, then press the “Backup frame to external storage (e.g. microSD card)” button to make a new backup. Note: If you wish to restore a backup on a frame that has already been set up, please make sure that both frames are updated to the latest version beforehand. Reset Delete all data of the photo frame. This will permanently delete all photos, friends/connections and settings.	Best wishes Show the wishes sent by your family or friends. You can manage the wishes in Settings - Manage photos - Best wishes. To Send out Wishes - Open the Uhale App on your phone. Tap the “Gift” icon. (Note: Please upgrade the APP to version 3.14 or above.) - Write down your wishes. - Select a style. - Choose a frame(s) you would like to send wishes to. My Friends Account Settings In the Account Settings page, you can also delete a friend by pressing the DELETE FRIEND button. This will remove their permission to send photos to the frame. You can also choose to delete photos shared by them. Display Settings Ambient Clock Once enabled, a clock will be displayed when the photo frame is in sleeping mode. Sleep Mode When the sleep mode is on, the screen is turned off during a specific time to reduce energy consumption. The default setting is to turn off the screen at 20:00 and to turn it back on at 08:00. This can be changed by setting your preferred sleep mode start/end time. Photos can still be received when the sleep mode is on.	Delete Photos Select photos that you want to permanently delete from your frame by tapping the photo. Use to select or deselect all and to permanently delete the selected photos. You can also withdraw photos/videos already sent to the frame from Uhale mobile app (note: withdraw only works when history is retained and frame stays online). To withdraw: In Uhale “History” - select the icon of the ones you would like to withdraw. Import Photos Allow you to import photos from external storage (e.g. SD card). Insert an external storage device into the device with the photos to be imported. Select the photos to be imported into the photo frame. Tap import icon to start.

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

--Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device must operate with a minimum distance of 20 cm between the radiator and user body.