 




Molly&Cody Cordless Cat Water Fountain

Instruction

WF-11

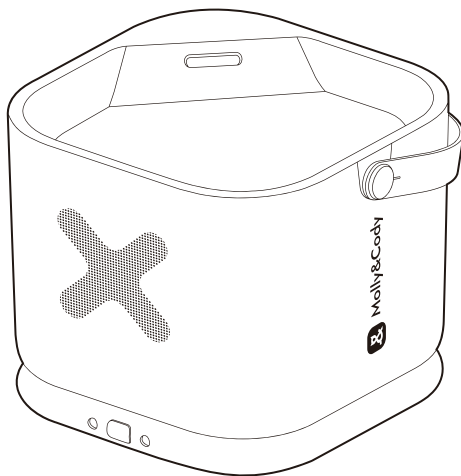

Please Read the Manual Carefully
Before Using the Product

EN Instruction

FR Notice d'utilisation

IT Istruzioni

DE Anleitung

ES Instrucciones

RU Инструкция

PT Instruções

AR التعليمات

TR Talimatlar



Important Safety Instructions



Read all instructions before use and keep them for future reference.

When using electrical appliances, especially when children are present, always follow basic safety precautions, including the following:

Intended Use

- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are supervised or instructed in the use of the product by a person responsible for their safety.
- Do not use as a toy. Close supervision is required when children or pets are near or using the appliance. Children and pets should be supervised to ensure they do not play with the device.
- Do not use this appliance with pets that cannot reach the water tray or have physical disabilities.
- For indoor use only. This appliance is intended for household use as described in this manual.

Electrical Safety

- Do not operate the appliance if the power cable or plug is damaged, if the appliance malfunctions, or if it has been damaged in any way.
- Do not immerse the power cable, plug, or base in water or any other liquid, and do not allow moisture to contact these parts.
- If the power cable is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person to avoid hazards.
- Always unplug the appliance when not in use, before installing or removing parts, and before cleaning, maintenance, or servicing.
- Use only the supplied power adapter and charging cable.

About Use

- Do not operate the water fountain without water. Do not allow the pump to run dry.
- Do not install or store the water fountain in areas exposed to weather or temperatures below 40°F/0°C.
- Do not place any foreign objects in the water tank. Do not use with water that is microbiologically unsafe or of unknown quality.
- Do not allow pets to chew or swallow any parts. Carefully cover or hide power cables to prevent pets from biting them.
- Do not lift the water fountain by the lid or the water tray. Hold the water tank with both hands and keep the unit upright.
- Do not attempt to disassemble, repair, modify, or replace any part of the device. There are no user-serviceable parts inside. All repairs must be performed by qualified personnel.
- Replace the filter every 10 days, or sooner if water flow noticeably decreases. For two or more cats, more frequent replacement may be necessary.
- Use only Molly&Cody–approved accessories and replacement parts.
- Dispose of all packaging materials properly. Keep them away from children and pets.

 
Proper Disposal of This Product (Waste Electrical and Electronic Equipment)

(For countries with separate collection systems)

This symbol on the product, accessories, or manual indicates that the product and its electronic accessories must not be disposed of together with other household waste at the end of their service life. To prevent potential harm to the environment or human health caused by uncontrolled waste disposal, keep these items separate from other types of waste and recycle them responsibly to support the sustainable reuse of material resources. Household users should contact the retailer from whom they purchased the product or their local government office for details on where and how to recycle these items safely. Commercial users should contact their suppliers and review the terms and conditions of the purchase contract. This product and its electronic accessories must not be mixed with other commercial waste for disposal.



Check whether the package includes all of the following parts:

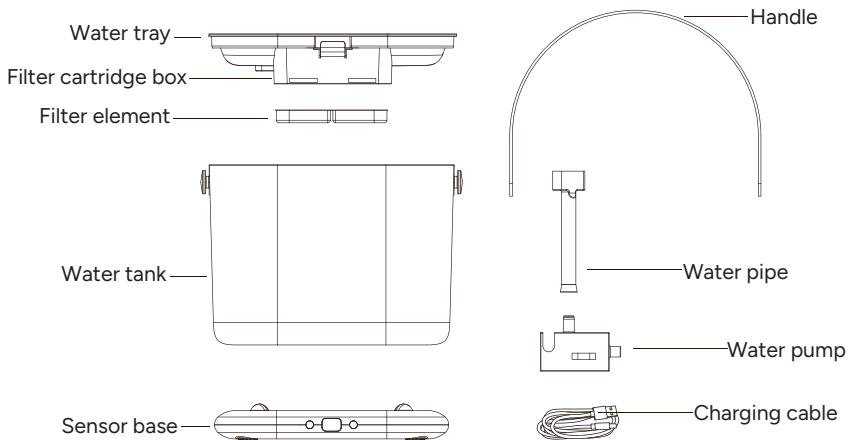

Product Parameters

Product name: Molly&Cody Cordless Cat Water Fountain

Product model: WF-11

Main unit material: ABS

Main unit size: 190 × 205 × 165 mm

Water tank capacity: 3L

 
Rated voltage: 5V-2A

Input interface: Type-C USB




Clean the water fountain thoroughly before first use.

For details, please refer to the operating steps.

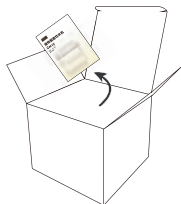


① Take out the manual

 Open the box, remove the certificate of conformity and the product manual from the top, and read them carefully.

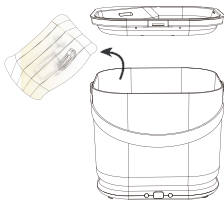


② Take out the pump

 Open the water basin, remove the bubble bag inside, then take out the pump, power cable, and filter cotton.




③ Insert the filter cotton

 Open the filter slot under the basin, place the filter inside, then fasten the opening of the filter slot back onto the bottom of the basin.

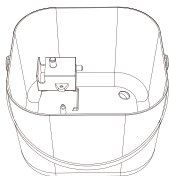


4 Install the pump

 Take out the pump and place it into the recessed area of the water tank to secure it.

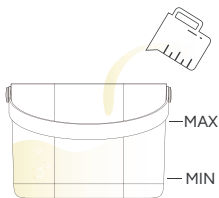


5 Fill the tank with water

 Fill the tank with purified water, keeping the water level between the MAX and MIN marks.

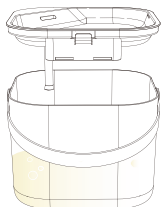

6 Install the water tray

 Insert the water tray with the installed filter cotton into the opening of the water tank until it is firmly seated.

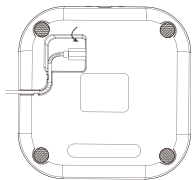


7 Connect the base power

Turn the tank over, take out the supplied power cable, insert it into the power port on the side of the recessed area at the bottom, then tuck the cable into the cable groove.



 The entire base is not waterproof. Keep the base dry at all times.



8 Connect the power

Open the silicone cover on the back of the pump from the left side to expose the power port.

 


9 Connect the sensor base


Align the recessed point on the bottom of the tank with the raised point on the sensor base. Align the pump area with the sensing zone marked on the base, then secure it.

Functions and Indicators

Power on/off the water fountain

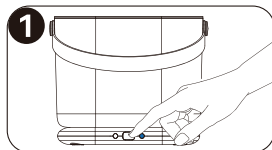


 Power on: Long-press the power button until the indicator turns on.

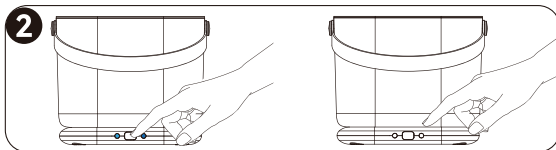


Power off: Long-press the power button, keep holding when the blue indicator flashes rapidly, and release only after the indicator turns off.

 Mode Switching

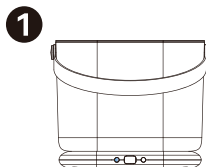


Sensor Mode

 The default startup mode is sensor mode.
The maximum sensing distance of the fountain is 1 meter.
When triggered, the blue indicator will flash slowly and water will dispense for 20 seconds before waiting for the next trigger.
After the previous cycle ends, wait 5 seconds before the next sensor activation.
After activation, the indicator will turn off.

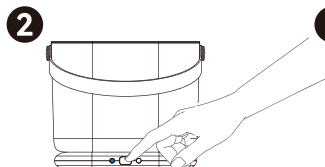

Mode Switching

 Single-press the button.
If the deep blue indicator flashes rapidly on the left indicator and then stays solid blue, it enters automatic mode.
If it changes to slow-flashing blue, it enters sensor mode.

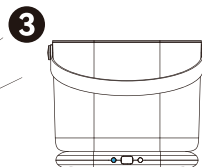

Mode Switching

Solid blue indicator.
Continuous water flow.

 
Warning Indicators




Dry-run protection for low water and power failure

Ensure the water level in the basin always remains above the minimum level line.


1 Battery reminders:

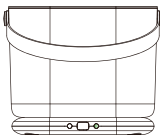

 Low battery: Red indicator slow flashing

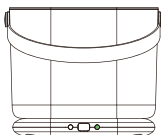


Charging: Green indicator fast flashing

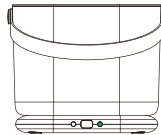 


Fully charged: Green indicator solid on

 2 Low-water reminders:

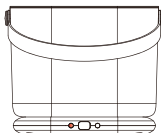


 In automatic mode with low water:
Solid blue changes to flashing red (automatic mode switches to sensor mode)

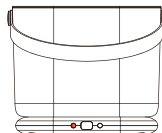

In sensor mode with low water:
Blue indicator slow flashing changes to red indicator slow flashing

 3 Filter replacement reminder:

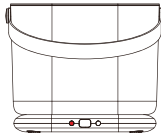

A solid red light indicates that the filter needs to be replaced. After replacement, press the button to reset the filter replacement timer. (Replace the filter every 10 days.)

Troubleshooting



The troubleshooting guide covers the most common issues.

If problems persist, please contact the seller's customer service.

- Q:** The fountain is not working or stops working suddenly.
- A:** Check whether the fountain has run out of power. If the battery is low, promptly connect the appropriate power cable to charge the pump.
Check whether the fountain is in sensor mode. In sensor mode, it will not operate unless a pet is detected.
Check whether the water level is below the minimum line. Add water between the minimum and maximum level marks.
This product does not support fast charging. Do not use a fast charger to charge this product to avoid damaging the main unit.
- Q:** Water flow is reduced.
- A:** Check whether the fountain is low on power. If the battery is low, promptly connect the appropriate power cable to charge the pump.
Check and clean the filter. Clean the filter at least once a week and replace it every 3–4 weeks.
Check whether the filter sponge is clogged with limescale or dirt. Remove and clean the sponge regularly to remove debris, and replace the filter cotton every 10 days.
- Q:** The button is unresponsive.
- A:** This product has only one touch button. To prevent accidental touches, you must long-press the button during use. Release only after the blue indicator finishes flashing quickly. If the left indicator is on, the device has turned on successfully.
Ensure your finger is placed at the center of the button and that you hear the "click" sound.
Check whether the fountain is out of power. If the battery is low, promptly connect the appropriate power cable to charge the pump.
- Q:** The indicator is off.
- A:** Check whether the pump has run out of power. If the battery is low, promptly connect the appropriate power cable to charge it.
Check whether the unit is in sensor mode. In sensor mode, the fountain will not work unless a pet is detected, and the indicator will remain off.

Warranty and Service



Thank you for using the Molly&Cody Cordless Cat Water Fountain!

The warranty does not apply in the following cases:

- Accidents, misuse, or repairs performed by unauthorized personnel.
- Any device that has been tampered with or used for commercial purposes.
- Normal wear and tear of consumable parts.
- Damage caused by force or external impacts.
- Damage resulting from failure to follow the user manual (e.g., connecting an unsuitable power source or not following the instructions).
- Appliances that have been partially or fully disassembled.
- Defects caused by damage during transport, repair, servicing, or modification performed on the product or any of its parts by unauthorized personnel.

Certifications

European Union Compliance Statement

Battery recycling information for the European Union



Batteries, or their packaging, are labeled in accordance with European Directive 2006/66/EC and its amendment 2013/56/EU concerning batteries, accumulators, and waste batteries and accumulators. The Directive determines the framework for the collection and recycling of used batteries and accumulators across the European Union. This label is applied to various batteries to indicate that they should not to be thrown away but rather reclaimed at the end of their life per this Directive.

In accordance with the European Directive 2006/66/EC and its amendment 2013/56/EU, batteries and accumulators are labeled to show that they must to be collected separately and recycled at the end of their life. The label on the battery may also include a chemical symbol for the metal contained in the battery (Pb for lead, Hg for mercury, and Cd for cadmium).

Users of batteries and accumulators must not dispose of them as unsorted municipal waste. Instead, they should use the available collection framework for customers for the return, recycling, and proper treatment of batteries and accumulators. Customer participation is essential to minimize any potential impacts of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances.

Before disposing of electrical and electronic equipment (EEE) in the waste collection stream or at waste collection facilities, end users of equipment containing batteries and/or accumulators must remove those batteries and accumulators for separate collection.

Waste Electrical and Electronic Equipment (WEEE) Directive



All products bearing this symbol are classified as waste electrical and electronic equipment (WEEE, as defined in Directive 2012/19/EU) and should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for recycling, as appointed by the government or local authorities. Proper disposal and recycling help prevent potential harm to both the environment and human health. Please contact the installer or your local authorities for more information on the location, terms, and conditions of these collection points.

Restriction of Hazardous Substances Directive (RoHS)

The product from Spark Tech Creations Co.,Ltd. including all parts (cables, cords, etc.), complies with the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment ("RoHS recast" or "RoHS 2").

Radio and Telecommunications Terminal Equipment Directive



We, Spark Tech Creations Co.,Ltd. hereby declare that this device complies with the basic requirements and relevant regulations outlined in the guidelines.

2014/53/EU, 2011/65/EU, 2014/30/EU, 2014/35/EU and 2009/125/EC.

We, Spark Tech Creations Co.,Ltd. hereby declare that this device complies with the basic requirements and relevant regulations outlined in the guidelines.
2014/53/EU, 2011/65/EU, 2014/30/EU, 2014/35/EU, and 2009/125/EC.



Disposal

This symbol on the product or in the instructions indicates that your electrical and electronic equipment should be disposed of separately from household waste at the end of its life. There are separate collection systems for recycling in the EU. For more information, please contact your local authority or the retailer where you purchased the product.



Made in China

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.