

100mm

ENGLISH User Manual

S102

Solid-State Wireless Power Bank with Foldable Stand

Specification

• Solid-State Power Bank with Foldable Stand

Model Name: S102

Battery Capacity: 10000mAh / 3.85V / 38.5Wh

Input Power:

USB-C: 5V=3A / 9V=2A

Output Power:

• Wireless: 5W / 7.5W / 10W / 15W

• USB-C: 5V=3A / 9V=2.22A / 12V=1.67A

• Wireless + USB-C: 5V = 3A (15W max.)

Operating Temperature: 0°C - 35°C

Size: 105.7 x 69.6 x 21.2 mm Weight: 224.7 g

1-Year Limited Warranty

Made in China

*The product can only be used to charge smartphones / earbuds. Please refer to the user manual for instructions and more product information.

*This product does not support simultaneous charging and discharging.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

 
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


RF warning statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Product Introduction

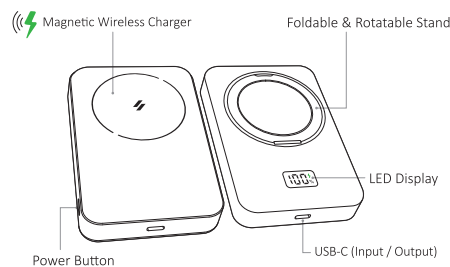


Charging Methods

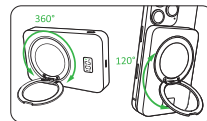 


Charge 1 device with foldable stand

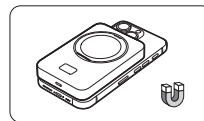 

 Charge 1 device with magnetic attachment

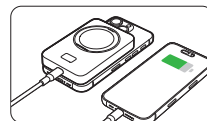


Charge 2 devices simultaneously

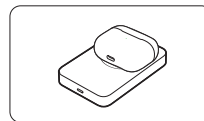 

Place AirPods on the charging area
*Supports AirPods with a wireless charging case.

 LED Display Introduction

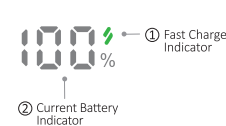

• Power on (instant charging starts) Numbers and % symbol light up 	• Power off Press twice briefly to turn off the power	• USB-C input Unit digit flashes 	• USB-C output/ Wireless charging Digit lights up 	• Fast charging The fast charge indicator turns green. 	• FOD Lightning symbol flashes 15's then power turns off
---	--	---	---	---	---

Protective Function	Multiple circuit protection	Over-voltage protection
	Over-current protection	Flame retardant protection
	Short-circuit protection	Over-heat protection
Attention	Do not expose to liquids	Keep away from children
	Do not shake while charging	Avoid extreme temperatures
	Unplug the device when fully charged	1-Year Limited Warranty
	Do not disassemble, puncture, drop, bend or modify	Please scan the QR code on the packaging for the user manual
	For the fastest and safest charge, use an ADAM cable, your device's original cable or a certified cable (such as MFi)	

AIRPLANE MODE ✈

Enable Airplane Mode

1. Press the button once to power on the power bank.
2. Press and hold the button for 3 seconds — all lights will flash 3 times. After the power bank shuts down, it enters Airplane Mode.
3. If wireless charging doesn't work (USB-C charging is normal), make sure Airplane Mode is enabled.

Disable Airplane Mode

1. When Airplane Mode is enabled, after pressing the button once to power on the power bank.
2. Press and hold the button for 3 seconds — all lights will stay on for 3 seconds and then turn off. Wait for the power bank to shut down to exit Airplane Mode.
3. If the power bank snaps-to-charge, Airplane Mode is disabled.

Airplane Mode Notice

When Airplane Mode is enabled, the wireless module will be temporarily disabled (USB-C charging remains available). Wireless charging will resume once Airplane Mode is turned off.

232mm