


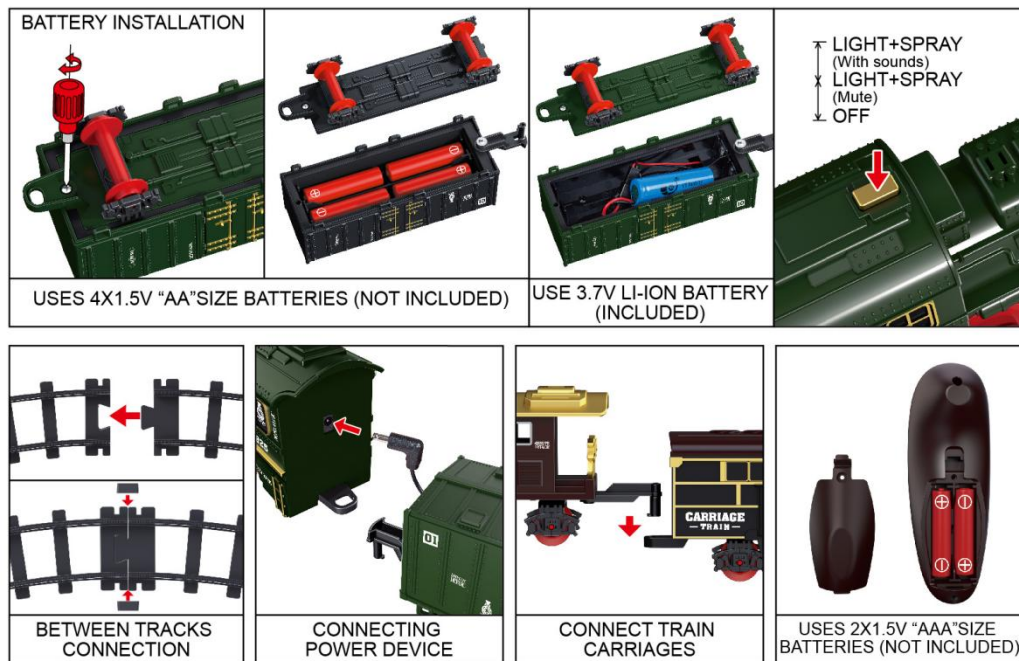

Sample Name: 2.4G Remote Control Classic Steam Track Train  
 Mode: 699-137A/699-138A/699-139A/699-140A/  
 699-145A/699-146A/699-147A/699-148A


#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

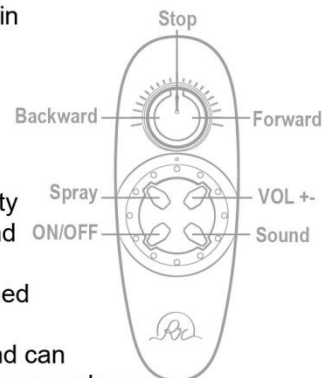

When the switch button of the locomotive is turned on, the red light at the front of the locomotive flashes, and then press the power button of the remote controller for a short time to align the frequency between the locomotive and the remote controller. At this time, the red light of the locomotive is always on. When the knob of the remote controller is twisted clockwise, the train moves forward and twists counterclockwise. The remote controller also has a horn button, a spray button and a mute button.