 


T21 WIRELESS EARBUDS

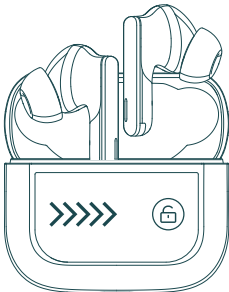

USER MANUAL

CONTENTS

Product Overview	01
Power On	02
Power Off	03
Bluetooth Pairing	04
Phone Calls Control	04
Music Control	05
Reset Earbuds	06
Multi-Funtion Button	06
LCD Touch Screen	07
Charging	11
Specification	13
Troubleshooting Guide	14
Safety Instructions	16
WARNING	17

Product Overview

Left Earbud



Microphone

 
Right Earbud




Touch Panel

Charging Terminal

Charging Case




Charging Pin

 

LCD Touch Screen

 Multi-Function Button



Type-C Charging Port



3 Pairs of Ear Caps(S/M/L)

NOTE: The ones in medium size are on the earbuds




USB-C Charging Cable

Power On

Automatic

Take out the earbuds from the charging case, they will power on automatically and prompts "power on".

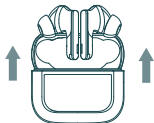

Manual

When the earbuds are OFF, keep pressing the touch button of L/R earbud for 5 seconds.
(Both earbuds need to be powered on separately.)



NOTE: When the earphones are turned on, the Bluetooth icon in the upper left corner of the LCD screen changes to white.

Power Off

Automatic:

Put the earbuds into the charging case, they will power off automatically.



Manual:

When the device is disconnected, press the left or right earbud for 5 seconds until it prompts "power off".



NOTE: 1. When you turn off both earphones on both sides, the Bluetooth icon on the top left of the LCD screen of the charging device will change to red.
2. If the earbuds are away from the phone or the phone's Bluetooth is turned off, earbuds automatically switch off after 5 minutes.

Bluetooth Pairing

1. Open the charging case and take the earbuds out of the case. Make sure they are "power on".
2. Select the [T21] from device list in your Bluetooth settings.
3. After connection, the Bluetooth icon in the upper left corner of the LCD screen will change to white and prompt "connected".



NOTE: When there is a pairing record, take one or two earbuds out of the charging case, and the earbuds will automatically connect to the phone.

Phone Calls Control


	Tap L/R 2 times for Answer/End Calls
	Hold L/R for 3 secs to Reject Calls

Music Control


● 	Tap L/R for Play/Pause
●● 	Tap R 2 times for Next
●● 	Tap L 2 times for Previous
●●● ANC	Tap L/R 3 times for ANC/Transparency mode
●●●● SIRI	Tap L/R 4 times to Activate Voice Assistant
	Hold R for Volume UP
	Hold L for Volume Down

Reset Earbuds

 1. Simultaneously tap both earbuds 5 times to receive the "power off" prompt.
2. Put earbuds back to charging case, and delete pairing record on the phone.
3. Repeat the pairing operation.



Multi-Funtion Button(MFB)

 


●		Tap MFB for Screen Lock/Unlock
● ●		Tap MFB 2 times for Power Off/Restart/Factory Reset
—		Hold MFB 3 secs for Restart directly

LCD Touch Screen

- 1. Bluetooth Icon
- 2. Earbud Power Display

 - 3. Charging Case Power Display
- 4. Time Display



Music Playback Control

 


Volume Control



ANC Mode Setting

- 1.Normal Mode
- 2.ANC Mode
- 3.Adaptive Mode
- 4.Transparent Mode



Equalizer

Five different equalizer settings (Normal, Rock, Bops, Classical, and Jazz)



Timer

Preset timer:
5min/10min/30min/60min



Light Level

Lower/raise the brightness of the screen



Language Switch



Screen Lock

Select your wallpaper



Find My Earphone

When the earbud is lost, select the lost earbud, and the lost earbud will make a sound.

- The earbud can only make a sound when it is still charged
- The earbuds will only make a sound when they are within the range of the Bluetooth connection



Time Setting

Set the time and date.

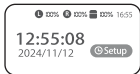


Photo Remote Control

You can remotely press the shutter button of the connected smartphone by pressing the camera icon.

- To use this function, you will be given permission on your smartphone when you first pair it.



Flash Light


Tap the button, and the screen will light up in white.



Charging

Charging Earbuds:

Place the earbuds into the charging case and close the cover to charge. The Earbud Power Display upper on the LCD screen will change to green.

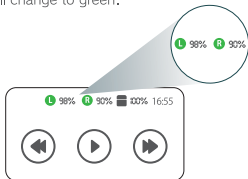

Charging the charging case:

1.Low Battery Alert


When the charging case battery level falls below 10%, the LCD screen will display a low battery warning icon.

2.Charging Connection

Plug Type-C cable into case and a USB port/power adapter.

3.Charging Progress

- (1) Warning disappears immediately.
- (2) LCD displays real-time %.

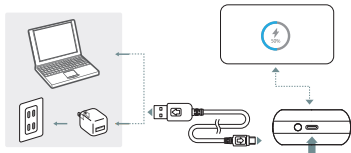

NOTE:

- * Please separate the charging cable and charging case when fully charged.
- * 5V adapter is the best choice for charging to avoid battery damage.

Specification

Model No:	T21
Version:	V5.3
Effective Wireless Range:	10 meters
Charging Case Battery Capacity:	3.7V/0.4Ah
Charging Case Recharging Time:	About 1.5 hours
Charging Port:	Type-C
Control Mode:	Touch Control
Storage Temperature:	-10~45℃

Troubleshooting Guide

Connection Issues

Q: Can't connect to PC/tablet?

- 1.Enable Bluetooth → Turn on device Bluetooth and retry pairing
- 2.Restart devices → Reboot both computer and earbuds
- 3.Update drivers → Install latest Bluetooth drivers from manufacturer's website
- 4.Test other devices → Check if issue occurs with smartphones/other tablets

Q: Intermittent disconnections?

Quick fixes:

- 1.Restart earbuds & paired device
- 2.Ensure earbuds are charged and in pairing mode (flashing blue light)
- 3.Disable nearby Bluetooth devices (Wi-Fi routers/micro-waves)
- 4.Update device software

Audio Quality Problems

Q: Sound degradation over time?

Common causes:

- 1.Low battery → Charge earbuds (audio improves above 20% battery)
- 2.Wireless interference → Move away from routers/micro

waves

3. Physical damage → Avoid moisture exposure

4. Weak Bluetooth signal → Keep paired device within 33 ft (10m)

Charging Failures

Q: Case won't charge earbuds?

1. Check case battery level

2. Clean charging contacts with dry cloth (lint/dust removal)

3. Ensure earbuds are properly seated in case

Q: Case itself won't charge?

1. Use certified USB-C cable (avoid third-party cables)

2. Try different power source (wall adapter/USB port)

Durability

Q: Water resistance limits?

1. Earbuds: Sweat/rain resistant, no swimming/showering

2. Case: Not waterproof → Keep dry

Warranty Support

1. Orders Support:

Go to Your Orders → Contact Seller → Describe issue

2. Direct support:

Visit seller storefront → Click "Ask a Question"

Safety Instructions

- Pay close attention to the surrounding traffic when using it on foot. It may cause traffic accidents.
- Reduce the volume to a minimum before use. Sudden loud noises can damage your hearing.
- To protect your ears, do not turn up the volume too high.
- Do not use this product if it falls into flammable or liquid (such as water). Continued use may cause fire, malfunction or electric shock.
- Opening the inside may cause malfunction or electric shock.
- Do not touch the inside. Also, we cannot guarantee performance if the inside has been manually modified.
- Do not charge with wet hands or touch the charging port. This may result in electric shock.
- If you feel uncomfortable while using this product, stop using it immediately.
- If you have a medical device such as a pacemaker, consult your physician before use.
- Do not allow small children to use this product.

WARNING

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to

correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE:

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

尺寸：60*70

材质：105g铜版纸

装订方式：20p骑马订