 


Video walkie-talkie

Instructions for Use



Appearance and function

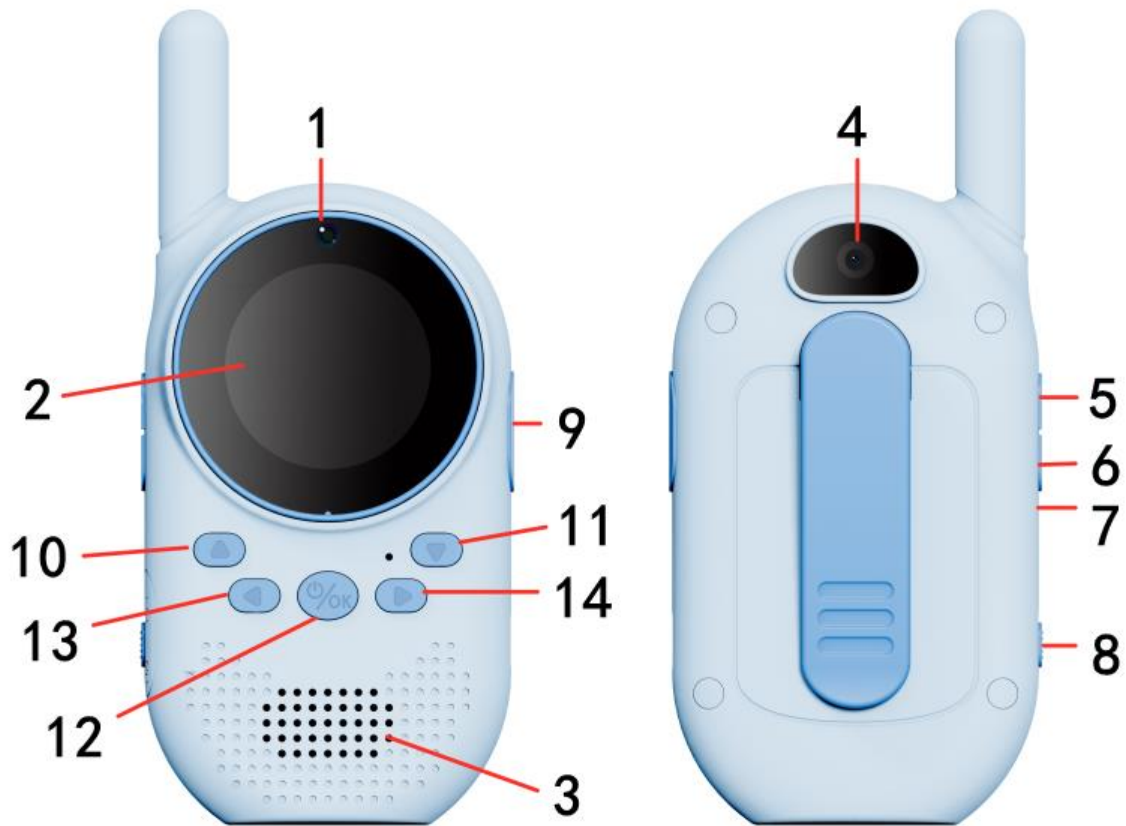

- | | |
|---|----------------------------------|
| 1. Front camera | 2. Display screen |
| 3. Horn | 4. Rear camera |
| 5. Volume + (Adjust volume +) | 6. Volume - (Adjust volume down) |
| 7. Reset hole (Reset in case of system freeze) | 8. Power switch |
| 9. Intercom button (Short press in video/intercom mode for intercom, click on the picture and short press in the picture sending interface to send the picture) | |
| 10. Up key/Switch front and rear cameras: (Video intercom/Camera interface: Short press to switch front and rear cameras) Other interfaces serve as up keys. | |

 
11. Down Key/Back key: (Video intercom interface: Short press to switch between the other party's and your own camera images). Press and hold for 3 seconds as the back key, and other interfaces as the down key.
12. Power /OK button: Press and hold for 5 seconds to turn on or off the power, and press and hold for a short time to confirm.
13. Left button/Voice change button: (Video intercom/photo interface: Short press to switch between profile pictures/filters.) For the video intercom/voice intercom interface, press and hold for 3 seconds to switch the voice-changing mode. Other interfaces are used as left buttons.
14. Right-click/Delete key: (Video intercom/Photo interface: Short press to switch between profile pictures/filters.) Press and hold the picture interface for 3 seconds to pick out and delete the interface. Press the OK button to operate. Use the other interfaces as the left button.

Power switch function

When the product leaves the factory, the power disconnection switch is in the "off" position.

As shown in the figure, pressing the button down will turn on the device, and pressing it up will turn it off.

3. Please fully charge the product before first use.

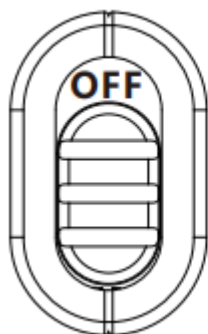


4.

The power is on.

The power is off.

Function Introduction

 After turning on the power switch, you need to press and hold for 5 seconds to power on and enter the operation interface

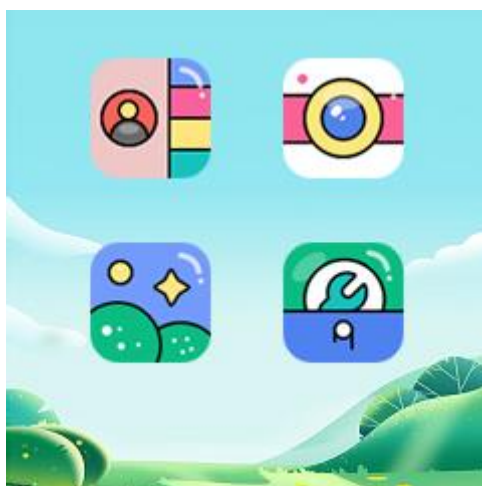

Chat interface: Press the left and right keys to select



: Video intercom: Select this interface, click OK to connect, and then enter the video intercom mode. You need to press the intercom button to speak. Local voice is transmitted through a one-way channel. Only when the speaker releases the intercom button can the other party press and hold the intercom button to send a voice message.



: Voice intercom: Select this interface, click OK to connect, and then enter the voice intercom mode. You need to press the intercom button to speak. Local voice is transmitted through a one-way channel. Only when the speaker releases the intercom button can the other party press and hold the intercom

button to send a voice message.



: Voice sending: Select this interface. Press the intercom key to speak. Release it to send voice.



: Emoji sending: Select this interface, click on the emoji and press OK to send.



: Take a photo and send: Select this interface, enter the photo mode, press OK to take a photo and then press OK to send.



: Picture sending: Select this interface, enter the album mode, press OK to select the picture, and then press the intercom button to send.

Chat record viewing: Press the up and down keys to select the desired one and then press OK to view.

Photo interface: Enter the photo interface, briefly press the left and right keys to open filters/profile pictures, briefly press the up key to switch between front and rear cameras, and press the OK key to take a photo. Press and hold the down key for 3 seconds to return.

Picture interface: Enter the picture interface. Press left or right to select pictures. Long press the right button to pop up the deletion interface. You can select the option to delete pictures and press the OK key to confirm. Press and hold the down key for 3 seconds to return.

Setting mode

Language: Font language can be selected.

Brightness: The display screen brightness can be adjusted to 1/2/3/4/5

Automatic shutdown: The automatic shutdown time can be set: off, 1 minute, 3 minutes, 5 minutes, 10 minutes

Screen saver mode: You can set the dark time of the display screen: off, 1

minute, 3 minutes, 5 minutes, 10 minutes

Sound: Adjustable volume (also supports quick volume + volume - adjustment)

2.Charging indicator light

Take the local charging cable, connect the charger, and the power indicator light "red" will light up. When fully charged, the charging indicator light will automatically go out.

2. Charger compatibility specification :5V/1A.

3. Product pairing and connection methods

This product adopts wifi 2.4G transmission and connection mode. Each package contains two pre-paired walkie-talkies and cannot be connected to other devices for use. If multiple sets of products are purchased, they can only be connected one-to-one in the set and cannot be used simultaneously. When clicking to connect for video/voice intercom, the other machine needs to click OK to confirm the connection or hold down the key for a long time to disconnect.

Product specification

Display screen	1.28-inch
Function	Video intercom, voice intercom, taking photos, sending pictures/voice/emojis, voice change

"Lens"	Dual lenses
Battery capacity	3.7V1000 mah
"Language"	Many countries
USB interface	Type-C
Charging time	Three to four hours
Working temperature	-20°C~60°C
Storage temperature	-30°C~70°C
Charging voltage	5V/1A
Product size	57*27*130MM

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.