


Specifications

Product Size: 112 x 58 x 25mm
Product Weight: 44g
Battery Type: 2 x AAA (not included)
DPI: 800-1200-1600
Receiver: Type-C
Compatibility: Works with Most Mac/Windows/Android/Linux devices w/ USB-C Port

Package Contents

-Wireless Mouse
-2.4G Type-C Receiver
-User's Manual with Warranty Information

A Quick Look

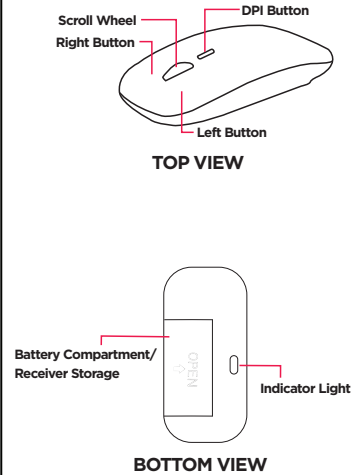

Inserting Batteries

To operate your mouse successfully, you must insert 2 AAA batteries (not included). To do so, follow the steps below.

1. Open the battery compartment located on the bottom of the mouse.
2. Insert 2 AAA batteries inside the battery compartment, making sure they are inserted with the correct polarity (+,-) as shown on the battery compartment.
3. Once your batteries are properly inserted, close the battery compartment.

For best results, always use new alkaline batteries.

BATTERY WARNING:

- Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
 - Batteries are not to be inserted with the wrong polarity.
 - Exhausted batteries are to be removed.
 - The supply terminals are not to be short-circuited.
- Please recycle or dispose of the battery properly. Contact local recycling facilities and/or the manufacturer of your battery for further information

Mouse Setup

To connect your mouse to your computer, follow the steps below:

1. Remove the battery compartment cover and take the USB Type-C Receiver stored inside of the battery compartment. Then close the cover.
2. Insert the receiver into one of your computer's USB-C ports.
3. Make sure that your computer is powered on.
4. Your computer should automatically recognize your mouse and load suitable mouse drivers within 3-5 seconds. If the mouse is able to move the cursor normally, then the connection is successful.

NOTE: The DPI Button on the mouse controls the mouse's sensitivity. Press the DPI Button repeatedly to toggle between sensitivities of 800, 1200 and 1600 DPI (Dots Per Inch).

Important Safety Precautions

When using your mouse, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR MOUSE.
2. Never expose your mouse to high temperatures, extreme cold, high humidity, moisture, or water.
3. To avoid the risk of electric shock, never attempt to open your mouse or repair it without the assistance of certified professionals.
4. Your mouse is not to be used by children or the infirm without suitable adult supervision.
5. Do not use your mouse at temperatures under 32°F (0°C) or over 104°F (40°C).
6. Do not drop your mouse, throw it, or subject it to strong impacts or physical trauma.
7. Contact the manufacturer for support if you detect any abnormalities when using your mouse.
8. Keep this manual and all relevant information for future reference.
9. Clean your mouse using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your mouse, and never submerge your mouse in water.
10. Please recycle or dispose of your mouse properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your mouse for further information.



Risk of Fire and Burns.

Do Not Open, Crush, Heat Above 104°F (40°C) or Incinerate.
Always Follow All Manufacturer's Instructions When Using.

One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

FCC Statement

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio technician for help.

FCC Radiation Exposure Statement :

The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment. The device shall be operated and installed without restriction.

Troubleshooting

If your Mouse is not working properly, please try the following:

- Make sure that your mouse has batteries inserted and your computer is powered on.
- Make sure the distance between the two devices is less than 10m.
- Make sure that your computer has suitable drivers for recognizing a USB mouse.
- Make sure the batteries in your mouse have been inserted with the correct polarity (+,-) as displayed in the battery compartment.