

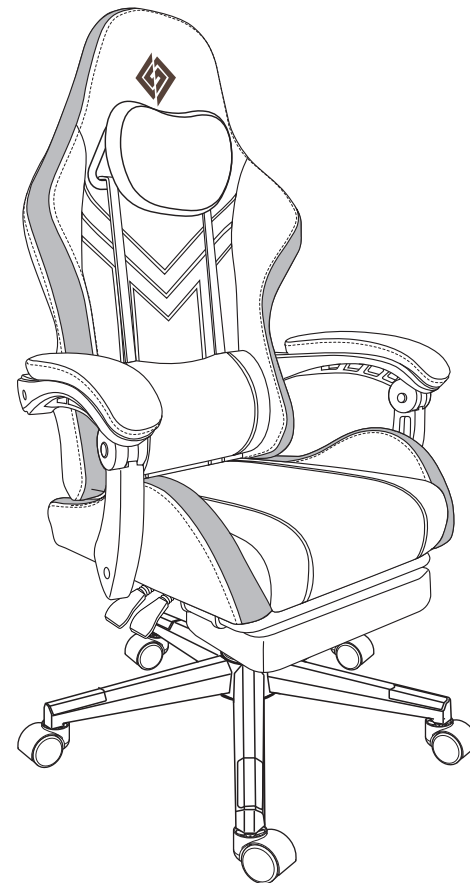
⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Cell Battery type: CR2025 ; Nominal battery voltage: 3 V
- Non-rechargeable batteries are not to be recharged
- Do not force discharge, recharge disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.












MADE IN CHINA




Gaming Chair

User Manual

          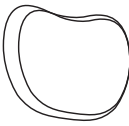PACKING LIST

A*1 	B*1 	D*1 	E*1 	F*1 
G*5 	R*1 	Y*2 	T*1 	C-R*1 
C-L*1 	H*4  6*20mm	P*3  6*40mm	J*4  8*40mm	X*4  6*25mm
S*2  6*30mm	W*1  5x10mm	L*1 	K*1 	M*1 
N*1 	Q*4 	Z*1 	V*1 	

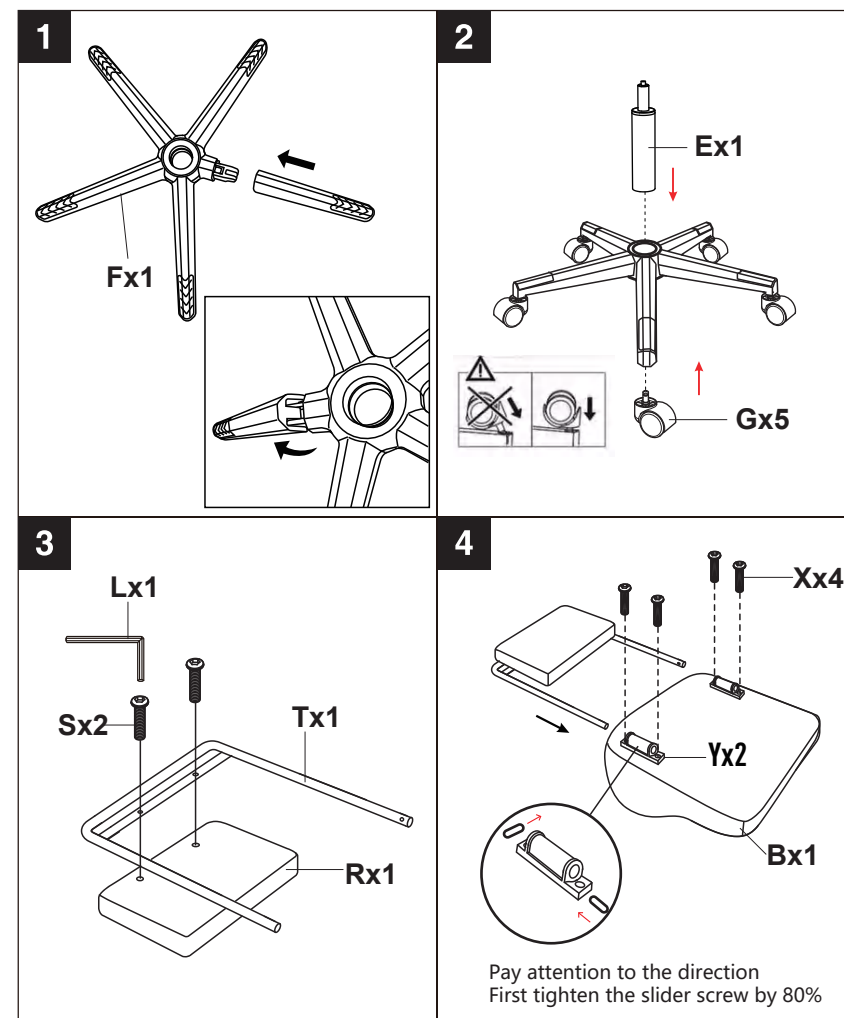INSTALLATION



Turn the direction of the wide hole of the slider outward, pre install 80% of the slider screw, insert the metal rod into the slider, pull and pull several times to make the metal rod smooth, and then tighten all the screws

INSTALLATION

5

Wx1 Hx4 Dx1

After the metal rod is smoothly pulled, tighten the screw on the slider to 100%, and then install screw W

6

7

Ax1 Px3 Kx1

8

Vx1

Turn the direction of the wide hole of the slider outward, pre install 80% of the slider screw, insert the metal rod into the slider, pull and pull several times to make the metal rod smooth, and then tighten all the screws

INSTALLATION

9

C-Rx1 C-Lx1 Qx4 Jx4

10

Mx1 Nx1

11

Sit to lower, stand to raise, while operating the air rod.

LED light jumping function in music mode



1. When turned on and in pickup or music mode, the LED light will start jumping up and down according to the sound level.

2. The remote control can adjust the sensitivity of LED light jumping, with a total of 10 settings. The default sensitivity for the first use is 7 settings.

3. The left button on the remote control can lower the sensitivity by a minimum of 1 level, while the right button can increase the sensitivity by a maximum of 10 levels. Adjust the sensitivity according to the tone of the song.

4. The higher the sensitivity level, the closer the LED light will be to the top of the seat back.

5. To prevent insufficient power supply from affecting the experience, it is recommended to connect the USB cable to a 5V2A power adapter.

FUNCTIONS OF EACH BUTTON

	ON&OFF	
	Speed adjustment	
	358 fliker patterns to change	
	1. Brightness adjustment 2. Sensitivity adjustment of LED light jumping in music mode	
	LOCK Match: Press and hold "LOCK" for 5 seconds until green strip flash 3 times. Cancel the match: Press and hold "LOCK" for 5 seconds until white strip flash 3 times.	
	Auto mode Press to play automatically 358 modes. Press 5 times to enter color RGB mode Single cycle play Under AUTO mode, press "SETTING" once, then press "LOCK" once to cyclic the current pattern.	
	SETTING Adjust the LED quantity: Press and hold for 5 seconds until white strip flash to enter the setup menu. Press MODE +/- to adjust the quantity of the LED light. Press "SETTING" to finish the setting.	
	Static Monochrome Mode White, Red, Green, Purple	
	1. LED light jumping mode in music mode 2. One button has 4 light jumping modes	

Long press the setting key to enter the setting mode

MODE+/- adjust the lighting part (left/right side of backrest/entire seat cushion)

SPEED+/- to adjust the number of lamp beads (cannot be adjusted when the light strips are fully on, only when part of the light strips are on, the number of lamp beads can be increased or decreased)

Product specification

Product Name:Gaming Chair

Product Weight:36lb

Weight Capacity:450lb

Effective Distance:32ft

Product Dimensions:23.62x23.62x52.28in

The Name Of The Bluetooth : HuaBox

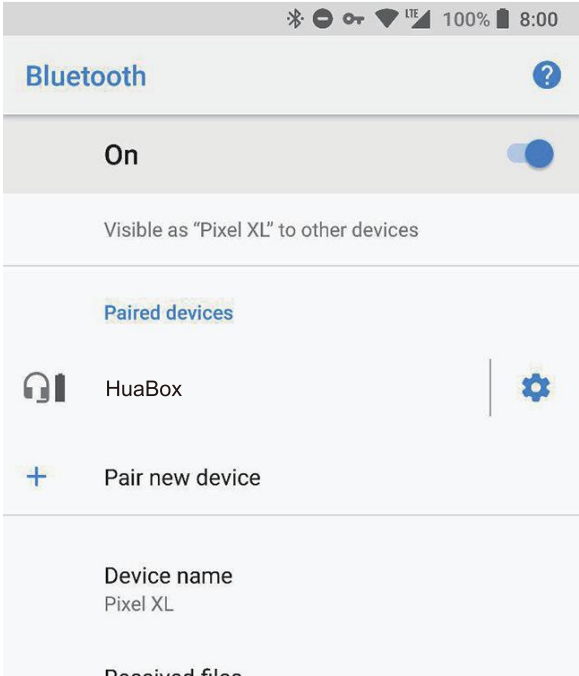
Working power Supply: 5V/2A

charging pad as the main power supply

ATTENTION

The four screws marked as "J" in the screw pack are an additional set of special anti loosening screws that can prevent the armrest from loosening, but the screws are not easy to unscrew after installation.

BLUETOOTH CONNECTION (bluetooth name HuaBox)




USAGES

Testing	Continuously press "AUTO" 5 times to enter the RGB automatic switching mode,which can test the your LED.
Matching	Press "LOCK" for 5 seconds until LED flash in green quickly to match the remote control with the receiving controller. Press "LOCK" for 5 seconds untill LED flash in white slowly to un-match.
Reorder RGB	Different kinds of LED,the RGB keys may don't perfectly match to your LED, reorder them if needed. Continuously press "SETTING" 5 times until LED flash in white once and then turn into all white, press the "R" until LED is red, press "G" until LED is green, press "B" untill LED is blue, finally press "SETTING" once to finish your setting.
Adjust the LED quantity	Press "SETTING" for 5 seconds until LED flash in white to enter the setup menu. Press "MODE +/-" or "SPPED+/-" to add/reduce the quantity of the LED pixels.Finally press "SETTING" once to finish the setting.

TROUBLESHOOTING

Fault conditions	Possible causes	Exclusion method
The product is shaking and unstable	1. Wrong screw installation 2. The screw is broken 3. Check that the screws are not tightened in place	1. According to the instruction manual, install the correct screw in the correct position 2. To replace, use the included spare screws 3. Tighten the loose screws
The light strip is off	1. Not plugged in 2. The lighting pattern is not saved correctly	1. Confirm that the product is powered on normally 2. Please read the instructions of the remote control carefully (page 6), and follow the operation
Audio doesn't work	1. Bluetooth connection failed 2. Bluetooth connection error	1. Turn on your phone's bluetooth to connect 2. Turn off the phone's Bluetooth and reconnect (Bluetooth name: HuaBox)
Remote control not working	1. The remote control gasket is not pulled out and cannot work 2. The battery is in poor contact or the battery is installed backwards 3. The battery is dead	1. Check whether the remote control gasket is pulled out 2. Check whether the battery is installed incorrectly and adjust 3. Replace the new battery to make the remote control work normally

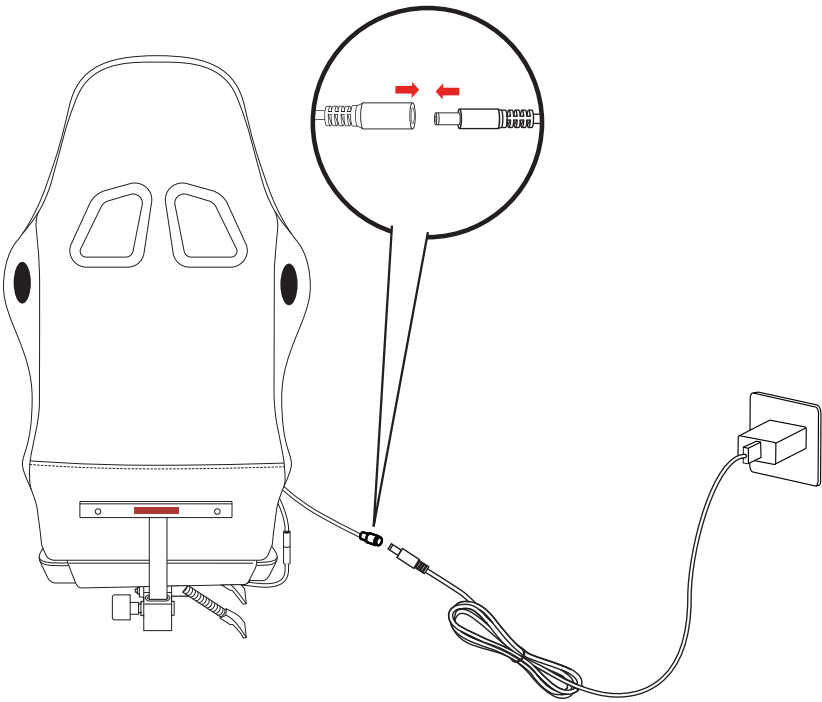BLUETOOTH CONNECTION (bluetooth name HuaBox)



FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.