

FCC statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Brand: HOFFREE

Shenzhen Xinxiang Trading Co., Ltd

Address: 503, Building 9, Xiangnan 1st District, Minzhi Street, Longhua District, Shenzhen city, Guangdong, CN

Email: service@hoffree.com

MADE IN CHINA











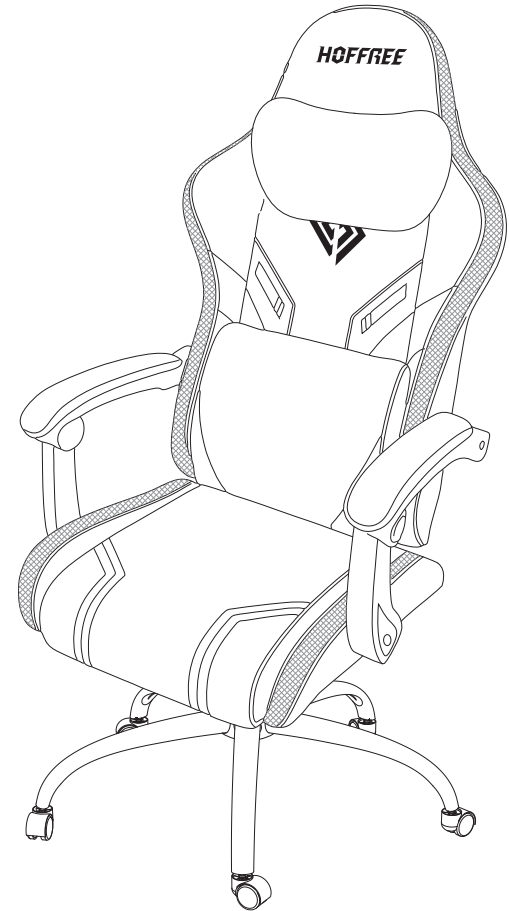


Gaming Chair


User Manual

HOGC-MS2

           PACKING LIST


A*1 	B*1 	D*1 	E*1 	F1*1  F2*5
G*5 	R*1 	Y*2 	T*1 	C-R*1 
C-L*1 	H*4  6*20mm	P*3  6*40mm	J*4  8*40mm	X*4  6*25mm
S*2  6*30mm	W*1  5x10mm	L*1 	K*1 	M*1 
N*1 	Q*4 	U*1 	V*1 	I*10  6x14mm

 INSTALLATION

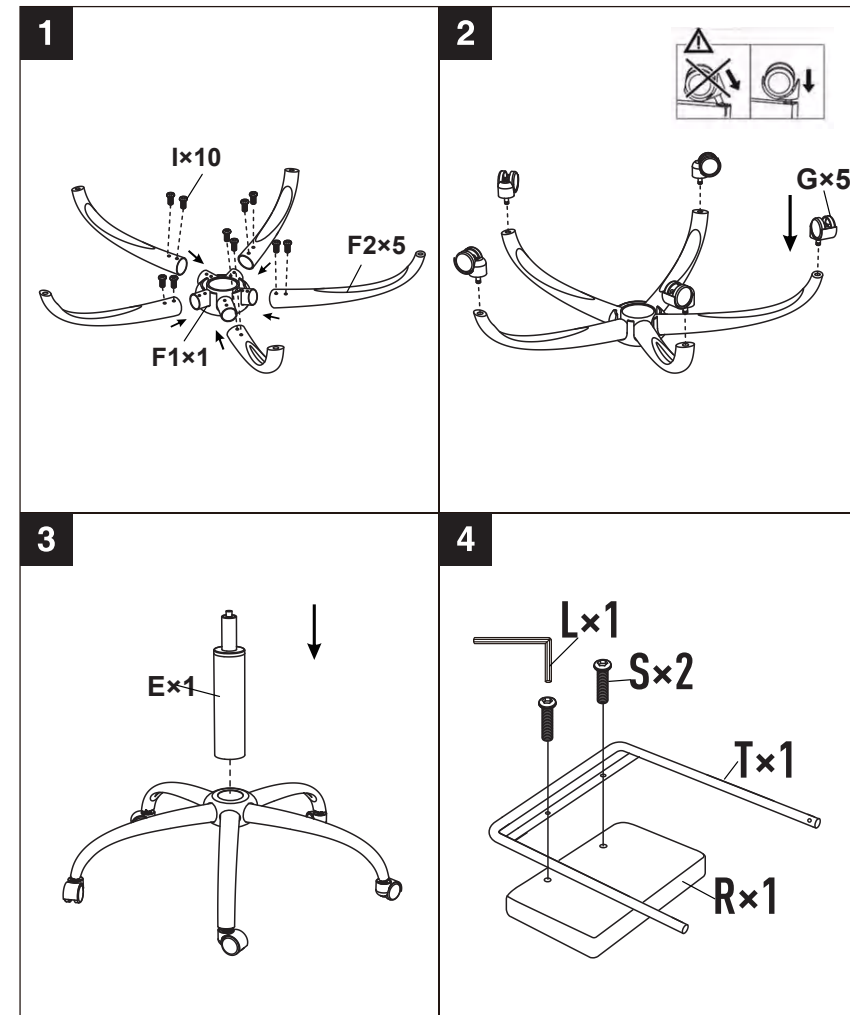


INSTALLATION

 
5

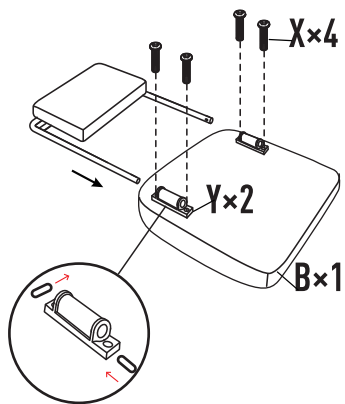


6

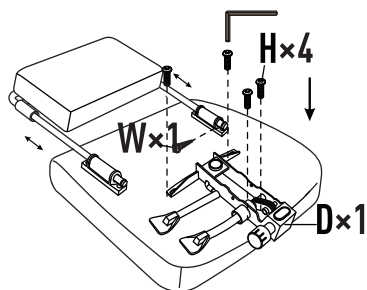 

7

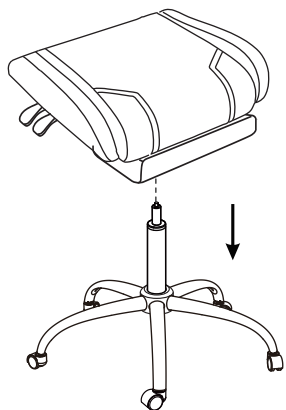 


8

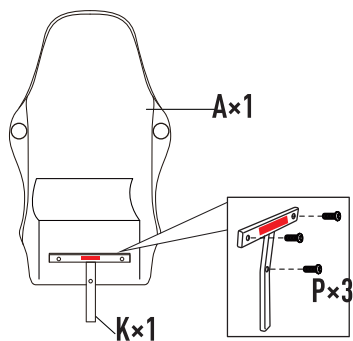 


INSTALLATION

 
9

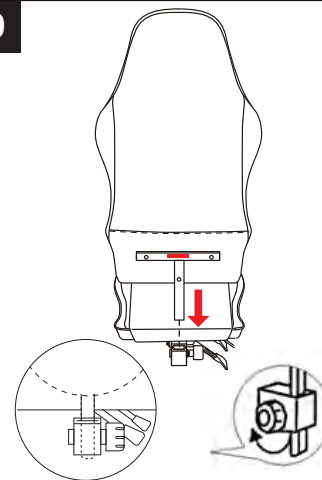


10

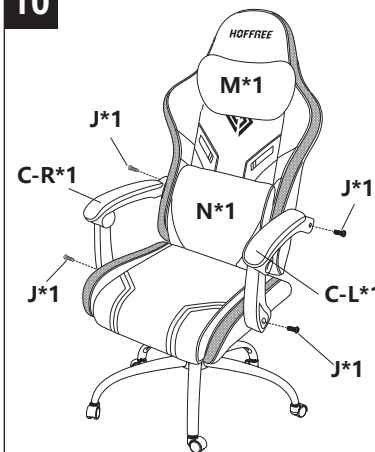 


11

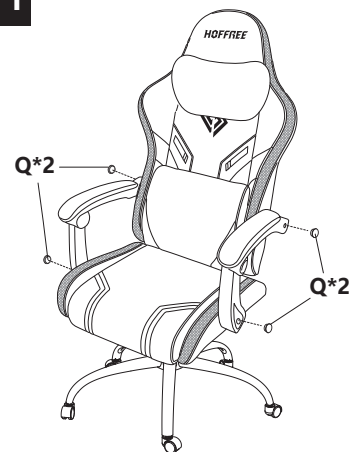 

12

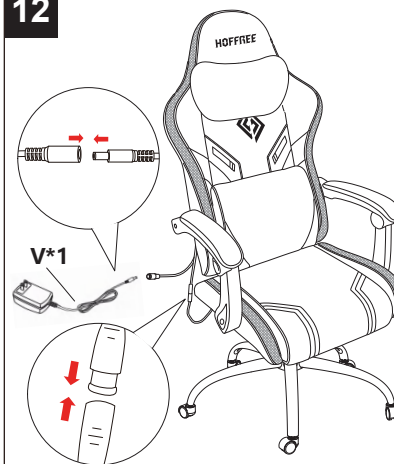 


Magnetic headrest - slides up and down

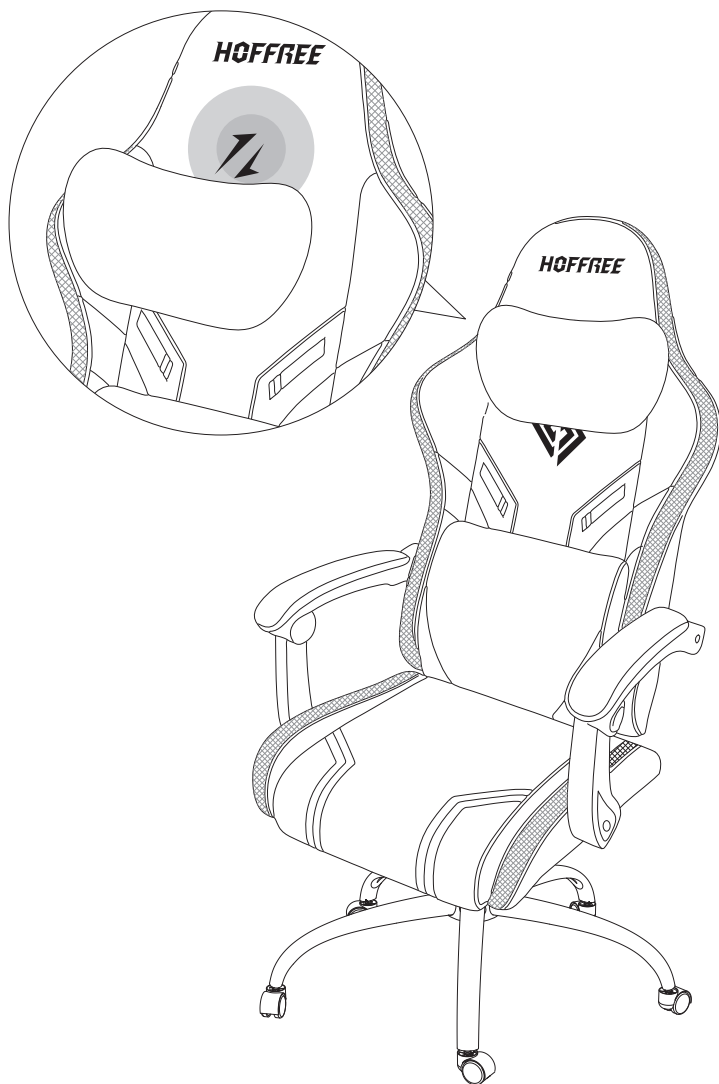 

BLUETOOTH CONNECTION

 (bluetooth name Hrty21)

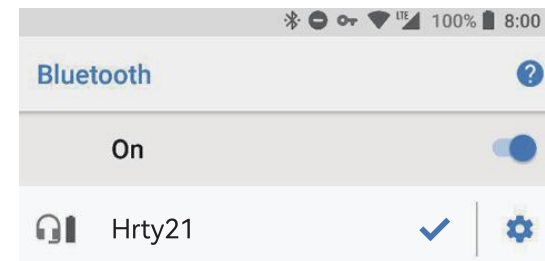


LED light jumping function in music mode



1. When turned on and in pickup or music mode, the LED light will start jumping up and down according to the sound level.
2. The remote control can adjust the sensitivity of LED light jumping, with a total of 10 settings. The default sensitivity for the first use is 7 settings.
3. The higher the sensitivity level, the closer the LED light will be to the top of the seat back.

 FUNCTIONS OF EACH BUTTON

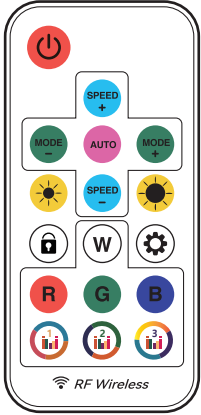
	ON&OFF	
 	Speed adjustment	
 	358 fliker patterns to change	
 	1. Brightness adjustment 2. Sensitivity adjustment of LED light jumping in music mode	
	LOCK Match: Press and hold "LOCK" for 5 seconds until green strip flash 3 times. Cancel the match: Press and hold "LOCK" for 5 seconds until white strip flash 3 times.	
	Auto mode Press to play automatically 358 modes. Press 5 times to enter color RGB mode Single cycle play Under AUTO mode, press "SETTING" once, then press "LOCK" once to cycle the current pattern.	
	SETTING Adjust the LED quantity: Press and hold for 5 seconds until white strip flash to enter the setup menu. Press MODE +/- to adjust the quantity of the LED light. Press "SETTING" to finish the setting.	
   	Static Monochrome Mode White, Red, Green, Blue	
  	1. LED light jumping mode in music mode 2. One button has 4 light jumping modes	
Long press the setting key to enter the setting mode MODE+/- adjust the lighting part (left/right side of backrest/entire seat cushion) SPEED+/- to adjust the number of lamp beads (cannot be adjusted when the light strips are fully on, only when part of the light strips are on, the number of lamp beads can be increased or decreased)		

Control LED lights with a mobile app


1. Scan the QR code to download the app



 2. Apple iPhone Click here to download



 3. Android iPhone Click here to download



4. If you cannot scan the QR code to download or are concerned about file risks, you can open the Google Play Store (for Android) or the Apple App Store (for iOS) and search for "Raingel" to download the app.

 
 
 
 


5. To control LED lights using a mobile app, you need to first turn on your phone's Bluetooth.


6. For Android phones with versions below 12, the app requires location authorization and Bluetooth search to connect (location information is not used for other purposes). If you are concerned about location risks, you can upgrade your Android version to 13 or higher.

LED light name: X313(BLE)_B1

To control the LED light strip using the mobile app, you must first enable Bluetooth on your phone.

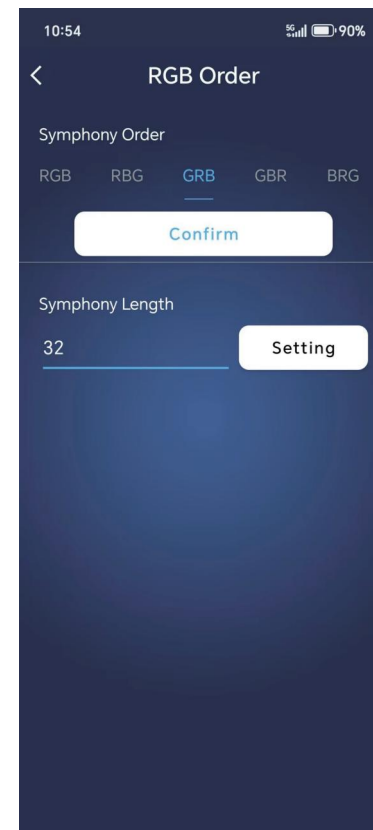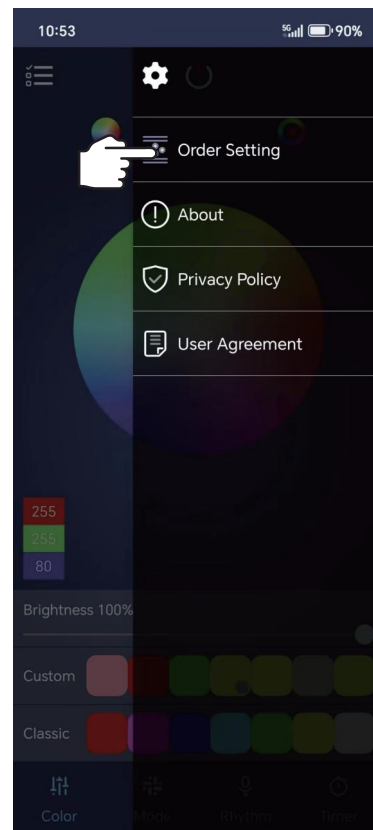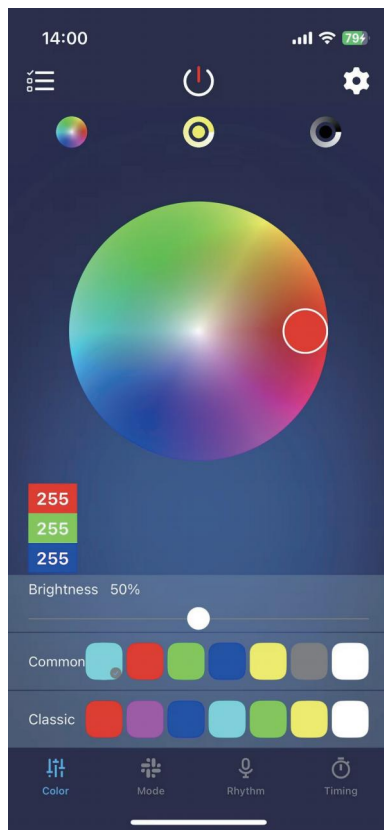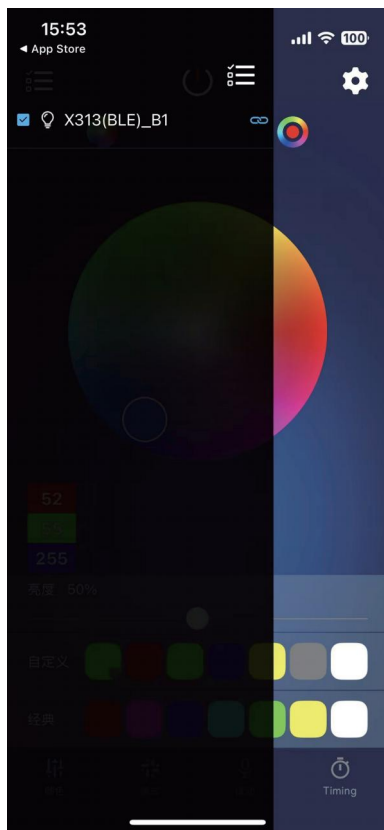

 First Symphony Order choose GRB , Click Confirm.
Then Symphony Length enter 32, Click Setting.

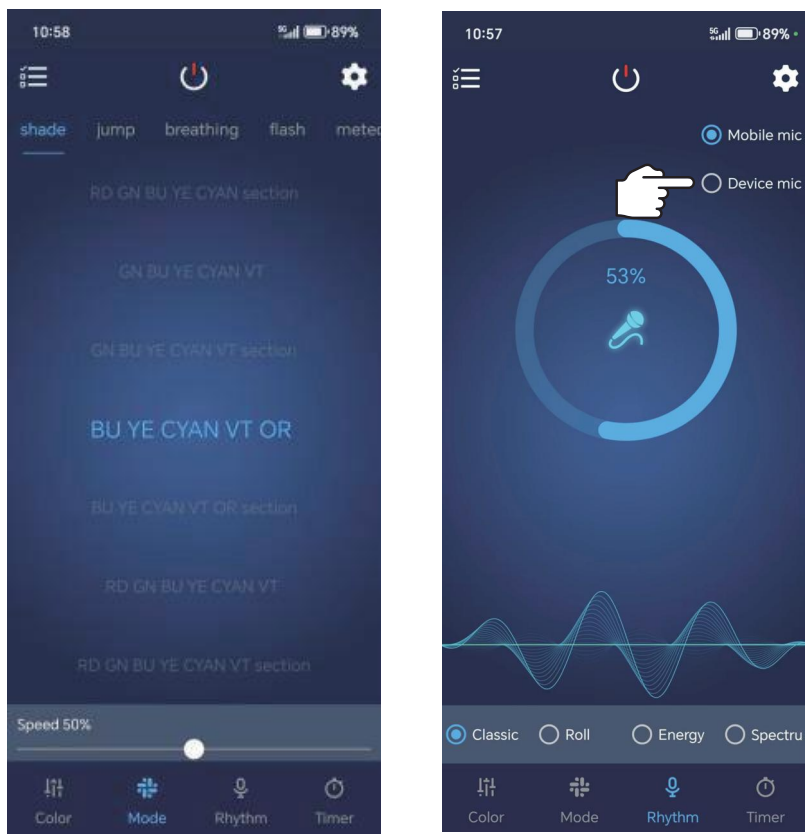

We recommend using the Device mic(because the chair has built-in speakers and LED lights for a better experience),and set the sensitivity to maximum.

USAGES

Power supply	To prevent insufficient power supply from affecting the experience. Please use the 12V 5A power adapter we provided.
Testing	Continuously press "AUTO" 5 times to enter the RGB automatic switching mode,which can test the your LED.
Matching	Press "LOCK" for 5 seconds until LED flash in green quickly to match the remote control with the receiving controller. Press "LOCK" for 5 seconds untill LED flash in white slowly to un-match.
Reorder RGB	Different kinds of LED,the RGB keys may don't perfectly match to your LED, reorder them if needed. Continuously press "SETTING" 5 times until LED flash in white once and then turn into all white, press the "R" until LED is red, press "G" until LED is green, press "B" untill LED is blue, finally press "SETTING" once to finish your setting.
Adjust the LED quantity	Press "SETTING" for 5 seconds until LED flash in white to enter the setup menu. Press "MODE +/-" or "SPPED+/-" to add/reduce the quantity of the LED pixels.Finally press "SETTING" once to finish the setting.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Cell Battery type: CR2025 ; Nominal battery voltage: 3 V
- Non-rechargeable batteries are not to be recharged
- Do not force discharge, recharge disassemble, heat above 60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

TROUBLESHOOTING

Fault conditions	Possible causes	Exclusion method
The product is shaking and unstable	1. Wrong screw installation 2. The screw is broken 3. Check that the screws are not tightened in place	1. According to the instruction manual, install the correct screw in the correct position 2. To replace, use the included spare screws 3. Tighten the loose screws
The light strip is off	1. Not plugged in 2. The lighting pattern is not saved correctly	1. Confirm that the product is powered on normally 2. Please read the instructions of the remote control carefully 3. If the remote control doesn't work, please use the mobile app to control it.
Audio doesn't work	The gaming chair's Bluetooth may be connected to by other electronic devices or other people's phones. Please follow these steps	1. Check if Bluetooth is turned on on any phones, computers, or other devices in the room. Please turn it off first. 2. Reconnect the gaming chair to the power supply. Once you hear the Bluetooth beep, turn on your phone's Bluetooth to connect. 3. If the problem persists, please try using a different phone.
Remote control not working	1. The remote control gasket is not pulled out and cannot work 2. The battery is in poor contact or the battery is installed backwards 3. The battery is dead	1. Check whether the remote control gasket is pulled out 2. Check whether the battery is installed incorrectly and adjust 3. Replace the new battery to make the remote control work normally, Or use a mobile app to control the LED lights.
APP remote control lag and malfunction	The operation was too fast; the chair hadn't even reacted yet.	1. Click the color module on the left side of the app to change the color. 2. Go back to your previous step and check if it works correctly.

FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.