

185 mm

 
43 mm

43 mm

43 mm

主动式电容笔 Active Stylus

产品概述 Product Overview

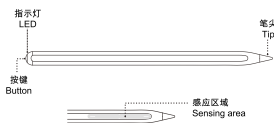


使用说明 Operation Instruction

1. 开机
按压尾部按钮2秒, 指示灯亮蓝灯开始使用
1. Power on
Press the tail button for 2s, the indicator light will turn blue and start using
2. 关机
手动关机模式: 按压尾部按钮2秒, 立即关机
自动关机模式: 静放五分钟, 自动关机
2. Power off
Manual shutdown mode: Press the tail button for 2s to immediately shut down
Automatic mode: Leave the stylus without using for 5 minutes, power off automatically
3. 充电
无线充电, 直接吸附在iPad磁吸位置上充电
3. Charging
Wireless charging, directly attached to the magnetic suction position of iPad for charging



4. 蓝牙连接
打开设备蓝牙, 搜索名为OCM-OP136的电容笔, 点连接
4. Bluetooth connectivity
Turn on the device's Bluetooth and search for a paired capacitive pen named OCM-OP136, point connection

 5. 360°感应区域
此区域内笔身一圈360°双击触发快捷功能并震动提醒
(在Procreate/备忘录App下, 双击快捷键为撤销上一笔)
5.360°Sensing area
Within this area, the pen body rotates 360° and double clicking triggers the shortcut key function and vibrates to remind



6. 触控翻页
上一笔: 单击触控区域(靠近笔尖侧);
下一笔: 单击触控区域(靠近笔尾侧);
6. Touch page flipping
Previous page: Click on the touch area (near the pen tip);
Next page: Click on the touch area (near the end of the pen).
支持APP: WPS PPT, MicroSoftPPT, Keynote PPT, Support apps: WPS PPT, MicroSoftPPT, Keynote PPT.



 
- 向上翻页: 滑动触控区域(靠近笔尖侧);
向下翻页: 滑动触控区域(靠近笔尾侧);
Page up: Slide the touch area (near the pen tip);
Page down: Slide the touch area (near the end of the pen).

支持APP(Supporting apps):
办公Office: WPS Word/PDF, MicroSoftWord/PDF.
电子书: 微信读书, 七猫小说, 番茄小说, 起点读书,
E-books: WeChatReading, Seven Cat Novels, Tomato Novels, Qidian Reading.
浏览器(Browser): safari, edge, chrome.



7. 笔尖更换
抓住笔尖并轻轻转动, 将笔尖取下后, 用同样的方式装入新的笔尖

7. Tip Replacement
Grasp the pen tip and gently rotate it. After removing the pen tip, use the same method to insert a new one



产品参数

产品名称	主动式手势电容笔
型号	OP136
输入	5V/1A
电池容量	140mAh
额定电压	3.85V
工作温度	0°C ~ +55°C
充电时间	90 ± 5分钟
工作时间	> 17小时
适用型号	iPad Pro 12.9" (第三代以及后续机型) iPad Pro 11" (全系列) iPad Air (第四代以及后续机型) iPad Mini (第五代以及后续机型) iPad (第六代以及后续机型) 备注: iOS需12.2或更新版本
包装清单	电容笔x1 说明书x1

无线充电

平板型号:	型号号码:
Pad mini 6	A2567/A2568/A2569
Pad Air 4	A2316/A2324/A2325/A2072
Pad Air 5	A2588/A2589/A2591
Pad Pro	A1980/A2013/A1934/A1979
Pad Pro 3	A1876/A2014/A1895/A1983
Pad Pro 2	A2228/A2068/A2230/A2231
Pad Pro 4	A2229/A2069/A2232/A2233
Pad Pro 3	A2377/A2459/A2301/A2460
Pad Pro 5	A2378/A2461/A2379/A2462
Pad Pro 4	A2759/A2435/A2761/A2762
Pad Pro 6	A2436/A2764/A2437/A2766

指示灯说明

蓝牙配对	蓝灯闪烁
工作中	不亮灯
充电中	红色灯常亮
充满电	红色灯熄灭
电量 < 5%	红色灯闪烁
电量耗尽后再次开机	红色闪烁3S后熄灭

以上参数均来源于公司实验室, 实际参数会因产品或者其它因素而有差异, 图片仅供参考, 请以实物为准

Product Parameter

Product Name	Gesture function Active Stylus for iPad
Model Number	OP136
Input	5V/1A
Battery Capacity	140mAh
Nominal Voltage	3.85V
Working Temperature	0°C ~ +55°C
Charging Time	90 ± 5 minutes
Working Time	> 17 Hours
Compatible With	iPad Pro 12.9" (Gen3 and after) iPad Pro 11" (All) iPad Air (Gen 4 and after) iPad Mini (Gen 5 and after) iPad (Gen 6 and after) Notes: iOS need to be Rev 12.2 or higher version
Packing List	Stylus x 1pcs User Manual x1pcs

Wireless charge

iPad model:	Model number:
Pad mini 6	A2567/A2568/A2569
Pad Air 4	A2316/A2324/A2325/A2072
Pad Air 5	A2588/A2589/A2591
Pad Pro	A1980/A2013/A1934/A1979
Pad Pro 3	A1876/A2014/A1895/A1983
Pad Pro 2	A2228/A2068/A2230/A2231
Pad Pro 4	A2229/A2069/A2232/A2233
Pad Pro 3	A2377/A2459/A2301/A2460
Pad Pro 5	A2378/A2461/A2379/A2462
Pad Pro 4	A2759/A2435/A2761/A2762
Pad Pro 6	A2436/A2764/A2437/A2766

About Indicator

Bluetooth pairing	Blue light flashing
Working	No lights on
Charging	Red light always on
Fully charged	Red light off
Battery capacity<5%	Red light flashing
Power on again after running out of battery	Red flashes for 3S before turning off

All the above data and information comes from lab.They might vary with enviroment or other factors,Photos only for reference.

注意事项

- 切勿在屏幕以外的其他表面使用笔，以免笔尖过度磨损导致损坏屏幕。
- 使用时请保持笔尖干净，因为灰尘或微粒可能会影响触控效果。
- 使用过程中笔尖会逐渐磨损，请及时更换替换笔尖以免损坏屏幕。
- 请将笔放置在儿童或宠物接触不到的地方，避免儿童或宠物误吞或导致其他伤害。
- 笔内包含敏感电子元件（含电池），使用时请小心，若不慎跌落、焚烧、弯曲、破坏性挤压或接触到液体可能会对其造成损坏或导致人身伤害。切勿使用已破损的笔。
- 请勿使用任何溶剂或者液体清洁产品，以免清洁时溶剂或液体流入产品内部导致产品受潮或损坏内部元件。
- 部分屏幕贴膜可能会影响书写体验。

电池警告

- 请勿尝试自行更换电池，因您可能会损坏电池，或者由于不正当的操作导致过热或造成人身伤害。
- 充电时，请勿用身体任何部位压住笔，或者将笔放在枕头/被子下，避免皮肤与笔长时间接触，以免由于笔过热引起身体不适或受伤。
- 禁止拆解、撞击、挤压或投入火中。若出现严重鼓胀，请勿继续使用。请勿置于高温环境中。
- 如果电池更换不当会有爆炸风险，只能用同样类型或等效类型的电池更换。
- 电池（电池包或组合电池）不得暴露在诸如日照、火烤或类似过热环境中。
- 本产品内含锂电池，请与家庭垃圾分类处理。

产品中有害物质的名称及含量

为满足中国电子电气产品有害物质限制相关的法律法规和其他要求，对本产品有害物质，按部件分类，声明如下。

部件名称	有害物 质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
金属件	○	○	○	○	○	○
其他	○	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。某些型号的产品可能不包含表中的部分部件。

○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

✕ 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。标记“X”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。

5 在中华人民共和国境内销售的电子信息产品必须标识此标志。圆圈内的数字表示正常使用状态下产品的环保使用期限。

FCC声明

B类产品：

本设备经测试，符合FCC规则第15部分中关于B类数字设备的限制规定。这些限制旨在为住宅环境中的安装提供合理防护，防止有害干扰。本设备使用会产生并可能辐射射频能量，如果未按说明书要求进行安装和使用，可能会对无线电通信造成有害干扰。但无法保证在特定安装条件下不会发生干扰。若本设备确实对无线电或电视接收造成有害干扰（可通过关闭和开启设备进行判定），用户可尝试采取以下一种或多种措施消除干扰：

- 调整或重新摆放接收天线的位置
 - 增大设备与接收器之间的距离
 - 将设备接入与接收器不同电路的电源插座
 - 咨询经销商或寻求有经验的无线电电视技术人员的帮助
- 本设备符合FCC规则第15部分，操作需要满足以下两个条件：
- (1)本设备不会造成有害干扰(2)本设备必须接受接收到的任何干扰，包括可能导致无法正常操作的干扰。警告：未经负责方明确批准的更改或修改可能会使用户无权操作设备。射频警告声明：该装置已经过评估，可满足一般射频暴露要求。本装置可在便携式暴露条件下使用，不受任何限制。

Attention

- Never use pen for writing on the other surface than tablet touch screen, to protect the tip, which might potentially damage touch screen
- Keep stylus tip clean when you use it, because dust can affect the touch effect.
- The pen tip will wear away in the process of use. Please change the pen tip in time to avoid damaging the screen.
- Place the pen in a place where children or pets could not reach it.
- The pen contains sensitive electronic elements (including batteries). Please be careful when using them. If you accidentally drop, overheat, be squeezed or touched with liquid, you may cause damage to the body. Do not use damaged pen.
- Do not let the solvent or liquid flow into the product, which might cause product damage.
- Touch screen protective film may affect the writing experience.

Battery warning

- Do not try to replace the battery by yourself, because you may damage the battery due to improper operation resulting in overheating or causing injury to the cellar.
- When charging, do not press stylus with any part of the body, or place the pen under the pillow / quilt, which may cause injury or product damage due to overheating of the pen.
- It is forbidden to fold, squeeze or put the pen into the fire. Please do not put the pen in high temperature.
- If the battery is not properly replaced, it will risk the explosion. It can only be replaced by the same type or equivalent type.
- Batteries (battery packs or combination batteries) should not be exposed to sunlight or fire.
- This product contains battery. Please separate it from the garbage.

Declaration of hazardous substances in products

In order to meet regulation & law requirements in China for hazardous substances control, we declare the substances as shown in the table:

Parts	Hazardous Substances					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
Metal	○	○	○	○	○	○
Others	○	○	○	○	○	○

This table is filled according to the regulations of SJ/T 11364 in China. Some model may not contain the parts in the table.

0 indicates that the substance meets the requirement of GB/T 26572.

X means the substance exceeds the requirement of GB/T 26572, because this hazardous substances can't be replaced due to limited global technology.

All the electronic products sold in China must identify the sign. The number in the circle indicates the duration of the product is environmentally friendly for usage.

FCC Statement
CLASS B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

执行标准：

Executive standard
GB 4943.1-2011 ; GB 31241-2014



保 修 卡
Warranty card

客户姓名:
Customer name _____

联系电话:
Contact telephone _____

产品名称:
Product name _____

购买日期:
purchase date _____

地 址:
Address _____

备 注:
Remarks _____

深圳市智诚立创技术有限公司
Shenzhen OCM Technology Co., Ltd
制造商：深圳市智诚立创技术有限公司
Manufacturer: Shenzhen OCM Technology Co., Ltd
地 址：深圳市宝安区西乡街道广深路汇智研发中心A座13层01号
Address: No.01,13F, Tower A, Huizhi R&D Center,Guangshen Road, Xixiang Street, Baoan, Shenzhen, China
Web : http://www.ocm-tech.com/
Email : service@ocm-tech.com

深圳市智诚立创技术有限公司版权所有并保留一切权利
All Copyright owned by Shenzhen OCM Technology Co., Ltd.

中国制造
Made in China