

Dashboard Camera

Enjoy the World of Digital Ultra HD
Dash Cam



User Manual

Contents

Important Pre-Usage Instructions.....	01
Power-On Setup.....	02
Button Function.....	03
Operation Instructions.....	04
Screen Interface Function Description.....	05
Menu Settings.....	06
Power On(Start Recording).....	11
Power Off(Stop Recording).....	11
Image Preview and Video palyback.....	12
Install the Dash Cam.....	12
Insrall the Rear Camera and Power Cable.....	15
Wi-Fi Function Usage Guide.....	16


The most important tips before use

Please read and understand the warnings and safety instructions before operating

a. Insert the SD card

- The SD card is inserted into the dashcam.

SD cards can only be inserted from one direction. Before inserting, make sure that the orientation is correct as show.

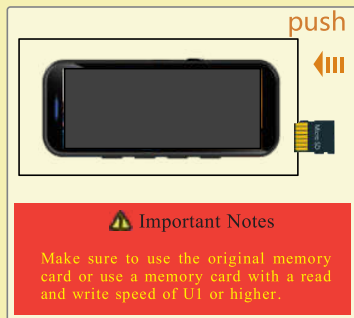

Important Notes

- b.** Please use the original on-board charging power supply as standard.



Dedicated on-board power supply

c. Batteries and chargers

- The dash cam battery is a lithium-ion battery and is only used to maintain and save settings. This unit needs to be powered continuously, otherwise it will shut down.
- Please use the original car charger to avoid malfunction or incompatibility.


d. High temperature precautions

Do not leave this product in a place where the temperature may exceed 70°C for a long time.

When using a parasol, please do not install the recorder unit

- between the windshield and the parasol, as it may cause heat build-up damage.


Startup settings

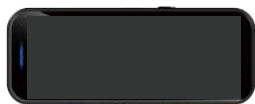

Step 1: In the first step, press the OK button



Step 3: Press the up or down button to select the local language, and press the OK button to confirm the selection

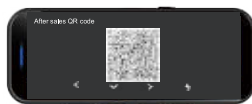


Step 2: Scan the QR code to activate and press the OK button



Step 4: Set the current time, press the up and down keys to select the time, press the OK button to confirm the selection, press the menu button to exit the selection, and press OK to confirm the exit setting

Description of appearance and key functions

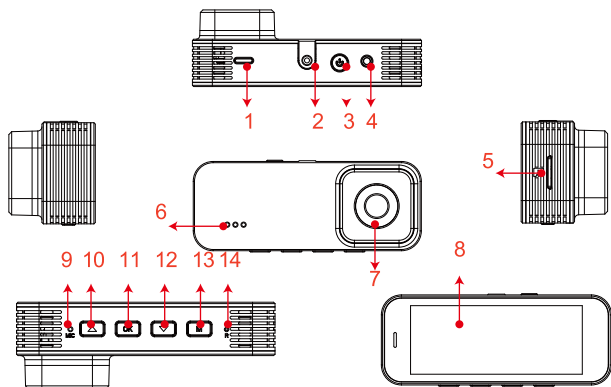

1.Type-C Power connector

2.Bracket interface

3.Power button

4.AV rearview interface

5.Memory card

6.Trumpet

7.Front lens

8.Display the screen

9.Microphone port

10.Press the up button

11.Confirm the button

12.Press the down button

13.Menu button

14.Reset button

Instructions for the operation of the key function

	Power button	Open it/Turn off the recorder:Press and hold the power button for 2-3 seconds
		Short press the power button to turn on/Turn off the screen
	Flip up	Scroll up with a short press in the menu settings ,in both recorded and non-recorded states
		The current screen is closed by pressing a short press/Turn on recording; Playback mode: Select the next recording
	Flip down	Short press once to scroll down in the menu settings
		Short press to close while recording/Open the recording room
		Press once to scroll to the next video during video playback
	Menu key	Short press to enter the driving record menu; Press and hold to enter video playback
		Short press the menu button to return in the setting
		In the recording state, short press to lock the current video file
	Confirm key	In video mode, short press to take a photo,Press and hold the front and back cameras to switch between the screen
		You can check the selection in the menu selection
		Confirm playback in video playback



Tips

Because the emergency video file lock will be produced during driving, the loop recording video can not automatically delete the locked video, the memory card must be formatted from time to time, otherwise the critical moment, the locked video will occupy the memory card, resulting in the inability to record normally.

Description of the functions of the on-screen interface



1. Recording resolution

Indicates the current recording resolution

2. Current time

Connected APP can automatically synchronize the time

3. Recording status

Time indicates that a video is being recorded

4. WiFi status

White: not connected; Green: Connected.

5. SD card status

White: SD card is normal. Red: SD card is abnormal

6. Battery status

Green: Power supply is normal. White: not charged

7. Rear camera video

Display rear camera video

8. Power lamp

Blinking blue indicates recording.

9. Front camera video

Display front camera video

10. WiFi information

After WiFi on, the name and password are displayed.

11. Microphone status

White: recorded audio; Red: Silent

12. Video status

Red: Video recording; White: Stop recording

13. Lock state

The lock status varies according to the icon


14. Menu

Menu button icon

Menu settings

Enter/Exit the function menu

- ① Long press the menu key to pop up the option Driving Record/Set up/Video playback,three modes, select settings, press the OK button to enter the menu.

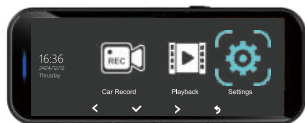


- ② WIFI function settings, press the OK button to enter the settings, choose to turn the WIFI function on or off, press the OK button to confirm, and press the Menu button to exit the menu.




- ③ To set the resolution, press OK to enter, select 1080P/2K/4K/ press OK to confirm the selection, and press the menu butto.




④ Loop the video recording for 1/3/5 minutes, press the OK button to enter the settings and select Press and hold the OK button to confirm, and press the Menu button to exit.

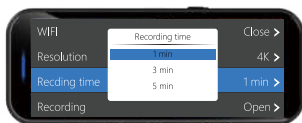


⑤ To record, press the OK button to enter the settings. Select the settings and press the OK button to confirm, and when the settings are complete, press the menu button quit.

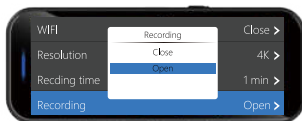

⑥ Pull back the mirror, press the OK button to enter the settings, select the settings, press the OK button to confirm, the settings are complete, and press the Menu key to exit.

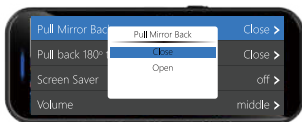


⑦ Pull back 180 degrees to flip, press OK to enter the setting, select the setting, press the OK key to confirm, the setting is complete, press the Menu key to exit.

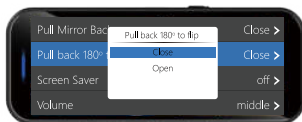

- ⑧ Screen saver, press OK key to enter the settings Select 1 minute/2 minutes/3 minutes, Press the OK button to confirm the selection, and press the Menu key to exit the settings.



- ⑨ volume, press the OK button to enter the setting selection and select Off/Low/Medium/High, press the OK button to confirm the selection, and press the Menu key to exit the setting.

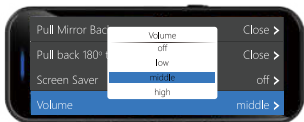


- ⑩ Gravity induction, press OK button to enter the setting to select off/low/medium/high, Press the OK button to confirm the selection, and press the Menu key to exit the setting




- ⑪ Parking monitoring, press OK key to enter the setting to select off/low/medium/high, Press the OK button to confirm the selection, and press the Menu key to exit the setting.



⑫ For the time-lapse recording duration, press the OK key to enter the settings and select Off/12H/24H/72H, press the OK button to confirm the selection, and press the Menu key to exit the settings.

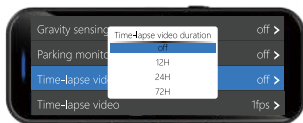

⑬ For time-lapse recording, press the OK button to enter the setting and select 1fps/2fps/5fps/press the OK button to confirm the selection, and press the Menu button to exit the setting.

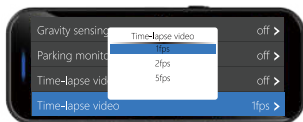


⑭ Language settings, press OK to enter the settings to select 12 Chinese languages such as Chinese Simplified / English / Français / Deutsch, press OK key to confirm the selection, press the menu key to exit the setting.




⑮ Time setting, press OK button to enter the main one, set the selection time, press OK button to confirm selection, press the menu key to exit the selection, press OK to confirm the exit setting.



- ①⑥ Format the memory card, press OK to enter the settings selection, return to select to confirm the formatting, OK to confirm the selection, and press the Menu key to exit the settings.

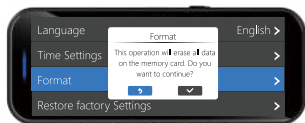

- ①⑦ Restore factory settings, press OK key to enter the settings selection Return to select to confirm the factory reset, press the OK key to confirm the selection, and press the Menu key to exit the settings.

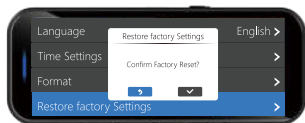

- ①⑧ After-sales QR code, press the OK button to enter the view and press the menu button to view.



- ①⑨ Software version, press OK to enter the check and press the menu key to view.



Turn on the power(Start recording)

When the car is powered on, the recorder camera will automatically start recording, When the red dot starts flashing, the recording time starts to tic.

Video icon



If the recorder camera does not start and record automatically, perform the following steps:


- a.* Make sure the car charger is connected correctly
- b.* Is the **SD** card full, and if so, format it

If there is still a problem after inspection, please contact us for a replacement.


Disconnect the power supply (Stop recording)

When the power of the car is turned off, therecorder will stop recording and turn off automaticall.

Picture preview, video playback

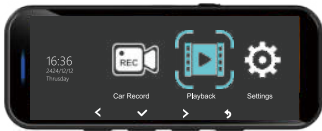

Press the Menu key to select the video playback, press the OK button to select the video file mode, press the up and down keys to select the file, press the OK key to play the file, and press the OK key to select Return.

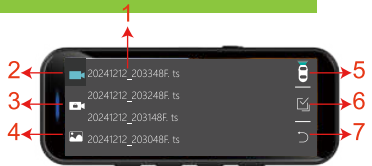

- 1.Name of the video file
- 2.Normal video file
- 3.Lock video file
- 4.Photo
5. Front/Rear Camera Recording File
6. Select the file
7. Return



Install the recorder mainframe

Step 1 · Please attach the bracket to the machine (as shown) and remove the adhesive tape.



Step 2. Connect the recorder host with a bracket, and adjust the camera lens of the host to the front when installing.

Step 3: Peel off the double-sided tape sticker on the bracket, paste the base of the bracket on the glass and press it tightly.

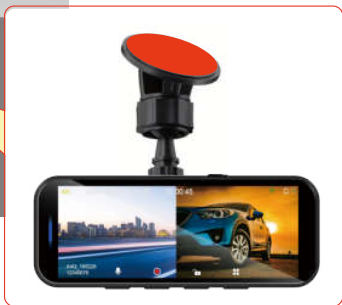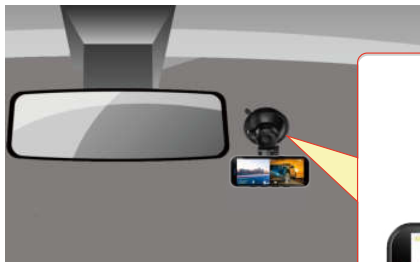

Important Notes

- Please make sure that the mounting bracket is in the correct position

Please make sure that the double-sided tape sticker of the bracket has been removed and the glass surface is clean.

- Please make sure that the bracket is fastened, otherwise the bracket will easily fall off during the recording process.


Step 4. Adjust the recording angle up and down the display screen of the recorder according to the figure below.

Turn the bolt to adjust the height angle of the bracket.




Step 5: Connect the car charger to the Type-c power port of the recorder and follow the overall wiring diagram below for wiring

Wiring diagram

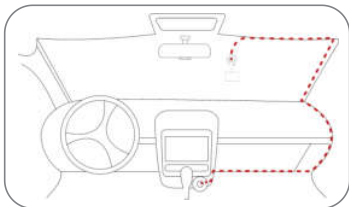

Wiring method A

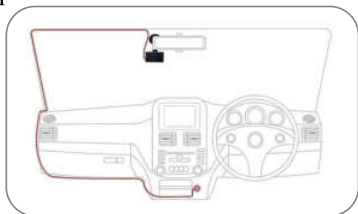

Wiring method B

 Please use the original car charger to avoid malfunction or incompatibility.

Install the car charger



a. As shown in the photo, in the top panel




b. Gently pry open the side panels, tuck the power cord into the gap in the panel, and then return to its original shape.



c. Then tuck the power cord into the sealing strip of the door



d. Plug the power line into the door according to the sealing strip.

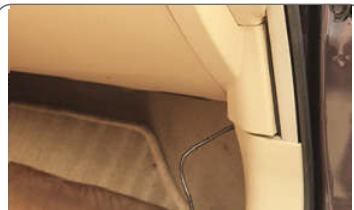

e. Plug the power line into the door according to the sealing strip.



f. Connect the logger charger to the cigarette lighter




Wiring method A

OR



Wiring method B

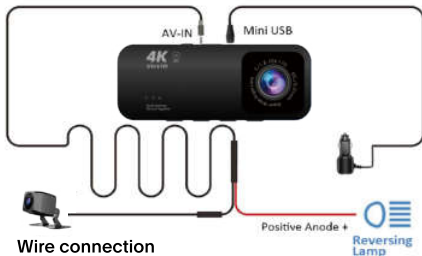

b. Follow the diagram photo above to install the cable for the rear camera

Install the rear pull cable for the rear camera



a. Hide the cable into the panel as shown in the photo



b. Gently pry open the side panel, insert the line, then pull.



c. Then stuff the back cable into the sealing strip of the door



d. Gently pry open the panel, tuck in the rear cable, and be careful if you have an airbag



e. Continue to tuck the back pull cord into the sealing strip of the door.



f. Continue to tuck the rear cable into the sealing strip of the door until it is close to the trunk



g. Disassemble the trim plate of the trunk.



h. Pull the line after fixing it according to the red Callout line.



i. Connect the red wire of the rear cable to the positive pole of the reversing light



Important Notes

A red wire connected to the rearview camera for automatic display of the reversing image when reversing

If the reversing image is not necessary for you, please do not connect it and skip this step.



j. Attach the double-sided tape sticker to the rear camera bracket and adjust.



k. Fix the rear camera in the middle and above the license plate frame.



l. The rearview camera plug is plugged in

Important Notes

Note aligning the two arrows to connect.



1. App download and installation:


1.1 scan the QR code on the cover, After installation, click to enter "Viidure" as shown in the following figure:



2. Add device

IPhone: enter the system WiFi, select the recorder WiFi, enter the WiFi password (the default password is 12345678), connect, enter the "Viidure" app and complete the addition;

Android mobile phone: enter the "Viidure" app, click "add recorder", enter the system WiFi interface according to the addition wizard, select the recorder WiFi, enter the WiFi password (the default password is 12345678), and connect. After the connection is completed, click "return" to complete the addition;

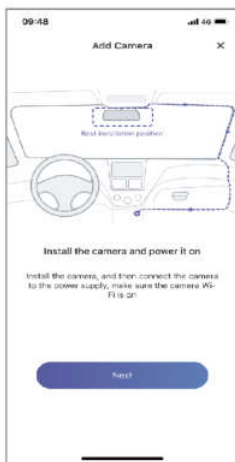


3. App function introduction



1. Recorder: this page manages the recorder. You can add, view and delete the recorder, and enter the video preview interface of the recorder;
2. Photo Album: manage the pictures and videos downloaded from the recorder to the mobile phone;
3. More: app language settings, problem feedback, about and other information;


4. Function introduction of recorder

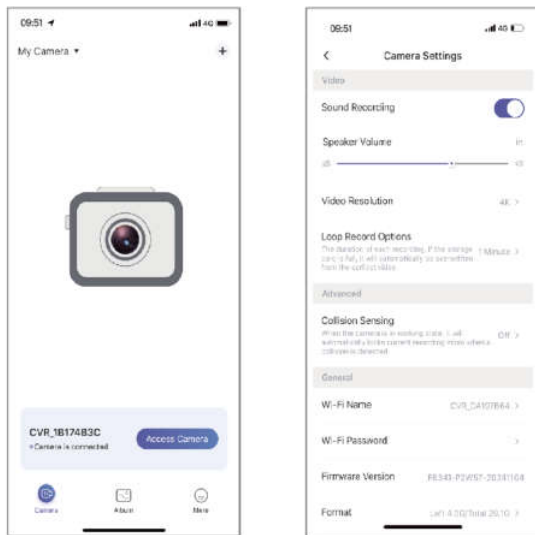

- 1 photographing: operate the recorder to take a picture, and then save the picture on the recorder;
- 2 zoom: enter the full video screen or exit the full video screen;
- 3 recorder files: enter the file list on the recorder and classify it according to circular video, photo files, emergency events and parking monitoring events;

4 recorder setting: enter the recorder setting interface to set the recording resolution and microphone switch;

4.1 recorder file download Click "recorder file" to enter the file list interface, click "select" button, select the picture or video to be downloaded, click "download" to start downloading the file. After downloading, the file is saved on the mobile phone and can be viewed through "photo album";

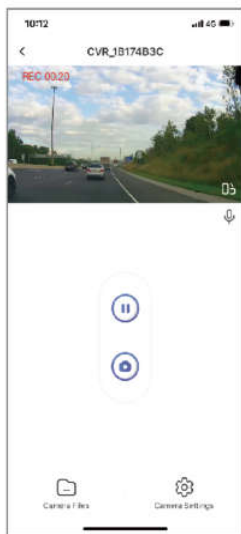


4.2 recorder file playback Click "recorder file" to enter the file list interface. instead of downloading, you can directly play the video on the recorder and take photos of the current playing picture of the video;



Download: download the video to the mobile phone; Take pictures: take pictures of the currently playing pictures and save them to the mobile phone;

5. Photo album

Enter the "photo album" to manage the pictures or videos downloaded to the mobile phone. Click "all" to enter the full list of videos in this category. The file list is arranged by date. Click "select" to select multiple files for operation;

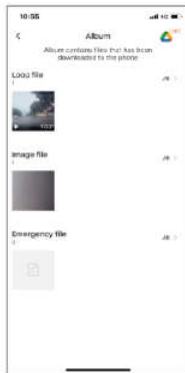

Video: all video files;

Pictures: all picture files;Emergency: documents of collision induction;6. Video playback

A variety of operations can be performed on the pictures or videos in the "album", as shown below:When playing the video in the "recorder file" or the video in the "photoalbum", you can choose to play at multiple speeds to quickly browse the video content or play the key video segments at a slow speed, such as "1 second 1 frame" or "10x (10 times speed)";



Product after-sales

12-Month Warranty & Customer Support

If you have any questions about the product or encounter difficulties during installation, you can scan the QR code.

The dashcam comes with a 24-month warranty and 24/7 customer support. During this period, we will assist you with any issues related to the product, installation, or usage.



FCC Warning Statement: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.