


设计版本号	产品名称 Product name		比例 scale	日期 Date	设计师 Designer	审核 Audit	
Rev_V0_EN	DR-HHM021S_美规UG		1: 1	20260601	Beryl	Alyssa	
	材质印刷与 技术要求	材质要求：157g铜版纸 双面覆哑膜 印刷要求：双面彩色印刷 上下风琴折页		字体 Fonts	Manrope	尺寸 Size	单页尺寸：160*130 mm

图纸设计禁止修改，尺寸刀模图为准

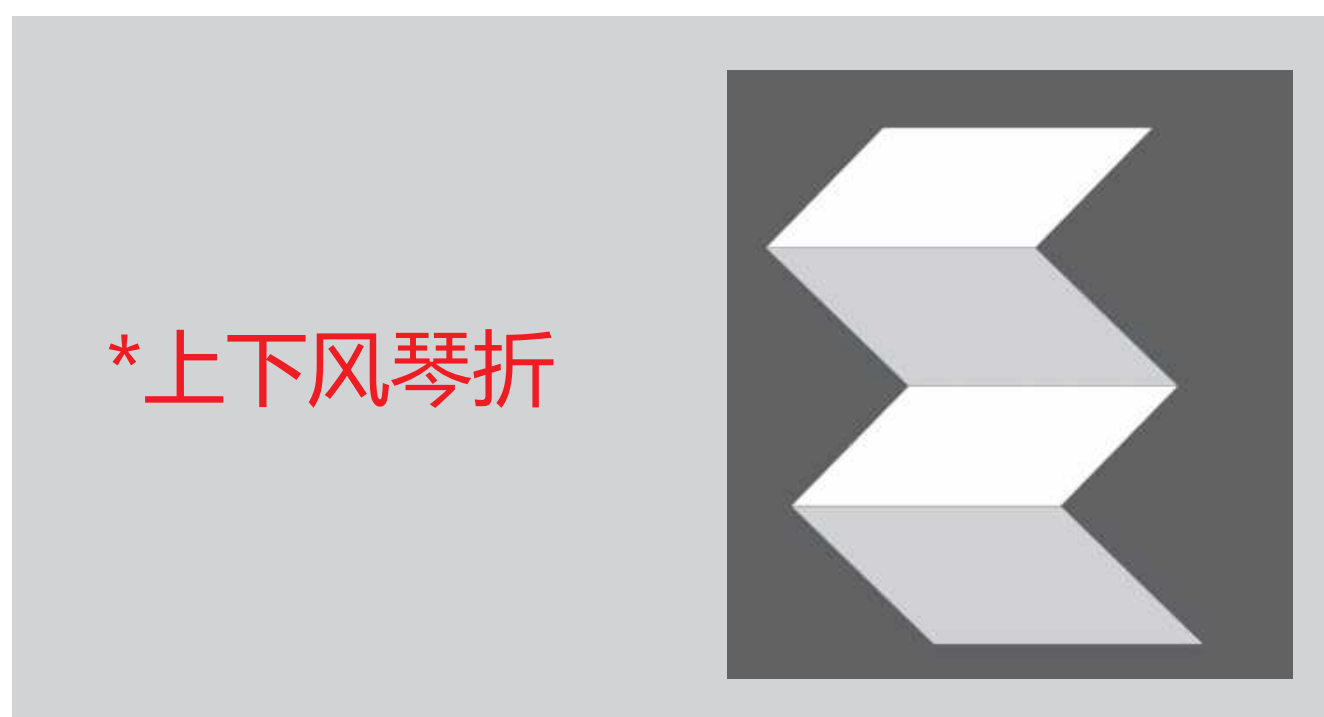

折页压痕线

160MM

DREO | Smart Humidifier 31S (2nd Gen.) User Guide

Model No.: DR-H46G2GS
Rated Power: 20W
Input: 120V~40Hz

Scan to read the full user manual

Only DREO experts give all the support you need

- Faster response.
- Excellent customer support.
- Hassle-free returns.
- Professional product guidance.
- Exceptional after-sales experience.

Reach out to us, it's easy!

support@dreo.com www.dreo.com

(888) 290-1688 Mon-Fri 9:00am-5:00pm PST/PDT

130MM

Before Use

When using your appliance for the first time, remove the waters and follow the steps below.

1

Remove the label and cardboard. Then make sure the water tank is installed correctly by pushing it down.

2

Detach the humidifier and clean tank thoroughly.

3

Fill the tank with water. Make sure the water doesn't pass the max line. Note: DO NOT add water into the mist tube.

4

Put the water tank back in place and close the top cover.

30mm / 1.2 inch

Place the appliance on a flat, level surface.

LED Display

WiFi Auto Mode Timer Low Water h Hour % Humidity %

Control Panel

- Power on/off.
Long press for 5 seconds to restore WiFi and factory settings.
- Switch between Low/Low-Medium/Highest level.
Long press for 5 seconds to start charge life countdown.
- Turn Auto Mode on.
Long press for 3 seconds to enter Wi-Fi settings.
Tip: To increase the target humidity by 5% (30%-90% range).
Press [] to exit.
- Turn off ambient, display, and beep sounds.
Touch any button to wake up the display (auto-off is on).
- Long press to change light colors (orange-green-blue-red-purple).
Long press [] and [] to adjust brightness.

Troubleshooting

- The appliance will not shut down at the end of low water.
- In Auto Mode, the appliance will stop working instantly when it reaches the room humidity target.
- If the first product does not produce small enough water droplets to avoid dry-mist accumulation.
- If the appliance is not running, check if there are any obstructions blocking the misting surface of the atomizer. If necessary, scan the QR code on the first page for detailed cleaning and installation instructions.

Connecting to the DREO App

Search "DREO" on Google Play or the App Store.

Tap + Add Device and select Smart Humidifier 31S (2nd Gen.).

Tip: Enable location on your mobile device and plug in the appliance.

You're now ready to control the appliance on your app.

Tip: To reset connection settings, hold [] again for 3 seconds.

To learn more, read the User Manual on [www.dreo.com](#).

Is Your New Appliance Leaking?

REMOVE

Make sure to remove the label and the cardboard.

SLIDE

Flick left prong on the bracket, then slide the other prong to secure the foot in place.

Remove any particles or hair blocking the water valve.

Make sure the appliance is placed on a flat surface.

Contact Customer Service If...

The water valve is not fit or the tank leaks water when refilling.

The water tank has leakage due to improper drying of used oil or liquid medication.

IMPORTANT SAFETY INSTRUCTIONS

⚠️ READ ALL CAUTIONARY MARKINGS ON THE APPLIANCE AND SAFETY MANUAL BEFORE USE.

DO NOT block or cover the nozzle while in operation.

DO NOT touch or hold the plug or power cord with wet hands.

DO NOT let children or pets play with this appliance.

General Safety

- Children should be supervised to ensure that they do not play with the appliance. Cleaning and maintenance shall not be performed by children without supervision.
- This appliance is not intended for use by persons (including children) who lack the appropriate knowledge, experience, or ability. If you have been given special instruction concerning use of the appliance by a person responsible for its use, read those instructions carefully.
- Use the appliance as described in the user manual only. Any other use not recommended in the user manual may cause fire, electrical shock, or personal injury.
- This is not a toy. This is an electrical appliance and must be operated and maintained by an adult. In addition to the water to be dispensed only, the personal liquids advised by the manufacturer for cleaning or fragrance should be used.

Operation Safety

- Always place the appliance on a firm, flat and level surface to avoid dropping or tilting.
- Always place this appliance 2 feet (60 cm) above the floor. 3 inches (80 mm) above the wall or wooden furniture.
- DO NOT move the appliance while it is on.
- DO NOT attempt to repair or disassemble the appliance. The inside of this appliance contains no user serviceable parts. All servicing should be performed by qualified personnel only.
- NEXT leave water in the reservoir when the appliance is not in use.
- DO NOT permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down, lift the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- DO NOT use the appliance until the base is installed.
- DO NOT insert your fingers, pen/cil and other objects into the grille or openings while in operation.

Warning:

- Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing various health risks when the water is renewed and the tank is not cleaned properly every 3 days.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Check the water level regularly and replace the water tank as needed. Clean the humidifier before next use.
- Empty the tank and refill every third day, before refilling, clean it with fresh tap water or cleaning agents. Remove any scale, deposits, or film that has formed on the sides and/or on the interior surfaces, and wipe off all moisture.

Electricity Safety

- Make sure that the voltage of your electricity supply is the same as that indicated on the appliance.
- Always unplug the appliance before cleaning or leaving the appliance unused for a long period of time. Keep your hands dry when plugging/unplugging.
- Do not operate the appliance with a damaged cord or plug. Discard the appliance or return to an authorized service facility for examination and repair.
- Do not run cords under carpeting. Do not cover cords with throw rugs, runners, or similar coverings. Do not route cords under furniture or appliances, always cord away from traffic areas and whenever it should be stepped over.

WARNING:

To reduce the risk of fire or electric shock, do not use the appliance with any solid-state speed control device.

WARNING: If a powered plug or cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid fire hazard.

This appliance has an isolation plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a standard outlet only when the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Cleaning Instructions

- Always turn off and UNPLUG the appliance before any cleaning or maintenance.
- Do not clean the main body under running water.
- Do not let water splash into the air ducts.
- Do not use any chemical agent when cleaning the appliance.
- Store in a cool, dry place before use to protect it from rust.
- Empty and clean the appliance before storage. Clean the appliance before next use.
- Do not overfill the appliance due to the potential risk of electric shock.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to licensed communications. This equipment generates, uses, and can radiate radio frequency energy, and if installed and used in accordance with the instructions, may cause harmful interference to licensed communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning

正面

背面

图层使用规范：

- 1、备注信息图层为非印刷区域，展示印刷物料基础信息。
- 2、刀板线、备注工艺、尺寸层展示印刷工艺部分。
- 3、画面信息层展示印刷展示图片与文字。

***电子文档为Adobe Illustrator制作**

文件格式：model规格类目日期.AI（ 可为编辑原始文档 ）
文件格式：model规格类目日期.pdf（ 为文件转曲不可编辑文档 ）

					品、包装等信息！
					*OEM信息： 委托方及被委托方 信息（名称、地址、 邮编、电话、生产 许可证、卫生许可 证）
设计师	审核	产品负责人	法规	采购	

审稿
检查事项 会签以“√”形式确认 (负责部门/范畴确认)
审稿检查事项 商标规范 字符高度 工艺材质 颜色标识
产品文案 条码检查 厂 址 全 成 分 警告标语 执行标准 产品尺寸 外/内箱尺寸 OEM信息*
产品包装信息 请相关部门确认产品 包装、包装等信息！
*OEM信息： 委托方及被委托方 信息（名称、地址、 邮编、电话、生产 许可证、卫生许可证）