

Smart ring remote control product parameterizer



Product Parameter
product model : DJ05
input interface: ype-C
Distance: 10M
Bluetooth version: Ble 5.2
Bluetooth name: DJ05
battery capacity : 45mAh
Charging input: 5V-30mA
Charging duration : 1.5hours
service time: 20hours
product size:36.5mm*19.5mm*34.5mm
FCC ID: 2BPJC-DJ05

Packaging List

1. Main unit

2.Type-C charging cable

3.User manual

4.Two silicone rings for the finger ring



Diameter: 19mm
Diameter: 17mm


Apple system:
To enable: Go to Settings - Accessibility - Zoom
Once zoom m is enabled, the screen will become larger.

Tap the screen three times in quick succession to restore the normal display.

1

2

3

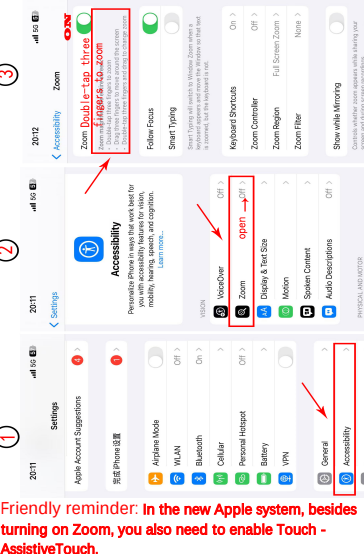

Zoom Double-tap, three fingers to zoom
Accessibility
Zoom
Open

Mode 1: Move the switch closer to I

Single click: Swipe up
Long press: Volume +
Double-click: Continuous upward movement

Single click: Start/Pause the short video
Double-click: Like
Triple-click: Like spree
Long press: Flip Camera

Single click: Swipe left
Long press: Zoom out
Double-click: Exit live broadcast

Single click: Slide down
Long press: Volume -
Double-click: Continuous slide down

Single click: Take a photo/ Take a video
Long press: Power ON/OFF
Double-click: Fast forward video.

Side-by-side, move the switch to "I" to enter Mode 1, and then move it to "II" to enter Mode 2.

Mode 2 toggle switch is close to II

Single click: Volume +
Long press: Swipe up

Single click: Previous Track
Long press: Swipe left

Single click: Volume -
Long press: Slide down

Single click: Take a photo/ Take a video
Long press: Power ON/OFF
Double-click: Fast forward video.

The above functionality was tested in portrait mode on a phone or tablet. In landscape mode, the orientation will change, and on some devices, the screen might not work

Single click: Lock the phone / Wake (up) the screen
Long press: Go Home
Double-click: Mute

Type-C charging port

Charging/Power Level Indicator

Mode 1: Photo / Video

Click Shutter Button/Take Photo / Start-Stop Video Recording
Press and Hold Center Button: Flip Camera (Front/Rear)
Click Left/Right Buttons: Navigate Menu
Press and Hold Left/Right/Zoom Out / Zoom In

When taking photos with third-party software such as tiktok, remember to open the settings in the software, open the photo with the volume key, and pay attention to flip the lens into the middle key and double-click. Try more photo software by yourself, and the functions may not be the same as the above description.

Mode 1: tiktok and Other Short-Form Video Apps

Middle Click: Play/Pause
Up/Down Click: Previous/Next Video
Power Double-Click: Fast Forward
Up/Down Hold: Volume +/-
Left/Right Click: Move Left/Right (Menu)
Middle Double/Triple-Click: Like/Spam
LikeUp/Down/Right Double-Click: Rapid Skip (Up/Down/Right)
Left Double-Click: Exit Live Stream

Mode 1: E-Book App

Left/Right Click: Previous/Next Page
Please note: Some applications may require you to manually enable a "Reading Mode" or similar setting.

Please use Google or youtube to scan the code to watch the tutorial

FCC warning:
Any Changes or Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Power On: Press and hold the power button for 2 seconds. The device will power on, indicated by the blue LED lights illuminating sequentially in a progressive pattern.
Pairing Mode: After power-on, one blue LED will blink, indicating the device is in Bluetooth pairing mode.
Connection:Enable Bluetooth on your smartphone.Search for and select "DJ05" from the list of available devices.Tap to connect.*Note for iOS users: Additional setup required. Please refer to Page 2 of the manual for iOS-specific instructions.
The device will automatically power off after 10 minutes if no Bluetooth connection is established.Once connected, it will automatically power off after 1 hour of inactivity (no button presses).
Light Indicators:
Charging:Blue LED lights illuminate sequentially (increasing pattern)during charging
Fully Charged: All 3 blue LEDs remain steadily lit.
Low Battery: All 3 blue LEDs flash repeatedly until the device powers off automatically
Power On/Off:
Power On (Press and hold power button for 2 seconds): Blue LED lights illuminate sequentially once.Power Off (Press and hold power button for 2 seconds): All 3 blue LEDs flash 3 times.
Bluetooth Pairing Mode:One blue LED flashes continuously (searching for Bluetooth connection).Bluetooth Connected:After successful pairing, press any button: One blue LED lights up briefly (as confirmation).
Battery Level Check
When Bluetooth is connected, press the (Power + Mute) buttons at the same time. The number of blue lights shows the remaining battery.
3 Blue Lights: Battery is between 100% - 66%.Longest runtime - about 65% of total use time.
2 Blue Lights: Battery is between 66% - 33%.Medium runtime - about 30% of total use time.
1 BlueLight: Battery is between 33% - 0%.Low battery warning - about 5% of total use time.

Mode Switching:
If the gear switch is damaged or invalid, press and hold the left + right buttons for 3 seconds. The blue light will flash once to indicate the mode has been successfully switched.

Mode 2: Music / Audiobook
Click Center Button:Play / Pause Click Left/Right Buttons:Previous Track / Next Track
Click Up/Down Buttons: Volume Up / Volume Down

Devices running the Apple system require setup before use (other systems do not need this. The operation is as shown in the picture. Please rotate it 90 degrees to view).