



Product Description

I/O: 5 UI's, 3 AO's & 7 BO's

Temp & Humidity (default)

BACnet MSTP (default)

Applications:

RTU, HP, WSHP, FCU, Small AHU

Humidification and Dehumidification Control

Ref: Firmware version 1.2.0 or later

Model Information

MODEL	TEMP RH%	MOTION	CO2 NDIR	BACNET WIFI	MSTP
OST537HW	X			X	X
OST537MHW	X	X		X	X
OST537MHCW	X	X	X	X	X
OST537HW-1*	X			X	X
OST300HW-1*	X			X	X

**Special OEM versions*

Quick links:

- [Select between RTU or FCU](#)
- [Rooftop Unit \(RTU\)](#)
- [Setup Menu](#)
- [Fan Coil Unit \(FCU\)](#)
- [Setup Menu](#)
- [Network](#)
- [Specifications](#)
- [End User Operation Guide](#)

Contents

Cybersecurity	4
Compliance	Error! Bookmark not defined.
Installation	6
Connectors.....	7
Select between RTU or FCU	9
Completely reset to factory settings	10
Rooftop Unit (RTU)	11
Wiring	11
RTU Select Your Equipment.....	11
Rooftop 2 Stages (RT 2STG)	12
Rooftop with Economizer (RT ECON).....	13
Heat Pump 2 Stages (HP 2STG).....	15
Rooftop Indoor Air Quality (RT IAQ)	17
Rooftop with 0-10VDC SCR electric heating (RT MOD)	19
Heat Pump with Dehumidification Output (HP DEH)	21
Humidifier-Dehumidifier (HUM-DEH)	23
Rooftop 3 Stages (RT 3STG)	25
Rooftop 4 Stages (RT 4STG)	27
RTU Control Curves	29
Configuration of AI1 and AI2 inputs	32
Setup.....	33
Setup Menu	33
BACnet Objects	37
Overview	37
Physical Inputs and Outputs.....	39
Analog Values (AV)	40
Binary Values (BV)	42
Multi-State Values (MSV)	43
Loop(s).....	48
Schedule	48
Fan Coil Unit (FCU).....	49
Wiring	49

FCU Select Your Equipment	49
4 Pipes – Modulating 0-10 VDC Valves	50
4 Pipes – Floating valves	51
4 Pipes – On/Off N.C. Valves.....	52
4 Pipes – On/Off N.O. Valves	53
2 Pipes – Modulating 0-10 VDC Valves	54
2 Pipes – Floating Valves.....	55
2 Pipes – On/Off N.C.....	56
2 Pipes – On/Off N.O.	57
Fan Control – ECM (0-10VDC) MSV-58 = On-Auto	58
Fan Control – 3 Speed Fans MSV-58 = L-M-H	59
Fan Control – 2 Speed Fans MSV-58 = L-H	60
Fan Control – Single Speed Fans MSV-58 = On-Auto .	61
Optional inputs.....	62
FCU Control Curves.....	63
Floating Valve Actuator Operation	66
FCU Configuration and System Mode.....	67
Setup.....	68
Setup Menu	68
BACnet Objects	71
Overview	71
Physical Inputs and Outputs.....	72
Analog Values (AV)	73
Binary Values (BV)	74
Multi-State Values (MSV).....	75
Loop(s).....	79
Schedule	79
Network.....	80
RS-485 Network Guidelines	80
Testing Wiring	81
Occupancy Logic	82
Radar Settings	86
Specifications	87
End User Operation Guide (RTU).....	88

End User Operation Guide (FCU)..... 89

Symbol Definitions

The symbols defined below are used throughout this document to highlight information that requires particular attention.



ATTENTION: This information requires special consideration.



TIP: Identifies advice or hints to help the user perform certain tasks.



WARNING: Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, equipment damage, or data loss. It may also be used to alert against unsafe practices.



CAUTION: Indicates a situation where users must observe precautions for handling electrostatic-sensitive devices

Cybersecurity

The Strato Automation OST537 series controllers present a low cybersecurity risk profile due to their streamlined design. These devices do not store, process, or transmit sensitive customer or enterprise data. All communications use standard open building automation protocols (BACnet/IP and BACnet MS/TP), which are not intended to carry confidential information.

Cybersecurity considerations for the OST537 therefore focus on network-level protection rather than device-level defenses. Recommended best practices include deploying the controllers on segmented building automation networks, restricting unnecessary access, and conforming to site-specific IT security policies. By design, the OST537 minimizes exposure, delivering reliable operation without adding unnecessary cybersecurity complexity.

Compliance

ISED non-interference disclaimer

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with the Canadian ICES-003 Class B specifications. CAN ICES-003(B) / NMB-003(B).

ISED RF Exposure statement

This equipment complies with ISED RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm (7.9 inches) between the radiator and any part of your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

J.2 Restrictions

- a. Except as allowed in J.2(b), devices are only to be used when the aircraft is on the ground.
- b. Devices used in-flight are subject to the following restrictions:
 - i. they shall be used within closed, exclusive on-board, communication networks within the aircraft
 - ii. they shall not be used in wireless avionics intra-communication (WAIC) applications where external structural sensors or external cameras are mounted on the outside of the aircraft structure
 - iii. they shall not be used on aircraft equipped with a body/fuselage that provides little or no RF attenuation except when installed on unmanned air vehicles (UAVs) and complying with J.2(d)
 - iv. devices operating in the 59.3-71.0 GHz band shall not be used except if they meet all of the following conditions:
 1. they are FDS
 2. they are installed within personal portable electronic devices
 3. they comply with the relevant requirements in J.3.2(a), J.3.2(b) and J.3.2(c)

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Exposure Statement



This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, this equipment should be installed and operated with minimum distance 20 cm (7.9 inches) between the antenna and your body during normal operation. Users must follow the specific operating instructions for satisfying RF exposure compliance.

Installation

1. After unpacking your OST537, gently pull away from the base using the left side of the front cover.
2. Pull the wires through the hole in the base.
3. Use 2 screws to attach the base to the wall.

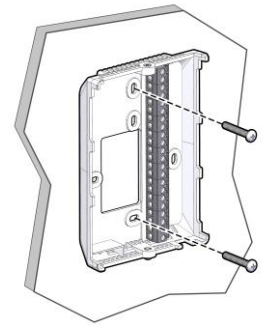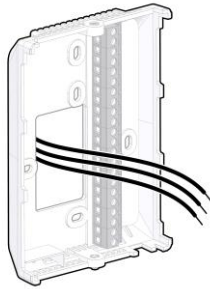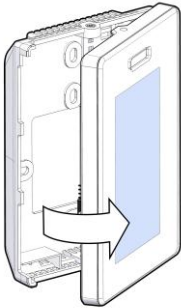

4. Connect the wires to the terminals. Refer to the documentation for the proper connections. Then, gently push the front cover straight on to the base.
5. Optionally use the lock screws on top and bottom to secure the cover. Use a 1/16" Allen key and turn counterclockwise until flat with cover.

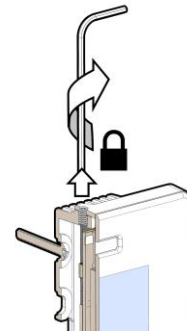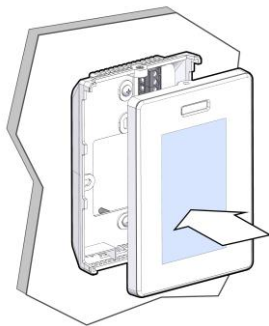

Electronic controls are static sensitive devices; discharge yourself properly before manipulating and installing the device.




Short circuits or incorrect wiring may permanently damage the controller. Double-check your wiring before applying power.

If a control failure could lead to personal injury and/or property loss, the installer must add safety devices and/or alarm systems to protect against failures.


Overview

CONNECTORS

Single Or Multiple Voltage AC Transformer OST537

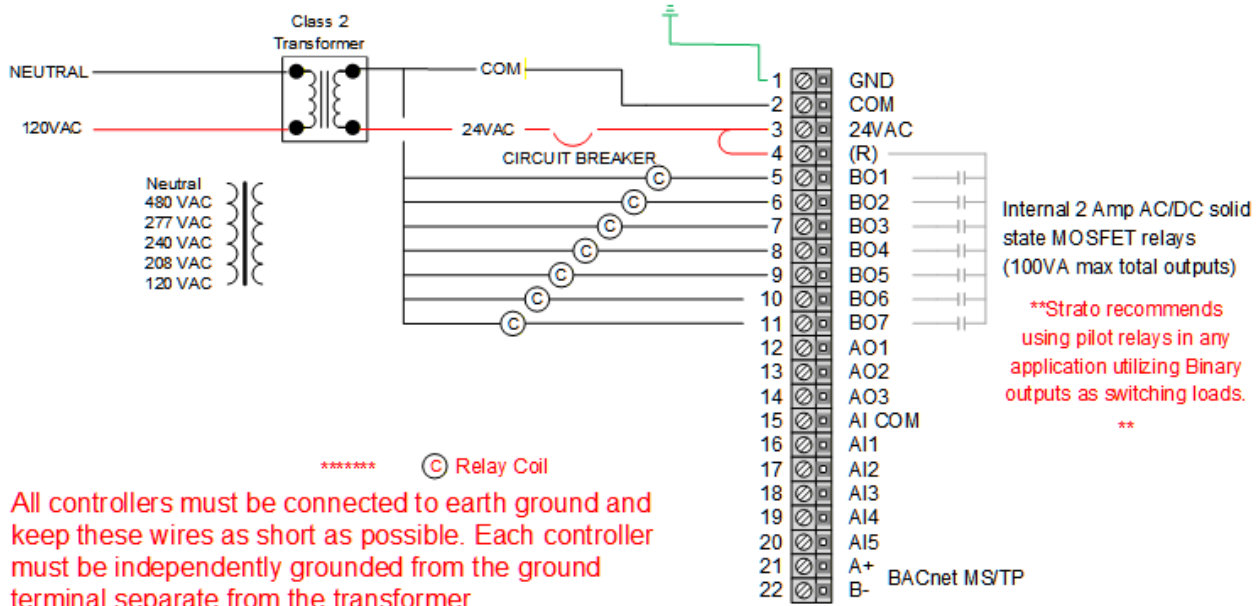


Single Or Multiple Voltage AC Transformer With Secondary Grounded OST537

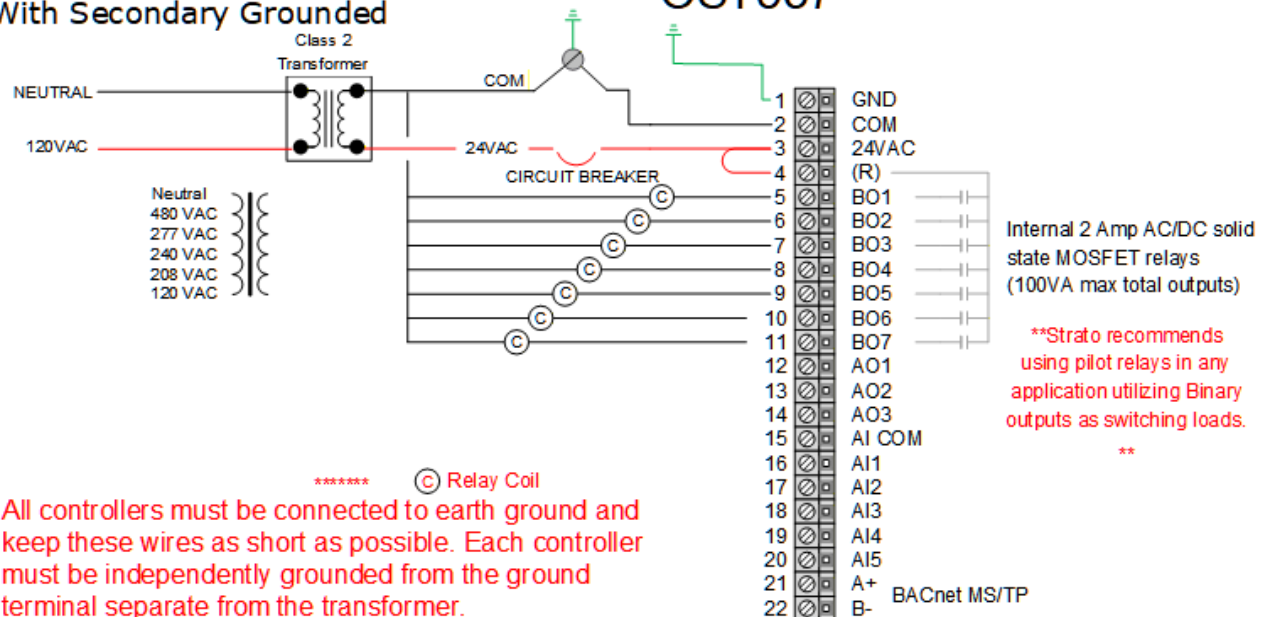

Single Voltage DC Transformer

OST537

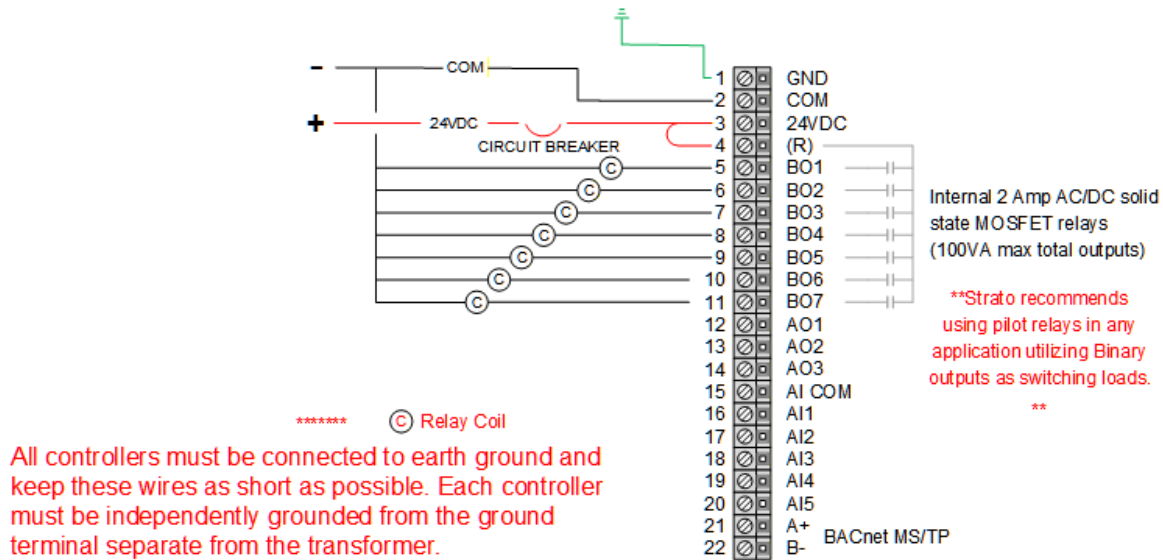


Add a 24VAC transformer when the equipment does not supply the power.

For details on grounding within control panels, NFPA 79 and UL508A provide the required details.

Select between RTU or FCU

At first power-up, the following selection menus will appear.


This will create all default factory BACnet objects and values for a RTU or a FCU in °F or °C:

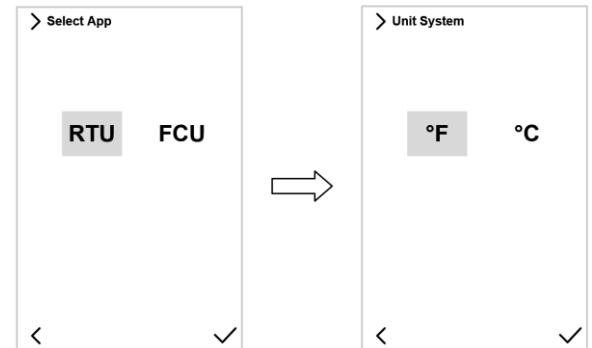

To reinitialize application configuration

(This will reset only the configuration; it will not change BACnet network, RTU/FCU selection, F/C and Wi-fi settings)

- 1) Disconnect power
- 2) Reconnect power
- 3) On black screen, quickly hold two fingers on left and right bottom corners
- 4) Keep holding until the full red circle is complete

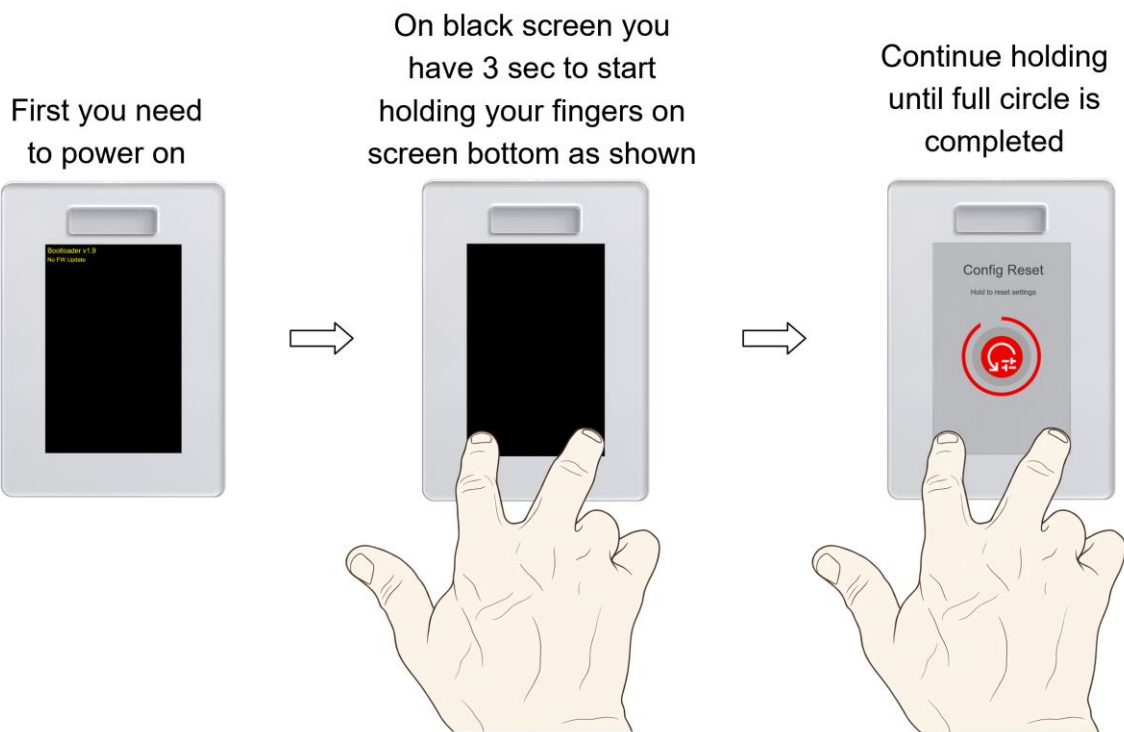

Completely reset to factory settings




This will reset everything to factory settings.


The configuration, the BACnet network, the RTU/FCU selection, the F/C selection and Wi-fi settings will be erased.

- 1) Disconnect power
- 2) Reconnect power
- 3) On black screen, quickly hold two fingers on the left top and bottom corners plus the top right corner simultaneously
- 4) Keep holding until the full red circle is complete

First you need
to power on

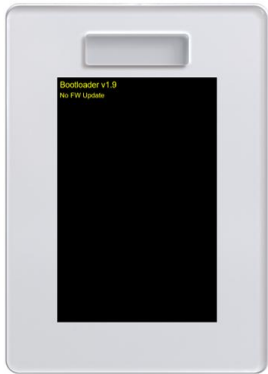

On black screen you
have 3 sec to start
holding your fingers on
screen as shown

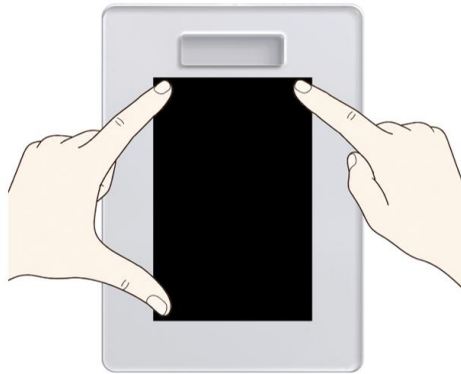

Continue holding
until full circle is
completed



Rooftop Unit (RTU)

Wiring


RTU Select Your Equipment

RT 2STG	Typical rooftop with one or two stages of cooling
RT ECON	Rooftop with full control of the economizer
HP 2STG	Heat pump with one or two stages
RT IAQ	Rooftop with Indoor Air Quality CO2 control
RT MOD	Rooftop with 0-10VDC SCR electric heating
HP DEH	Heat pump with on-off dehumidification output
HUM-DEH	Rooftop with 0-10VDC humidifier and on-off dehumidification input
RT 3STG	Rooftop with three stages of cooling
RT 4STG	Rooftop with four stages of cooling

Connector	I/O id	BACnet Name	RT 2STG	RT ECON	HP 2STG	RT IAQ	RT MOD	HP DEH	HUM-DEH	RT 3STG	RT 4STG
1	GND										
2	COM										
3	24V										
4	(R)										
5	BO1	BO_1	G	G	G	G	G	G	G	G	G
6	BO2	BO_2	Y1	Y1	Y1	Y1	Y1	Y1	Y1	Y1	Y1
7	BO3	BO_3	Y2	Y2	Y2	Y2	Y2	Y2	Y2	Y2	Y2
8	BO4	BO_4	W1	W1	W1	W1	W1	O (O/B)	W1	Y3	Y3
9	BO5	BO_5	W2	W2	O (O/B)	W3		Dehum	W2	W1	Y4
10	BO6	BO_6							Dehum	W2	W1
11	BO7	BO_7									W2
12	AO1	AO_1							Hum		
13	AO2	AO_2				W2 (0-10V)	W2 (0-10V)				
14	AO3	AO_3		Econo		Econo					
15	AI COM										
16	AI1	AI_1									
17	AI2	AI_2		OAT		OAT		WS	Supply RH high limit		
18	AI3	AI_3	SAT	SAT	SAT	SAT	SAT	SAT	SAT	SAT	SAT
19	AI4	AI_4									
20	AI5	AI_5									
21	A+ MS/TP										
22	B- MS/TP										

Rooftop Unit (RTU) – Wiring

Rooftop 2 Stages (RT 2STG)

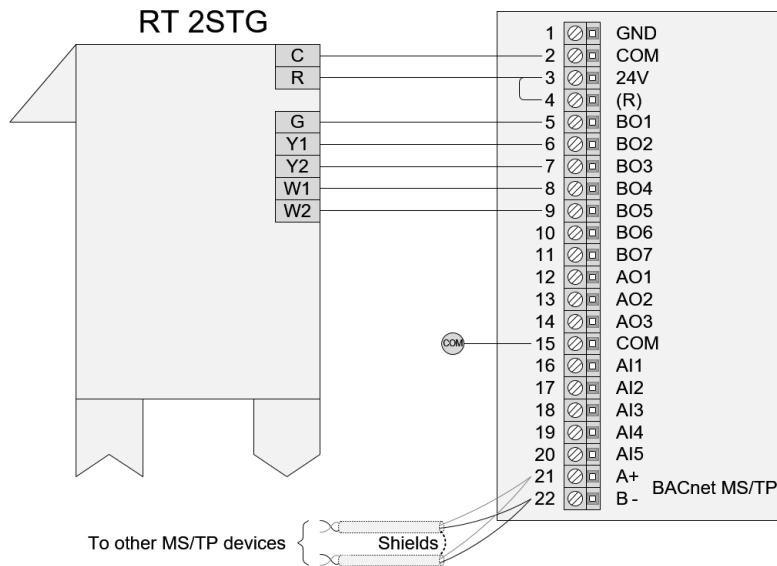

RT 2STG: Sets for an on/off fan, 2 on/off heat & 2 on/off cooling stages RTU unit

Notes:

- AI's can be configured for various options as per MSV2, 27, 28, 66 & 67.

Add a 24VAC transformer when the equipment does not supply the power.

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto: Cooling stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized.


Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Add a 24VAC transformer when the equipment does not supply the power.

Rooftop Unit (RTU) – Wiring

Rooftop with Economizer (RT ECON)

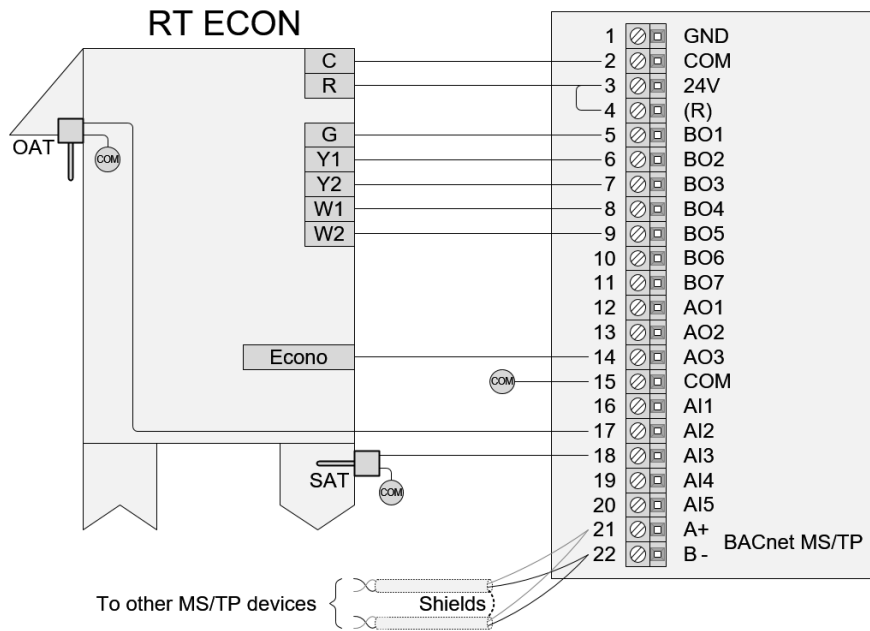

Add a 24VAC transformer when the equipment does not supply the power.

RT 2STG: Sets for an on/off fan, 2 on/off heat & 2 on/off cooling stages RTU unit.

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU) – Wiring

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) > the economizer authorization value (AV-68): Cooling stages will be energized according to cooling demand AV7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) < the economizer authorization value (AV-68): Cooling stages will not be energized. Cooling will be provided by modulating the economizer's minimum position according to cooling demand AV-7. The supply temperature will be modulated between the SAT_CTR_Set setpoint AV-57 and the low limit setpoint SAT_LL_Set AV-58.

On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Economizer Sequence of Operation

The controller can be configured with the economizer option for free cooling. The two *Control Types* that can be configured are Off-Auto and Modulating control.

Dry Bulb

The economizer is enabled to utilize free cooling, and there is a call for cooling if the outside air temperature is lower than the OAT EconoAuthorization setpoint. *OATeconOutAuth AV-68*.

When the control type is set to Off-Auto and the economizer is enabled, the output will energize the manufacturer's equipment economizer control.


When the control type is set for Modulating, the controller will modulate the outside air damper from minimum to 100% to maintain the *Minimum Supply Setpoint* SAT_LL_Set AV-58 at 100% demand call. When the demand call is 0%, the economizer will be set Off or Modulated to maintain the *Neutral Supply Setpoint* SAT_CTR_Set AV-57.

Enthalpy

If the calculated enthalpy is LESS than the enthalpy setpoint, and there is a cooling demand above 15%, the economizer will run in free cooling mode and when there is a cooling demand above 25%, our sequence allows compressor operation during economizer mode, which can be a way to save energy when we cool the outdoor air instead of the return air. This sequence requires an Outdoor Air sensor, a Supply Air sensor, a Mixed Air sensor and a Humidity input to run the Enthalpy Economizer sequence.

Rooftop Unit (RTU) – Wiring

Heat Pump 2 Stages (HP 2STG)

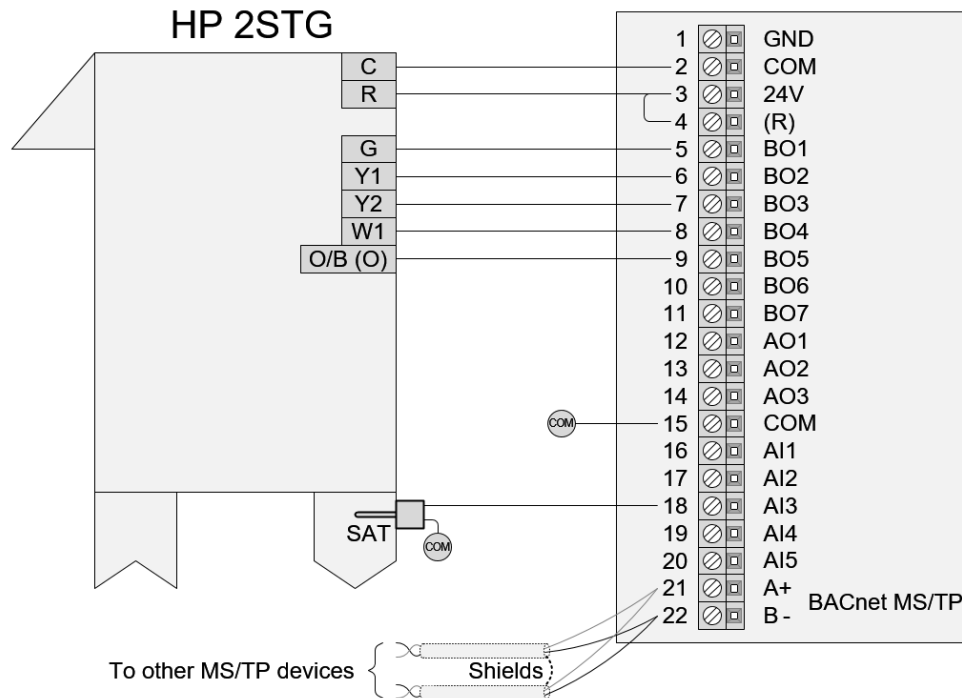

Add a 24VAC transformer when the equipment does not supply the power.

HP 2STG: Sets for an on/off fan, 2 on/off heat pump, 1 on/off reheat, 1 reversing valve HEATPUMP unit.

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU) – Wiring

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) > the economizer authorization value (AV-68):

Reversing valve will be set in cooling (default O setting). HPump stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) < the economizer authorization value (AV-68): Heat pump stages will not be energized. Cooling will be provided by modulating the economizer's minimum position according to cooling demand AV-7. The supply temperature will be modulated between the economizer center setpoint AV-57 and the low limit setpoint AV-58.


On a call for heating / System mode is Heating or Auto: The reversing valve will be set in heating / non-energized (default O setting). Heat pump stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU) – Wiring

Rooftop Indoor Air Quality (RT IAQ)

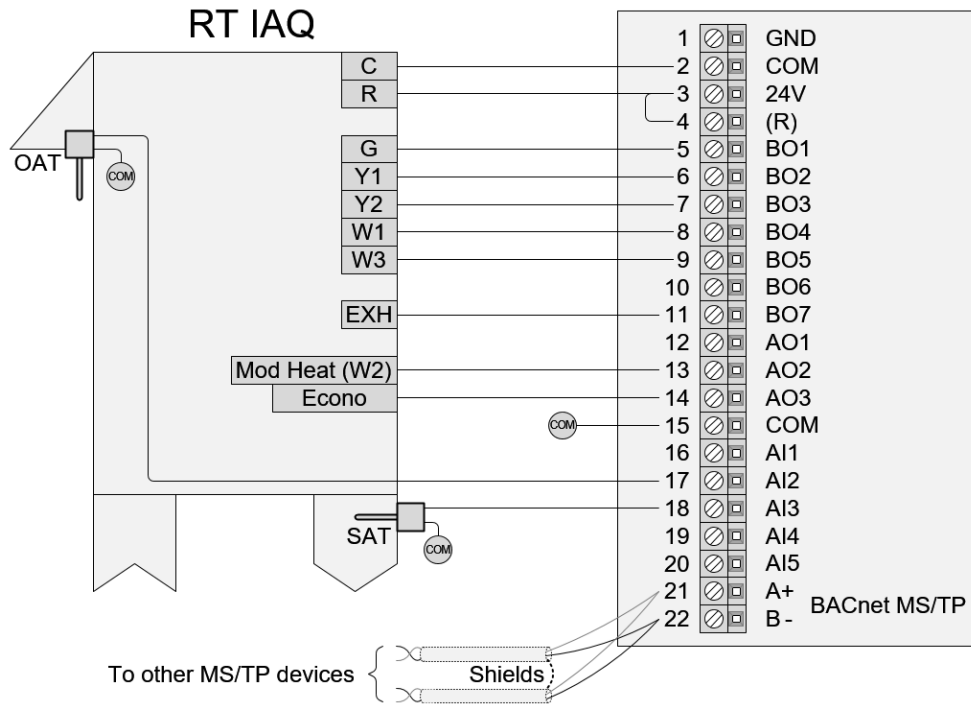

Add a 24VAC transformer when the equipment does not supply the power.

RT IAQ: Sets for an on/off fan, 2 on/off heat, 2 on/off cooling stages with 0-10 VDC economizer RTU unit. *CO2 model needed.*

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) > the economizer authorization value (AV-68): Cooling stages will be energized according to cooling demand AV7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for cooling / System mode is Cooling or Auto and OATemp (AV-29) < the economizer authorization value (AV-68): Cooling stages will not be energized. Cooling will be provided by modulating the economizer's minimum position according to cooling demand AV-7. The supply temperature will be modulated between the economizer center SAT_CTR_Set setpoint AV-57 and the low limit setpoint SAT_LL_Set AV-58.


On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized. On a call for IAQ control due to CO2 levels: The system must be in occupied mode. You must have CO2 model. The fresh air economizer will open based on CO2 levels AI8 against the CO2 setpoint AV-31. The economizer will modulate from its minimum position to its max CO2 AV-66 position level as per settings.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)

Rooftop with 0-10VDC SCR electric heating (RT MOD)

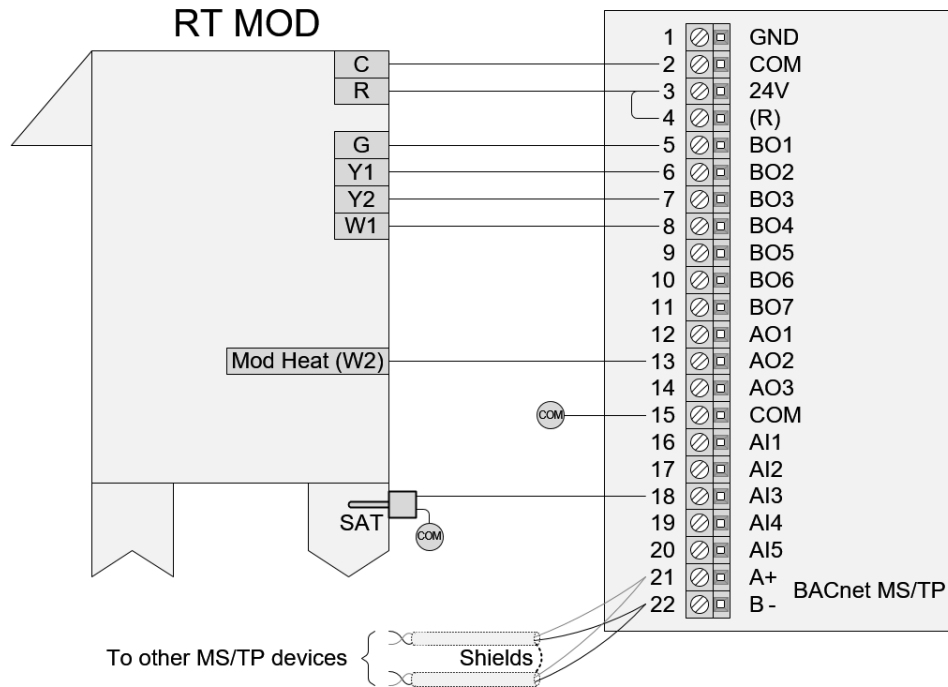

Add a 24VAC transformer when the equipment does not supply the power.

RT MOD: Sets for an on/off fan, 1 on/off heat, 2 on/off cooling stages with 0-10 VDC heating RTU unit.

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto: Cooling stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.


On a call for heating / System mode is Heating or Auto: Modulating heating output and On/Off stage(s) will energize as per % threshold according to heating demand AV-6 values to maintain room temperature. Cooling outputs are not energized.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)

Heat Pump with Dehumidification Output (HP DEH)

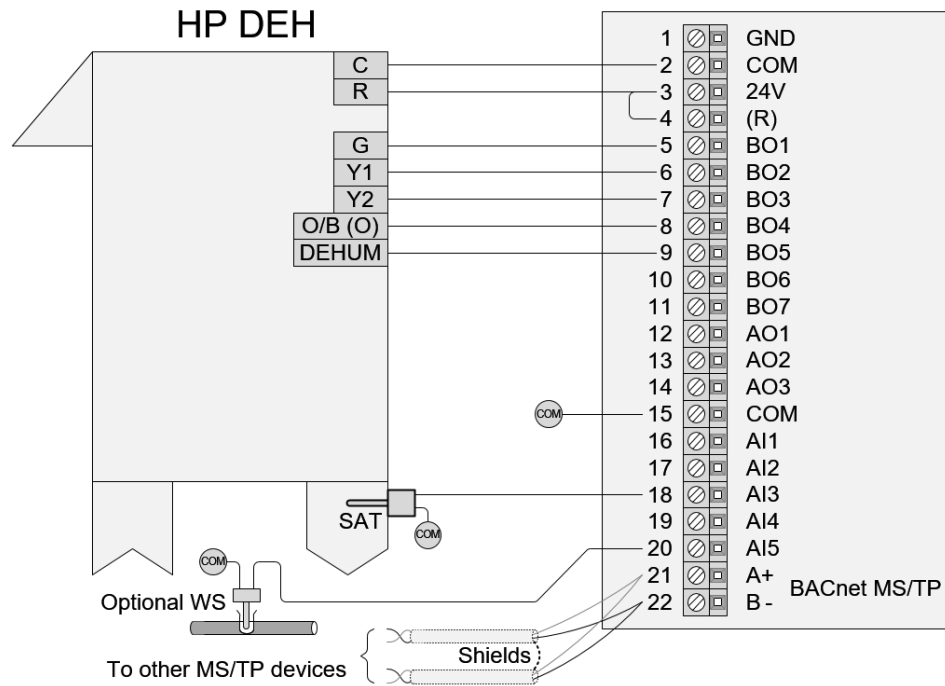

Add a 24VAC transformer when the equipment does not supply the power.

HP DEH: Sets for an on/off fan, 2 on/off heat pump, 1 on/off dehumidification, 1 reversing valve stages HEATPUMP unit.

Notes:

- BO6 is an on/off dehumidification output that follows dehumidification demand.
- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto: The reversing valve will be set in cooling (default O setting). Heat pump stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for heating / System mode is Heating or Auto: The reversing valve will be set in heating / non-energized (default O setting). Heat pump stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature.


Dehumidification Call: Active in any control mode. If the room humidity rises above the dehumidification setpoint, the dehumidification command will be sent to the Heat Pump unit. The dehumidification command will be canceled if the room humidity drops below the dehumidification setpoint.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)

Humidifier-Dehumidifier (HUM-DEH)

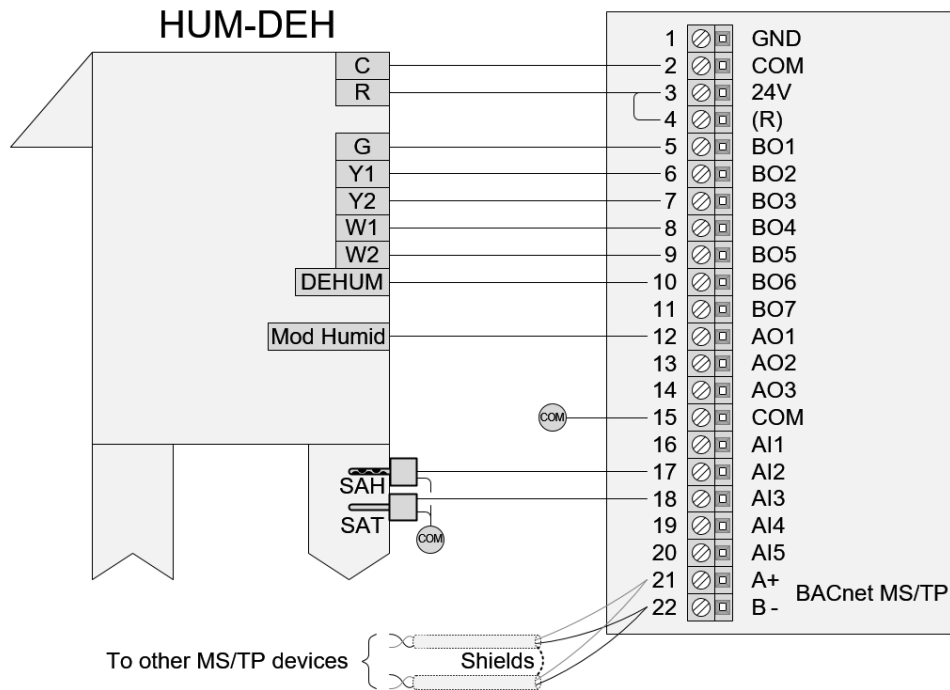

Add a 24VAC transformer when the equipment does not supply the power.

HUM-DEH: Sets for an on/off fan, 2 on/off heat, 2 on/off cooling, 1 on/off dehumidification stage with 0-10 VDC humidifier RTU unit.

Notes:

- BO6 is an on/off dehumidification output that follows dehumidification demand.
- AO1 is a 0-10 VDC humidification output that follows humidification demand.
- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by "OvrTime_Set AV-27".

On a call for cooling / System mode is Cooling or Auto: Cooling stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.

On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized.

Dehumidification Call: Active in any control mode. If the room humidity rises above the dehumidification setpoint, the dehumidification command will be sent to the Heat Pump unit. The dehumidification command will be canceled if the room humidity drops below the dehumidification setpoint.


Humidification Call: Active in heating mode only. The analog modulating humidifier will be modulated to maintain the room humidity setpoint. If a supply humidity sensor [MSV-54 location] is installed, the humidifier will throttle down to prevent the supply humidity from rising above the Supply RH high limit setpoint [AV-54].

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)

Rooftop 3 Stages (RT 3STG)

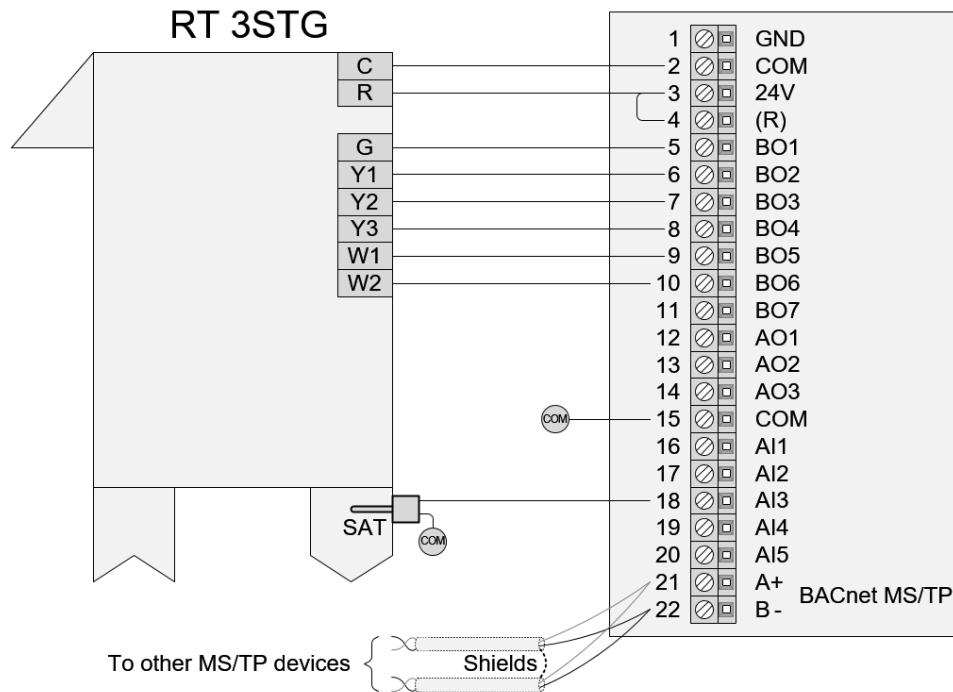

Add a 24VAC transformer when the equipment does not supply the power.

RT 3STG: Sets for an on/off fan, 2 on/off heat & 3 on/off cooling stages RTU unit.

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto: Cooling stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.


On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.

Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)

Rooftop 4 Stages (RT 4STG)

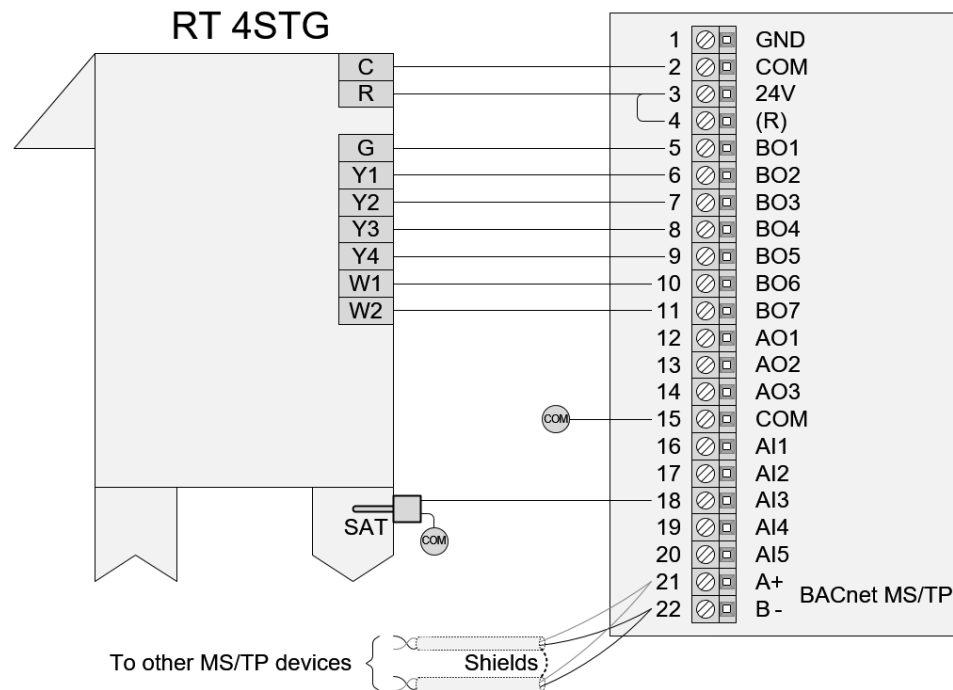

Add a 24VAC transformer when the equipment does not supply the power.

RT 4STG: Sets for an on/off fan, 2 on/off heat & 4 on/off cooling stages RTU unit.

Notes:

- AI's can be configured for various options as per MSV-2, 27, 28, 66 & 67.

Rooftop Unit (RTU)

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime_Set AV-27" parameter.

On a call for cooling / System mode is Cooling or Auto: Cooling stages will be energized according to cooling demand AV-7 as per % threshold values to maintain room temperature. Heating outputs are not energized.


On a call for heating / System mode is Heating or Auto: Heating stages will be energized according to heating demand AV-6 as per % threshold values to maintain room temperature. Cooling outputs are not energized.

Fan operation: The fan will follow the fan mode setting (MSV-4 Fan Mode) in occupied mode. Fan On will make the fan run continuously during occupied hours. Fan Auto will only energize the fan on a call for a heating or cooling stage to be energized.


Note: Fan needs to be running 1 minute before cooling or heating stages can be energized. There is 3 minutes anti-cycling OFF delay on cooling and heating stages. There is 3 minutes delay if switching from cooling stages to heating stages (and vice versa). Also a 1 minute delay between each stage.

Rooftop Unit (RTU)





RTU Control Curves

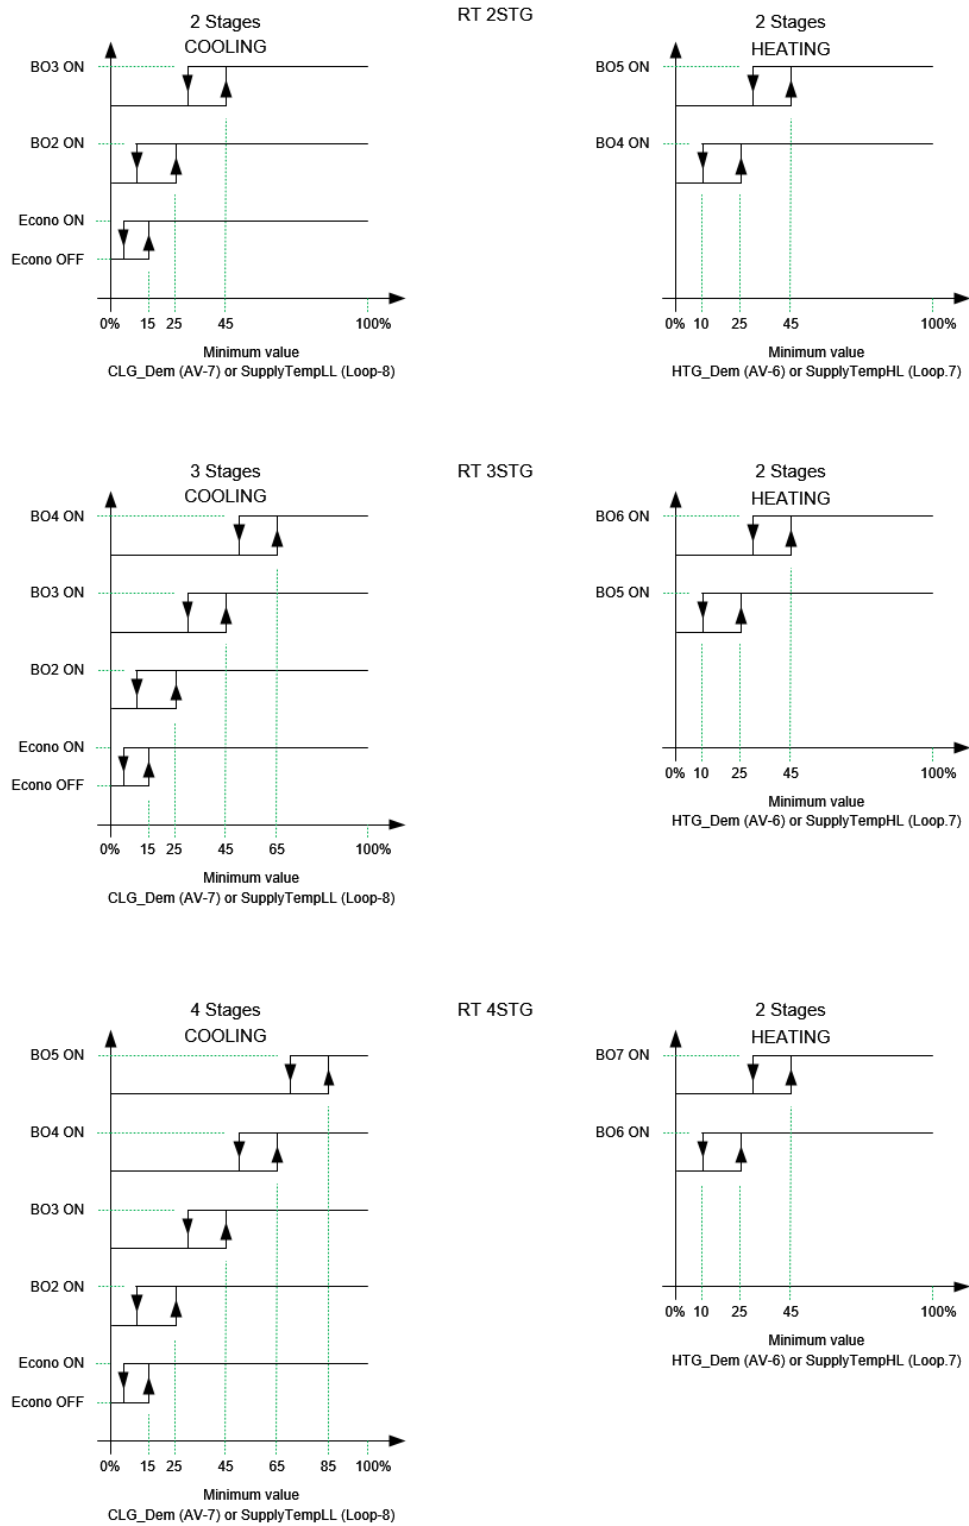

Rooftop Unit (RTU)

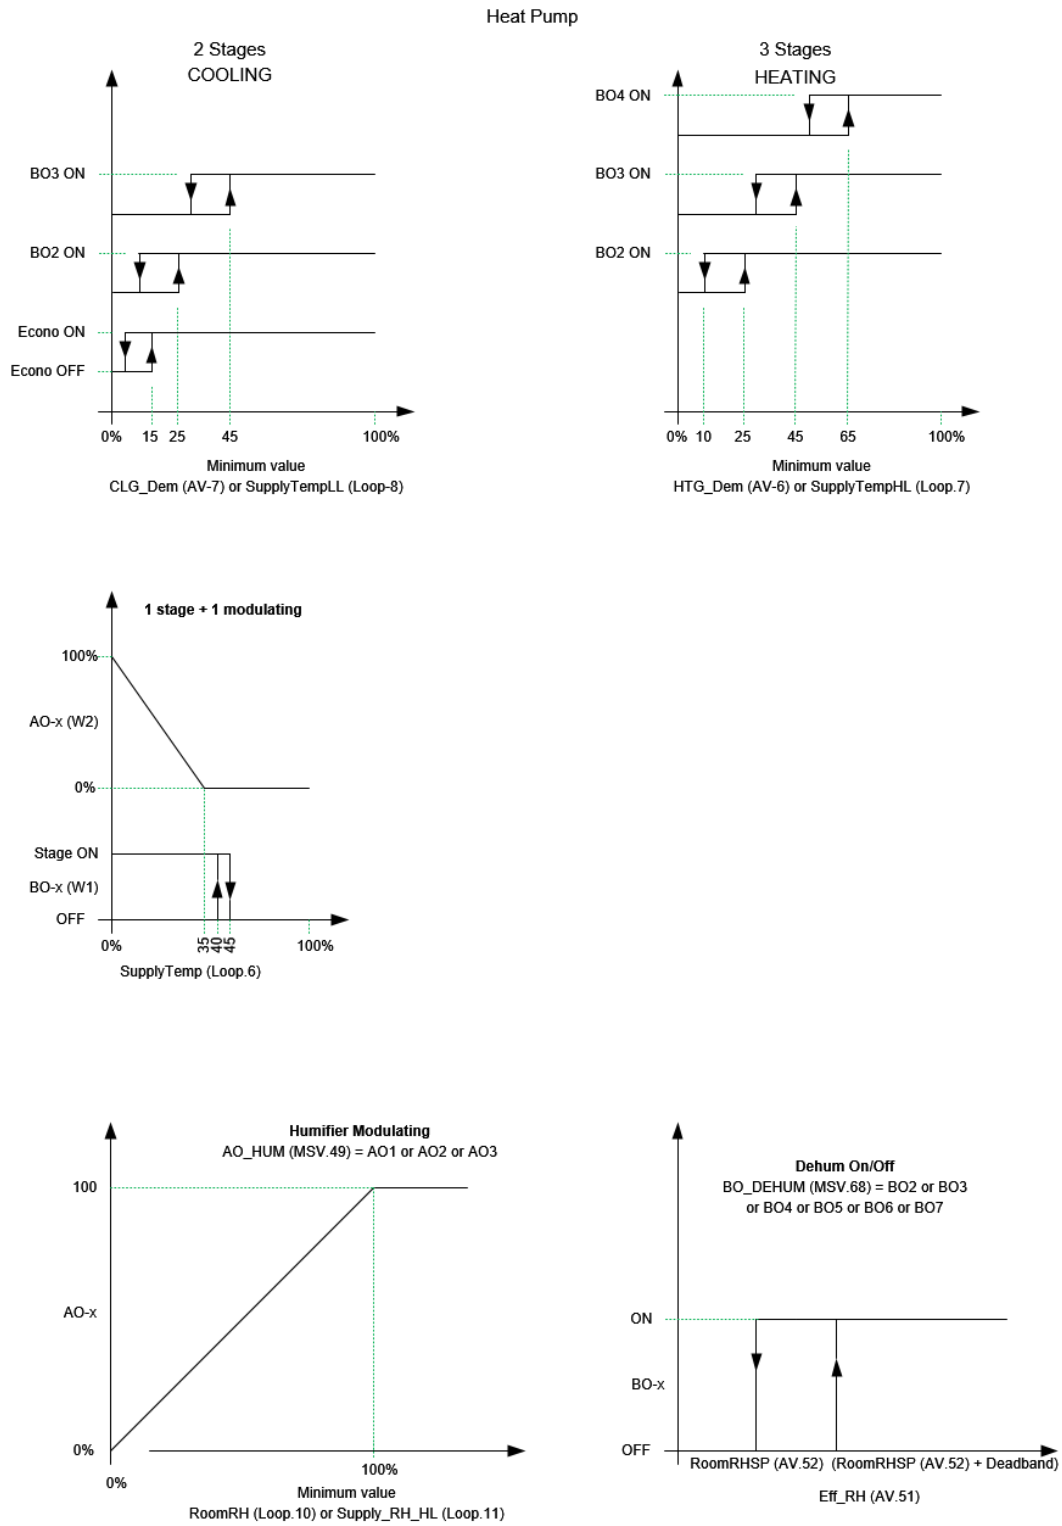

Rooftop Unit (RTU)

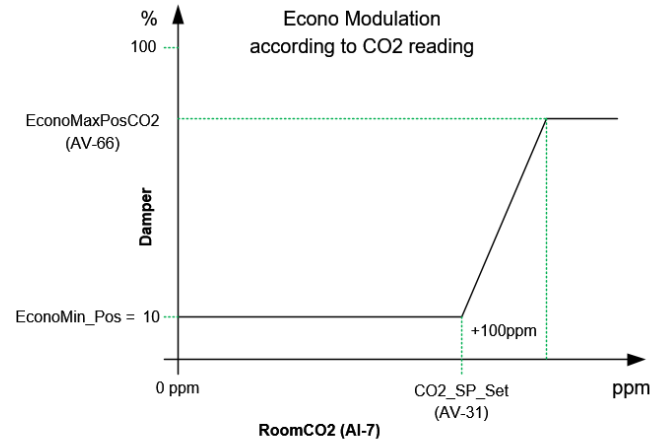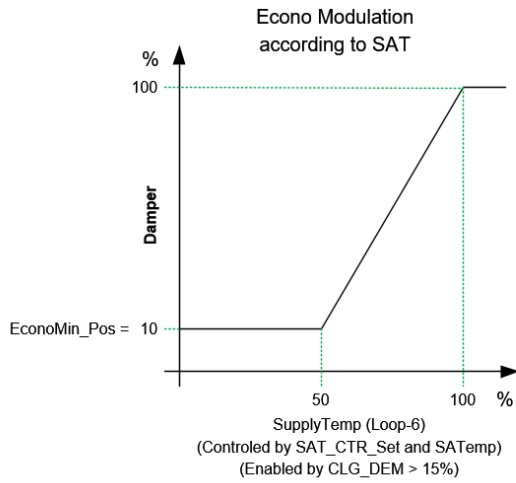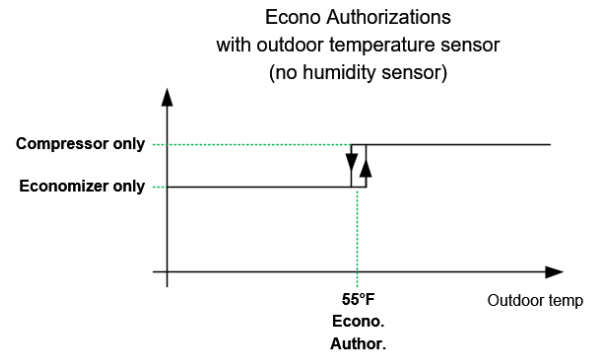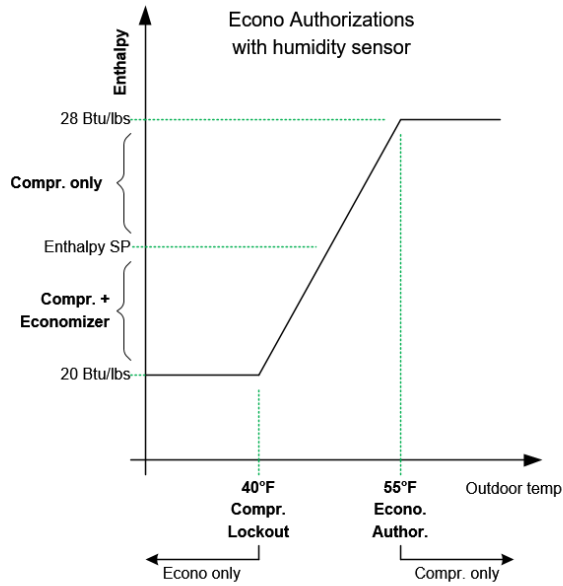

Rooftop Unit (RTU)

Configuration of AI1 and AI2 inputs

CFG_AI1 MSV-66	Physical Input AI1	BACnet Input AI_1	Description	HELP_mess MSV-100	LCD Screen ICON
None	Open	0	No internal action	Normal	
	Contact close	1			
NSB	Open	0	Will force BV-5 (Occ_Sch) to "Off"	Normal	
	Contact close	1	Will force BV-5 (Occ_Sch) to "On"	Normal	
OVR	Open	0	No internal action	Normal	
	Contact close	1	If BV-5 (Occ_Sch) is "Off" then will force MSV-5 (Eff_Occ) to "TempOcc"	Rem NSB Ovr	
FILTER	Open	0	No internal action	Normal	
	Contact close	1	Will display "Filter" icon	Filter	
SERVICE	Open	0	No internal action	Normal	
	Contact close	1	Will display "Service" icon	Service	
FANSTATUS	Open	0	AI1 will monitor Fan feedback. If Fan run and after 1 minute the AI_1 stay at "0", then thermostat enter in "Fan Lock" mode: System stop. The "Service" ICON will be displayed. User will need to select mode "Off", wait 5 sec and put back to Heat, Cool or Auto to restart.	FanInterlock	
	Contact close	1			


CFG_AI2 MSV-67	Physical Input AI2	BACnet Input AI_2	Description	HELP_mess MSV-100	LCD Screen ICON
(same as previous table)					

Rooftop Unit (RTU)


SETUP

Setup Menu

1. Access the Setup Menu by holding the two left buttons and enter pin 1, 2, 3, 4

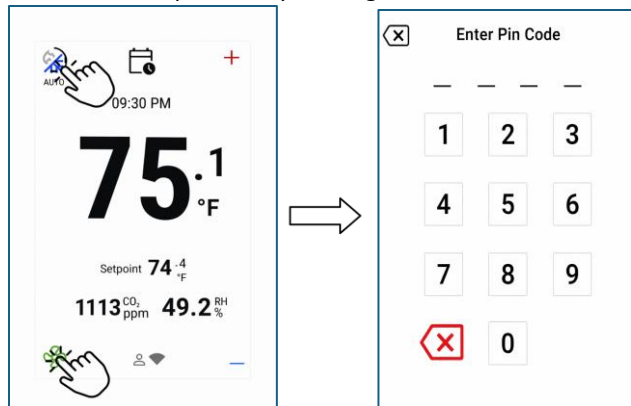

2. From this menu, you can select configuration menu by double clicking on the icons

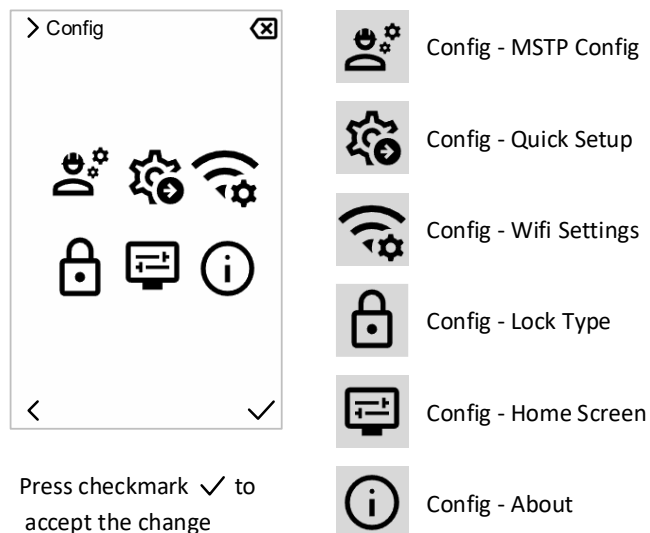

Rooftop Unit (RTU)

3. Config - MSTP Config


MS/TP Configuration Configures the MSTP Properties page to define the global MSTP settings Next page	Address + Device network address 126 Next page	Instance ^ Device ID in BACnet network 0213126 Next page	Baudrate ^ Data transmission speed 76800 Next page
Max. Master + Limit of master devices 127 Next page	Max. Frames + Max frames before passing token 003 Next page	Save  Chose the check mark to confirm your changes, or retreat to the menu without saving Next page	

4. Config – Quick Setup




Welcome to the Quick Setup Configures your thermostat quickly using essential settings for immediate comfort Next page	Preset ^ Select application RT 2STG Next page	CFGsens ^ Remote thermistor 10K Type3 Next page	RT_Cal + Room temperature calib 0.0 Next page
Display_Units ^ Temperature displayed units F Next page	Save  Chose the check mark to confirm your changes, or retreat to the menu without saving Next page		

Rooftop Unit (RTU)

5.  Config – WIFI Settings (Refer to separate document “OpenStat Series - WIFI User Guide” for more info)

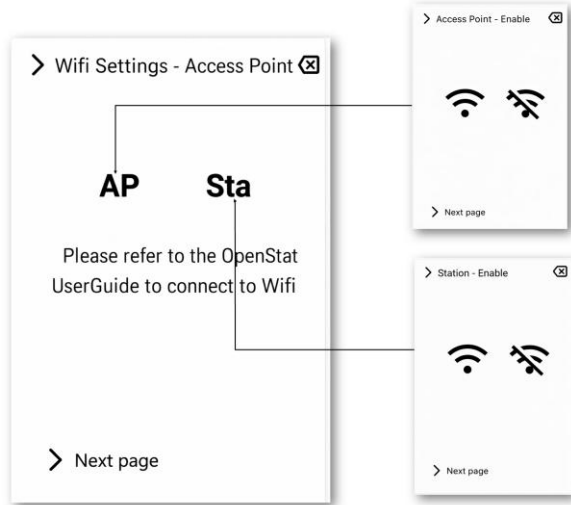

 6.  Config - Lock Type

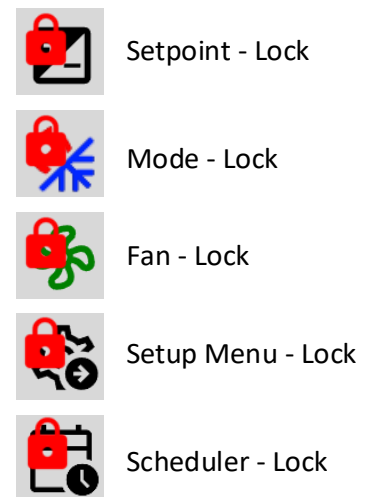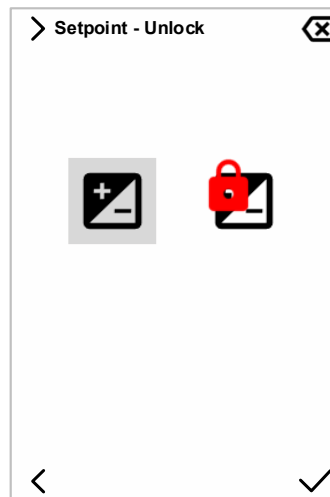

Press checkmark ✓ to accept the change

Rooftop Unit (RTU)

7. Config - Home Screen

> Home Screen - Primary Display ✕

<
✓

➡

> Primary Display - Temperature ✕

<
✓

 Primary Display - Temperature

 Primary Display - Setpoint

 Primary Display - None

Press checkmark ✓ to accept the change

 Home Screen - Primary Display

 Home Screen - Clock (On/Off)

 Home Screen - Unit System (F/C)

 Home Screen - Humidity (On/Off)

 Home Screen - Brightness (after 3 minutes inactivity)

 Home Screen - CO2 (On/Off)

8. Config – About

About ✕

Model Name OST537MHCW-FCU	Device Name OST537_FCU
Addresses IP: 192.168.2.179 MAC: 58:8c:81:4c:cb:f8	BACnet Ports UDP: 47808 MSTP: 126
Versions DLM: 1.10 FW: 1.3.0 HW: 041 A: 1.000 Wifi: 1.0.5-1420	

Rooftop Unit (RTU)

BACNET OBJECTS

Overview

GREEN = Important

No Color = Optional depending on equipment

Recommended: MSVs and AV(s) write at default priority (16), everything else priority 8 to 3

Quick Setup: Presets, units, and service inputs

- **MSV-1** 10K remote sensor type
- **MSV-64** Temperature units
- **MSV-66** AI-1 alarm input
- **MSV-67** AI-2 alarm input
- **MSV-127** Application preset (see the user guide for configurations and I/O)

Fan: Output location and control type

- **MSV-27** Output location and control type
- **AV-21** ECM minimum speed
- **AV-24** Minimum on time

Heating: Stage configuration

- **MSV-16 thru 19** W1 thru W4 control type
- **AV-56** Maximum supply set point at 100% heating demand
- **AV-57** Neutral supply set point

Cooling: Stage configuration

- **MSV-7 thru 10** Y1 thru Y4 control type
- **AV-58** Minimum supply set point at 100% cooling demand

Exhaust Fan: Output and setpoints

- **MSV-32** Exhaust fan output and control type

CO2: Setpoint

- **AV-31** CO2 set point

Humidifier: Sensor and output locations, set points

- **MSV-48** Humidifier output locations (BO)
- **MSV-49** Humidifier output locations (AO)
- **MSV-52** Indoor humidity sensor input
- **MSV-54** Supply air humidity sensor input
- **MSV-55** Supply air humidity sensor input type
- **MSV-68** Dehumidification output location
- **AV-52** Humidify set point
- **AV-54** Supply air humidity high limit set point
- **AV-55** Dehumidify set point

T Set points: Sensor locations and set points

- **MSV-2** Room temperature sensor location
- **MSV-27** Outdoor air temperature sensor location
- **MSV-28** Supply air temperature sensor location
- **MSV-62** Determines how AV-37 deadband is applied to AV-1 set point
- **AV-1** Room temperature set point
- **AV-19** Supply freeze set point
- **AV-33** Minimum cooling set point (AV-1)
- **AV-34** Maximum heating set point (AV-1)
- **AV-37** Room temperature deadband
- **AV-38** Unoccupied cooling set point
- **AV-39** Unoccupied heating set point
- **AV-40** Standby mode cooling offset (positive only)
- **AV-41** Standby mode heating offset (negative only)
- **AV-67** Aux. heating authorization OAT set point

Rooftop Unit (RTU)

Economizer: Control type and setpoints

- **MSV-30** Output location and control type
- **MSV-57** Outdoor humidity sensor input
- **MSV-58** Mixed air temperature input
- **AV-60** Compressor lockout outdoor air temperature setpoint
- **AV-65** Economizer minimum position
- **AV-66** Economizer maximum position when CO2 is above setpoint
- **AV-68** Economizer authorization OAT set point
- **AV-77** Enthalpy setpoint (20-28 BTU/lbs range)
- **AV-78** Mixed air temperature set point

Motion/Override: Location and timer

- **MSV-44** Motion sensor input and control type
- **AV-27** Motion and push button override time

Scheduler: Schedule location

- **MSV-45** Schedule location

PID Loops:

- **Loop-1** Cooling PID
- **Loop-2** Heating PID
- **Loop-6** Supply PID
- **Loop-7** Supply high-limit PID
- **Loop-8** Supply low-limit PID
- **Loop-10** Room humidity PID
- **Loop-11** Supply humidity high limit PID

General Operation and Monitoring: Occupancy, status, and set points

- **MSV-3** System mode (heat, cool, auto, off)
- **MSV-4** Fan mode (auto, on)
- **MSV-100** Help message (alarm status)
- **BV-5** Occupancy schedule (write to for occupancy)
- **AV-1** Room temperature set point
- **AV-6** Heating demand
- **AV-7** Cooling demand
- **AV-9** Effective room temperature
- **AV-16** Supply air temperature
- **AV-29** Outdoor air temperature
- **AV-42** Effective cooling set point
- **AV-43** Effective heating set point
- **AV-51** Room relative humidity

Input and Outputs: Status for inputs and overrides outputs

- **AI-1 thru AI-5** Analog/binary inputs (read-only)
- **AO-1 thru AO-4** Analog outputs
- **BO-1 thru BO-7** Binary outputs

Rooftop Unit (RTU)

Physical Inputs and Outputs

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	DEFAULT VALUE	TAGS	RANGE
BO-1	BO_1	*1	Off	Status	Dependent on MSV-127 config
BO-2	BO_2	*1	On	Status	Dependent on MSV-127 config
BO-3	BO_3	*1	Off	Status	Dependent on MSV-127 config
BO-4	BO_4	*1	Off	Status	Dependent on MSV-127 config
BO-5	BO_5	*1	Off	Status	Dependent on MSV-127 config
BO-6	BO_6	*1	Off	Status	Dependent on MSV-127 config
BO-7	BO_7	*1	Off	Status	Dependent on MSV-127 config
AO-1	AO_1	*1	0%	Status	Dependent on MSV-127 config
AO-2	AO_2	*1	0%	Status	Dependent on MSV-127 config
AO-3	AO_3	*1	0%	Status	Dependent on MSV-127 config
AI-1	AI_1	*2		Status	Dependent on many MSV choices
AI-2	AI_2	*2		Status	Dependent on many MSV choices
AI-3	AI_3	*2		Status	Dependent on many MSV choices
AI-4	AI_4	*2		Status	Dependent on many MSV choices
AI-5	AI_5	*2		Status	Dependent on many MSV choices
AI-6	RoomT	Room temperature	N/A	Status	32-122°F (0-50°C)
AI-7	RoomRH	Room humidity	N/A	Status	5-90%
AI-8 *3	RoomCO2	Room CO2		Status	0-2000 PPM
BI-1	Motion	Motion detection	Off	Status	On / Off

*1 The configuration of MSV-127 automatically generates BACnet object descriptions for all the BOs and AOs and will refresh automatically when BV-4 = On.



*2 BACnet object descriptions will be autogenerated according to miscellaneous MSV choices selected (when BV-4 = On)

Objects tagged as **Status** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

*3 RoomCO2 only available on "C" models like "OST537MHC"

Analog Values (AV)

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
AV-1	RoomTSP	Room Temperature setpoint	Cfg	72°F (22°C)	54-90°F (12-32°C)
AV-6	HTG_Dem	Heating demand	Status	---	0-100%
AV-7	CLG_Dem	Cooling demand	Status	---	0-100%
AV-9	Eff_T	Effective temperature used for control	Status	---	-40-122°F (-40-50°C)
AV-16	SATemp	Supply air temperature	Status	---	-40-122°F (-40-50°C)
AV-19	SATFRSP_Set	Set supply freezing temperature	Cfg	38°F (3°C)	-40-122°F (-40-50°C)
AV-21	ECM_min_Set	Fan analog min. output	Cfg	0%	0-100%
AV-24	Fan_MinOn_Time	Fan minimum ON time	Cfg	1 min	0-60 min
AV-27	OvrTime_Set	Set occupancy override time	Cfg	60 min	0-480 min
AV-29	OATemp	Outdoor air temperature	Status	---	-40-122°F (-40-50°C)
AV-31	CO2_SP_Set	Set CO2 Setpoint	Cfg	800 PPM	0-2000 PPM
AV-33	MinCLSP	Set minimum cooling setpoint	Cfg	59°F (15°C)	54-100°F (12-37.5°C)
AV-34	MaxHTSP	Set maximum heating setpoint	Cfg	82°F (28°C)	40-90°F (4.5-32°C)
AV-35	OccCLSP	Set occupied cooling setpoint	Status	73°F (23°C)	
AV-36	OccHTSP	Set occupied heating setpoint	Status	71°F (21°C)	
AV-37	SP_DB_Set	Set deadband	Cfg	2°	2 to 5°
AV-38	Unoc_CL_Set	Set unoccupied cooling setpoint	Cfg	79°F (26°C)	
AV-39	Unoc_HT_Set	Set unoccupied heating setpoint	Cfg	65°F (18°C)	
AV-40	STBCoolOffset	Set standby cooling offset (+)	Cfg	+ 2°	2 to 5°
AV-41	STBHeatOffset	Set standby heating offset (-)	Cfg	- 2°	-2 to -5°
AV-42	EffCLSP	Effective cooling setpoint	Status	---	
AV-43	EffHTSP	Effective heating setpoint	Status	---	
AV-50	RT_Cal	Room temperature calib	Cfg	0.0	-5.0 to 5.0
AV-51	Eff_RH	Effective humidity used for control	Status	---	0-100%
AV-52	HUM_SP	Set humidity setpoint	Cfg	25%	0-100%
AV-53	SAH	Supply humidity reading	Status	---	0-100%
AV-54	SAH_HL_Set	Supply humidity high limit setpoint	Cfg	75%	50-98%
AV-55	DEH_SP	Set dehum setpoint	Cfg	60%	0-100%
AV-56	SAT_HL_Set	Set supply air high limit setpoint	Cfg	104°F (40°C)	0.0-140°F (0.0-60°C)
AV-57	SAT_CTR_Set	Set supply air neutral setpoint	Cfg	68°F (20°C)	0.0-140°F (0.0-60°C)
AV-58	SAT_LL_Set	Set supply air low limit setpoint	Cfg	55°F (13°C)	0.0-140°F (0.0-60°C)
AV-59	Eff_SAT	Effective supply air calc. setpoint	Status	---	0.0-140°F (0.0-60°C)
AV-60	ComprLockout	Compressor Lockout	Cfg	40°F (4°C)	0.0-140°F (0.0-60°C)
AV-65	EconoMin_Pos	Eco min position	Cfg	10%	0-100%

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
AV-66	EconoMaxCO2Pos	Econo max position (for CO2)	Cfg	100%	0-100%
AV-67	OATheatOutAuth	Heating authorization (from OAT)	Cfg	70°F (13°C)	0.0-140°F (0.0-60°C)
AV-68	OATeconOutAuth	Economizer authorization (from OAT)	Cfg	50°F (13°C)	0.0-140°F (0.0-60°C)
AV-75	OAH	Outside air humidity	Status	---	0-100%
AV-76	OAE	Outside air enthalpy	Status	---	10-55 BTU/lbs
AV-77	EnthSP	Enthalpy setpoint	Cfg	22 BTU/lbs	20-28 BTU/lbs
AV-78	MATSP	Mixed air temperature for economizer	Cfg	65°F (18°C)	0.0-140°F (0.0-60°C)
AV-79	MAT	Mixed air temperature	Status	---	0.0-140°F (0.0-60°C)

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

Binary Values (BV)

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	INACTIVE / ACTIVE TEXT
BV-2	OVRSTAT	Occupancy override status	Status	Normal	Normal / Override
BV-3	Mot_Det	Motion detection	Status	None	None / Moving
BV-4	AutogenDesc	Autogenerate I/O descriptions	Cfg	On	Off / On
BV-5	Occ_Sch	System occupancy schedule	Status	On	Off / On
BV-7	Freeze_Status	Freeze condition status	Status	Normal	Normal / Active
BV-8	Free_CL_Status	Free cooling authorization status	Status	---	No / Yes
BV-21	EnthalpyAuth	Enthalpy Authorize	Status	---	No / Yes

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

Multi-State Values (MSV)

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-1	CFGsens	Remote thermistor 10K	Cfg	Type 3	Type 3 Type 2
MSV-2	AI_RS	Select room temperature input	Cfg	Intern	Intern AI-1 AI-2 AI-3 AI-4 AI-5
MSV-3	MODE	System mode	Cfg	Off	Off Auto Cool Heat
MSV-4	FAN	Set fan mode	Cfg	Auto	On Auto
MSV-5	Eff_Occ	Effective occupancy mode	Status	---	Occupied Unoccup TempOcc Standby
MSV-6	Occ_Cmd	Occupancy command	Cfg	Loc-Occ	Loc-Occ Occupied Unoccup None Off-On
MSV-7	CFG_Y1	Set cooling output 1 operation	Cfg	None	0-10V DA (<i>direct</i>) 0-10V RA (<i>reversed</i>) 2-10V DA (<i>direct</i>) 2-10V RA (<i>reversed</i>) Pulsed DA (<i>direct</i>) Pulsed RA (<i>reversed</i>)
MSV-8	CFG_Y2	Set cooling output 2 operation	Cfg	None	<i>Same as above</i>
MSV-9	CFG_Y3	Set cooling output 3 operation	Cfg	None	None Off-On
MSV-10	CFG_Y4	Set cooling output 4 operation	Cfg	None	None Off-On
MSV-16	CFG_W1	Set heating output 1 operation	Cfg	None	None Off-On 0-10V DA (<i>direct</i>) 0-10V RA (<i>reversed</i>) 2-10V DA (<i>direct</i>) 2-10V RA (<i>reversed</i>) Pulsed DA (<i>direct</i>) Pulsed RA (<i>reversed</i>) O (O/B) B (O/B)
MSV-17	CFG_W2	Set heating output 2 operation	Cfg	None	<i>Same as above</i>
MSV-18	CFG_W3	Set heating output 3 operation	Cfg	None	None Off-On

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-19	CFG_W4	Set heating output 4 operation	Cfg	None	None Off-On
MSV-23	CFG_FAN	Select fan output	Cfg	BO1	BO-1 BO-2 AO-1 AO-2 BO-1 & AO-1 BO-1 & AO-2
MSV-27	AI_OAT	Select outside air temp. input	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5 External
MSV-28	AI_SAT	Select supply air temp. input	Cfg	None	<i>Same as above</i>
MSV-30	AO_ECO	Select economizer output	Cfg	None	None BO-5 BO-6 BO-7 AO-1 AO-2 AO-3
MSV-32	CFG_EXH	Select power exhaust output	Cfg	None	None BO-6 BO-7 AO-3 BO-6 & AO-3 BO-7 & AO-3
MSV-44	BI_PIR	Select PIR Motion sensor input	Cfg	Intern	None NO, AI1 (BI) NC, AI1 (BI) NO, AI2 (BI) NC, AI2 (BI) NO, AI3 (BI) NC, AI3 (BI) NO, AI4 (BI) NC, AI4 (BI) External Intern
MSV-45	BI_SCH_Input	Select schedule input	Cfg	None (ON)	None (Off) None (On) Scheduler AI-1 AI-2 AI-3 AI-4 AI-5 External

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-48	BO_HUM	Select humidifier BO output	Cfg	None	None BO-2 BO-3 BO-4 BO-5 BO-6 BO-7 BO-5 & BO-6 (<i>Two stages</i>) BO-6 & BO-7 (<i>Two stages</i>)
MSV-49	AO_HUM	Select humidifier AO output	Cfg	None	None AO-1 AO-2 AO-3
MSV-52	AI_RH	Select room humidity input	Cfg	Intern	None AI-1 AI-2 AI-3 AI-4 AI-5 External Intern
MSV-54	AI_SRH	Select supply humidity input	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5 External
MSV-55	AIC_SRH	Set supply humidity input signal	Cfg	0-10V	0-10V 2-10V
MSV-57	OAH_Loc	Outside humidity physical input loc.	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5 External Intern
MSV-58	MAT_Loc	Mixed air temperature sensor loc.	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5 External
MSV-62	CFGSetp	Room setpoint displayed	Cfg	Center	Heat SP Center Cool SP

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-65	BO_OCC	Select occupied output	Cfg	None	None BO-2 BO-3 BO-4 BO-5 BO-6 BO-7 AO-1 AO-2 AO-3
MSV-66	AI1_CFG	Select predefined AI1 logic	Cfg	None	None NSB OVR FILTER SERVICE FANSTATUS
MSV-67	AI2_CFG	Select predefined AI2 logic	Cfg	None	None NSB OVR FILTER SERVICE FANSTATUS
MSV-68	BO_DEHU	Select dehumidification output	Cfg	None	None BO-2 BO-3 BO-4 BO-5 BO-6 BO-7
MSV-70	PB	CFG Heating/cooling proportional band	Cfg	5F 2.2C	3F 1.2C 4F 1.7C 5F 2.2C 6F 2.8C 7F 3.3C 8F 3.5C 9F 5.0C 10F 5.6C
MSV-100	HELP_mess	Help message	Status	Normal	Normal FanLock SupplyFrozen Service Filter Rem NSB Ovr
MSV-127	Preset	Select application	Cfg	RT 2STG	RT 2STG RT ECON HP 2STG RT IAQ RT MOD HP DEH HUM-DEH RT 3STG RT 4STG HP 3STG
MSV-200	Brightness	Brightness Control	Cfg	Med	Low Med-Low Med

OBJECT INSTANCE	RTU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-201	BgColor	Background Color	Cfg	White	White Orange Blue Green Red
MSV-202	LockTemp	Main Display	Cfg	Temp	Temp Setpoint Nothing
MSV-203	Language	Language selection	Cfg	English	English
MSV-204	Display_Units	Temperature displayed units	Cfg	F	C F
MSV-205	System_Unit	System/Database Unit	Cfg	Imperial	Metric/Imperial
MSV-221	Radar_Status	Radar_status	Cfg	Enable	Disable/Enable
MSV-223	Detection_range	Detection_range	Cfg	5_m	1_m to 7_m
MSV-235	Radar_Freq	pll_frequency_word	Cfg	---	Channel 1 to 8
MSV-244	Sensitivity	duty_cycle_repetition_r	Cfg	Medium	Low Medium High very-high



MSV-7, 8, 9, 10, 16, 17, 18, 19, 23, 27, 28, 30, 32, 44, 45, 48, 49, 52, 54, 55, 65 & 68 are used for "custom" configuration applications. Make sure MSV127 is set to "custom" **BEFORE** setting any of those MSVs

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

Loop(s)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
LOOP-1	RoomT_Cool	Room temp cooling control loop	Status		0-100%
LOOP-2	RoomT_heat	Room temp heating control loop	Status		0-100%
LOOP-6	SupplyTemp	Supply temp control loop	Status		0-100%
LOOP-7	SupplyTempHL	Supply temp high limit control loop	Status		0-100%
LOOP-8	SupplyTempLL	Supply temp low limit control loop	Status		0-100%
LOOP-10	Room_RH	Room RH control loop	Status		0-100%
LOOP-11	Supply_RH_HL	Supply RH hi limit control loop	Status		0-100%
LOOP-12	PidMAT	Mix air T control for economizer	Status		0-100%

Default values:

Loop-1 : Kp = 20, Ki = 0.05, Bias = 0%

Loop-2 : Kp = 20, Ki = 0.05, Bias = 0%

Loop-6 : Kp = 5, Ki = 0.1, Bias = 50%

Loop-7 : Kp = 5, Ki = 0.1, Bias = 50%

Loop-8 : Kp = 20, Ki = 0.05, Bias = 0%

Loop-10 : Kp = 20, Ki = 0.05, Bias = 0%

Loop-11 : Kp = 10, Ki = 0.05, Bias = 0%

Loop-12 : Kp = 5, Ki = 0.1, Bias = 50%

Schedule

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
SCH-1	OccSchedule	Occupancy schedule	Cfg	Inactive	Inactive / Active

Fan Coil Unit (FCU)

WIRING

FCU Select Your Equipment

[4 Pipes – Modulating 0-10 VDC Valves](#)

[4 Pipes – Floating valves](#)

[4 Pipes – On/Off N.C. Valves](#)

[4 Pipes – On/Off N.O. Valves](#)

[2 Pipes – Modulating 0-10 VDC Valves](#)

[2 Pipes – Floating Valves](#)

[2 Pipes – On/Off N.C.](#)

[2 Pipes – On/Off N.O.](#)

[Fan Control – ECM \(0-10VDC\) MSV58 = On-Auto](#)

[Fan Control – 3 Speed Fans MSV58 = L-M-H](#)

[Fan Control – 2 Speed Fans MSV58 = L-H](#)

[Fan Control – Single Speed Fans MSV58 = On-Auto](#)

Connector	I/O id	BACnet Name	4 Pipes 0-10Vdc Valves	4 Pipes Floating Valves	4 Pipes N.C. Valves	4 Pipes N.O. Valves	2 Pipes 0-10Vdc Valves	2 Pipes Floating Valves	2 Pipes N.C. Valves	2 Pipes N.O. Valves	Fan ECM 0-10Vdc	Fan 3 Speeds	Fan 2 Speeds	Fan 1 Speed
1	GND													
2	COM													
3	24V													
4	(R)													
5	BO1	BO_1		Open Cool	Cool N.C. Valve			Open Cool/heat	Cool/Heat N.C. Valve					
6	BO2	BO_2		Close Cool		Cool N.O. Valve		Close Cool/Heat		Cool/Heat N.C. Valve				
7	BO3	BO_3		Open Heat	Heat N.C. Valve									
8	BO4	BO_4		Open Heat		Heat N.O. Valve	Auxiliary Reheat							
9	BO5	BO_5	Fan High									Fan High	Fan High	Fan High
10	BO6	BO_6	Fan Med									Fan Med		
11	BO7	BO_7	Fan Low									Fan Low	Fan Low	
12	AO1	AO_1	Fan ECM								Fan ECM			
13	AO2	AO_2	Cool				Cool/Heat							
14	AO3	AO_3	Heat											
15	AI COM													
16	AI1	AI_1	Options AI1: Remote NSB, Motion N.O., Motion, N.C., Window contact											
17	AI2	AI_2	Options AI2: Door contact, Override, Filter, Service											
18	AI3	AI_3	Options AI3: Changeover contact (COC) Normally heat, (COC) Normally cool, Changeover sensor (COS) 10K type 3, Supply sensor (SS) 10K type 3											
19	AI4	AI_4	Option remote room temperature sensor (auto detect)											
20	AI5	AI_5	Option Fan Status Configure MSV-50											
21	A+ MS/TP													
22	B- MS/TP													

Fan Coil Unit (FCU) – Wiring

4 Pipes – Modulating 0-10 VDC Valves

Sequence of operation


Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter.

Cooling Call: The cooling valve will be modulated to maintain room temperature. The heating valve is closed.

Heating Call: The heating valve will be modulated to maintain room temperature. The cooling valve is closed.

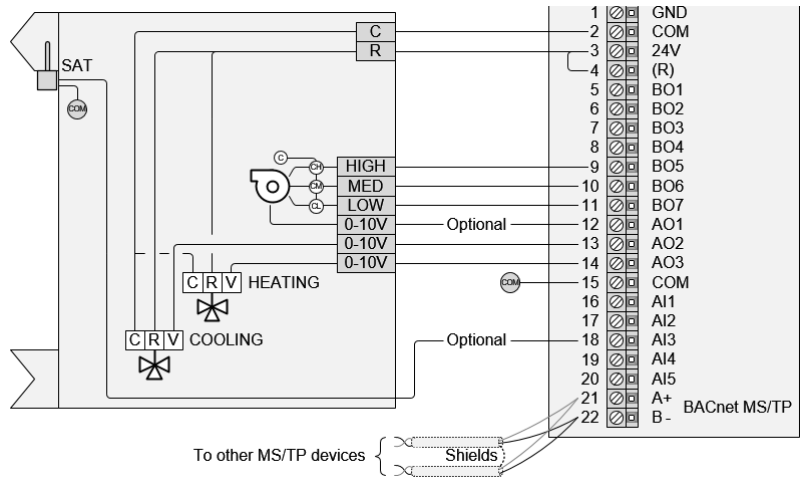

Add a 24VAC transformer when the equipment does not supply the power.



Important: VALVCTL (BV-75) must be set to "Floating".



For more information:

[FCU Configuration and System Mode](#)

Fan Coil Unit (FCU) – Wiring

4 Pipes – Floating valves

Sequence of operation


Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter

Cooling Call: The cooling valve will be modulated to maintain room temperature. The heating valve is closed.

Heating Call: The heating valve will be modulated to maintain room temperature. The cooling valve is closed.

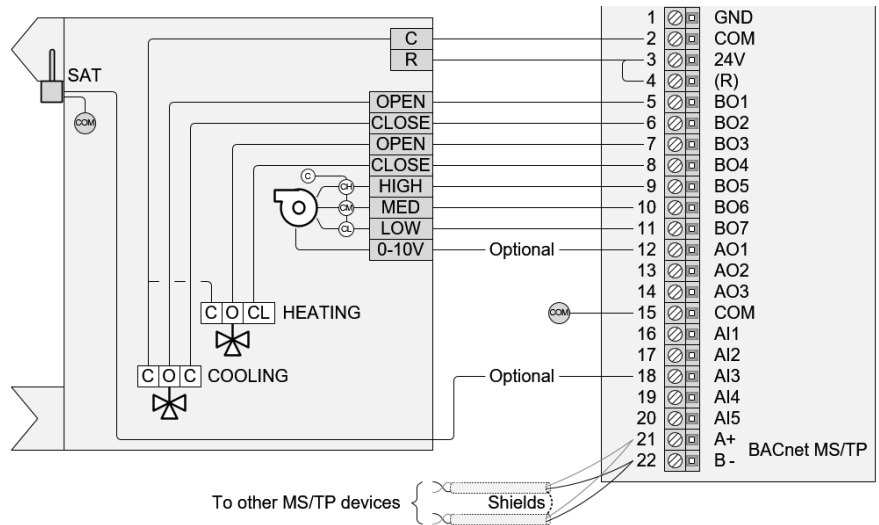

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

4 Pipes – On/Off N.C. Valves

Sequence of operation


Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter.

Cooling Call: The cooling valve will open to maintain room temperature. The heating valve is closed.

Heating Call: The heating valve will open to maintain room temperature. The cooling valve is closed.

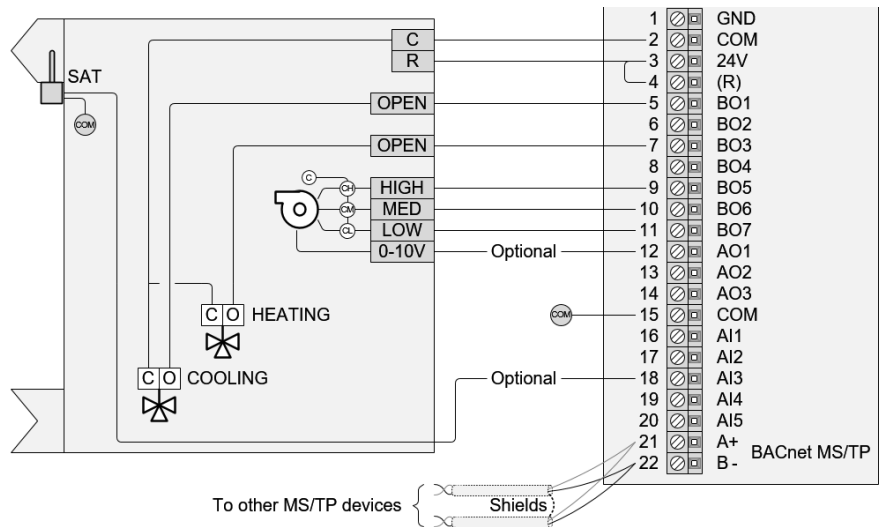

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

4 Pipes – On/Off N.O. Valves

Sequence of operation


Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter.

Cooling Call: The cooling valve will open to maintain room temperature. The heating valve is closed.

Heating Call: The heating valve will open to maintain room temperature. The cooling valve is closed.

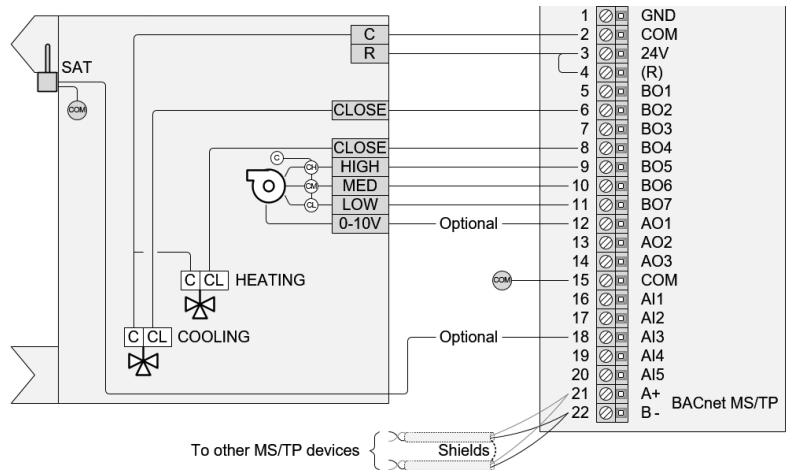

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

2 Pipes – Modulating 0-10 VDC Valves

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.


Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter.

Cooling Call: If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will be modulated to maintain room temperature. If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will close.

Heating Call: If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will be modulated to maintain room temperature. If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will close.

Aux Reheat: If heat demand reaches 100% the BO4 will energize. BO4 will de-energize when heat demand drops below 55%. Between 55% and 100% the BO4 will cycle proportionally according to HT_CPH (MSV-78).

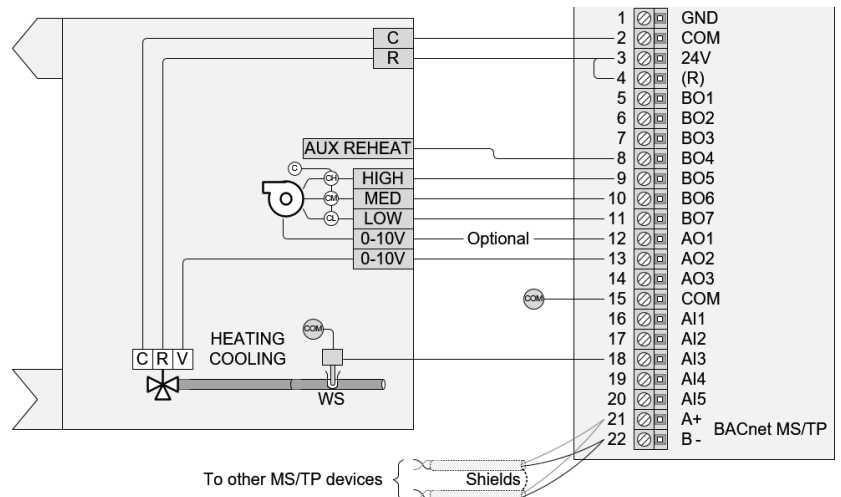

Add a 24VAC transformer when the equipment does not supply the power.



Important: VALVCTL (BV-75) must be set to "Floating".



For more information:

[FCU Configuration and System Mode](#)

Fan Coil Unit (FCU) – Wiring

2 Pipes – Floating Valves

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.


Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter

Cooling Call: If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will be modulated to maintain room temperature. If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will close.

Heating Call: If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will be modulated to maintain room temperature. If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will close

Aux Reheat: If heat demand reaches 100% the BO4 will energize. BO4 will de-energize when heat demand drops below 55%. Between 55% and 100% the BO4 will cycle proportionally according to HT_CPH (MSV-78).

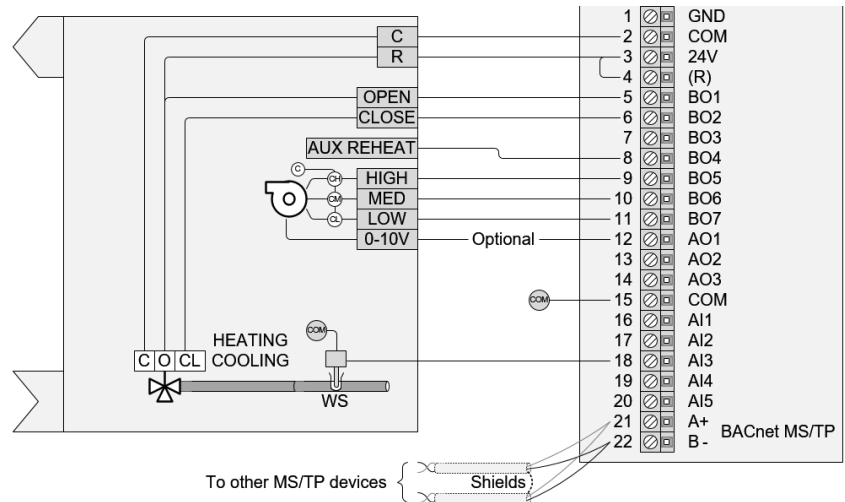

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.

Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.


Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter

Cooling Call: If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will open to maintain room temperature. If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will close.

Heating Call: If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will open to maintain room temperature. If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will close.

Aux Reheat: If heat demand reaches 100% the BO4 will energize. BO4 will de-energize when heat demand drops below 55%. Between 55% and 100% the BO4 will cycle proportionally according to HT_CPH (MSV-78).

2 Pipes – On/Off N.C.

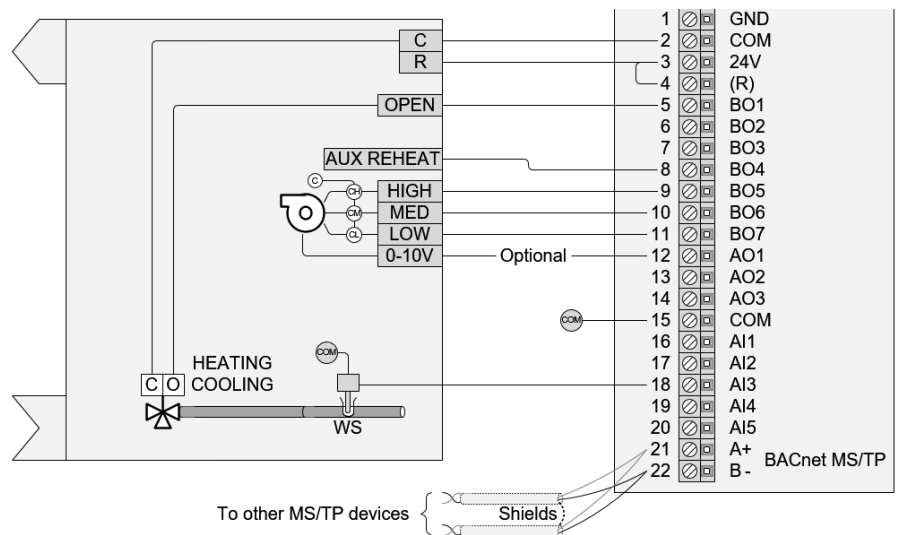

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

2 Pipes – On/Off N.O.

Sequence of operation

Occupied Mode: Setpoints will revert to those defined by occupied cooling and heating setpoints.


Unoccupied Mode: Setpoints will revert to those defined by unoccupied heating and cooling setpoints.

Occupied Override Mode: The system will revert to occupied mode for the duration determined by the "OvrTime" parameter

Cooling Call: If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will open to maintain room temperature. If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will close.

Heating Call: If the supply water temperature exceeds 65°F (18.5°C) AV-13, the valve will open to maintain room temperature. If the supply water temperature is less than 63°F (17.0°C) AV-13, the valve will close.

Aux Reheat: If heat demand reaches 100% the BO4 will energize. BO4 will de-energize when heat demand drops below 55%. Between 55% and 100% the BO4 will cycle proportionally according to HT_CPH (MSV-78).

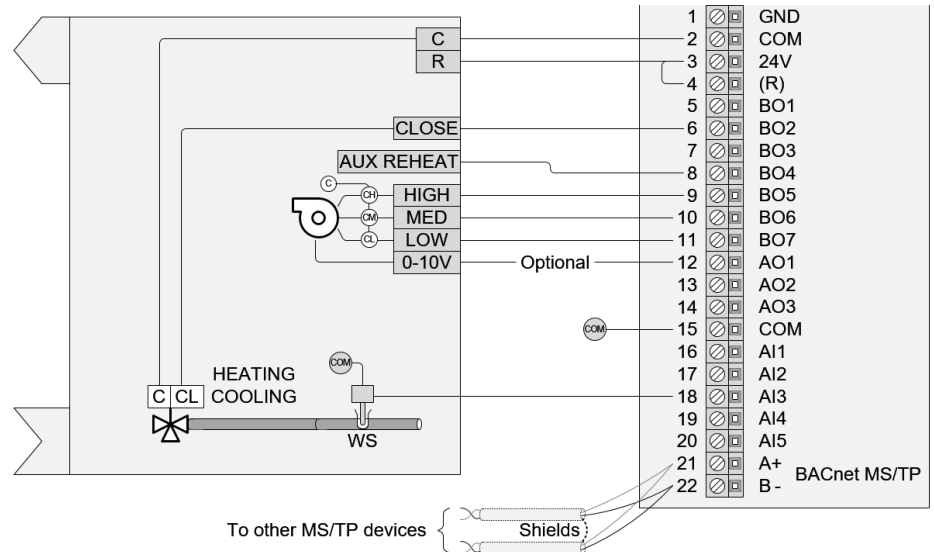

Add a 24VAC transformer when the power is not supplied by the equipment.

Fan Coil Unit (FCU) – Wiring

Fan Control – ECM (0-10VDC) MSV-58 = On-Auto

Fan sequence of operation

Occupied Mode:


Fan = **Auto** mode will modulate the fan from the minimum set fan speed (AV-25 ECM_min) to 100% simultaneously with the main PI cooling and heating demand.

With the fan mode set to **ON**, the fan will drive directly to 100% demand.

In the controller deadband between heating and cooling setpoints, Auto demand (Keepfan BV-66) = Fan Low allows the fan to stay at the minimum set fan speed, and (Keepfan BV-66) = Fan Off will shut down the fan completely.

Unoccupied Mode:

The fan will always operate in Auto mode during Unoccupied periods.

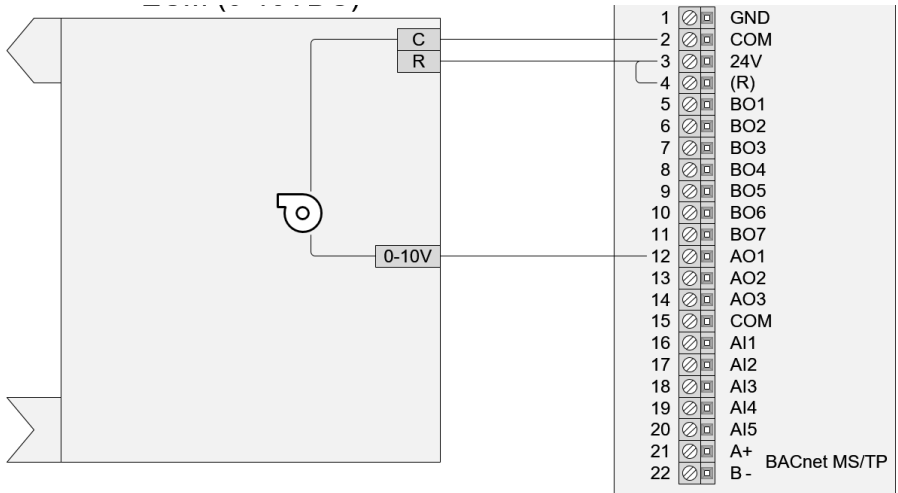

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

Fan Control – 3 Speed Fans MSV-58 = L-M-H

Occupied Mode:

With the fan mode set to **Low**, the fan will drive to Low speed.


With the fan mode set to **Medium**, the fan will drive to Medium speed.

With the fan mode set to **High**, the fan will drive to High speed.

In the controller deadband between heating and cooling setpoints, Auto demand (Keepfan BV-66) = FanLow allows the fan to stay at Low fan speed, and (Keepfan BV-66) = FanOff will shut down the fan completely.

Unoccupied Mode:

The fan will always operate in Auto mode during Unoccupied periods.

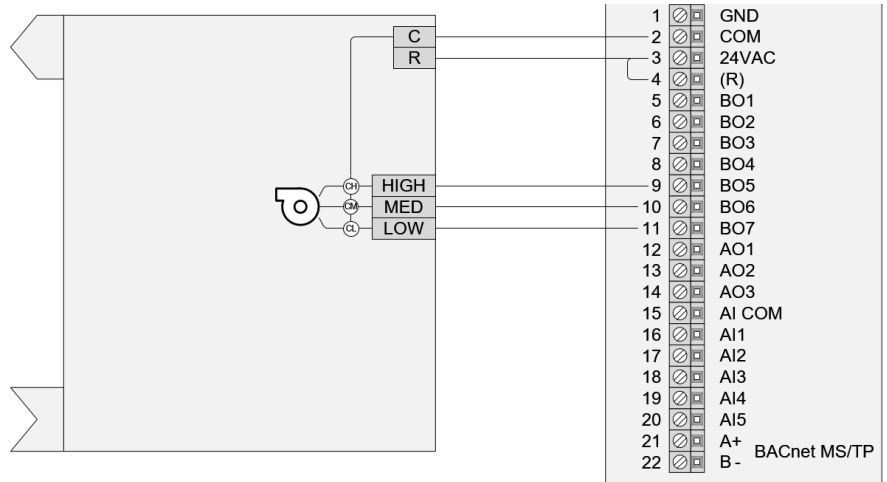

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

Fan Control – 2 Speed Fans MSV-58 = L-H

Fan sequence of operation

Occupied Mode:


With the fan mode set to **Low**, the fan will drive to Low speed.

With the fan mode set to **High**, the fan will drive to High speed.

In the controller deadband between heating and cooling setpoints, Auto demand (Keepfan BV-66) = FanLow allows the fan to stay at Low fan speed, and (Keepfan BV-66) = FanOff will shut down the fan completely.

Unoccupied Mode:


The fan will always operate in Auto mode during Unoccupied periods

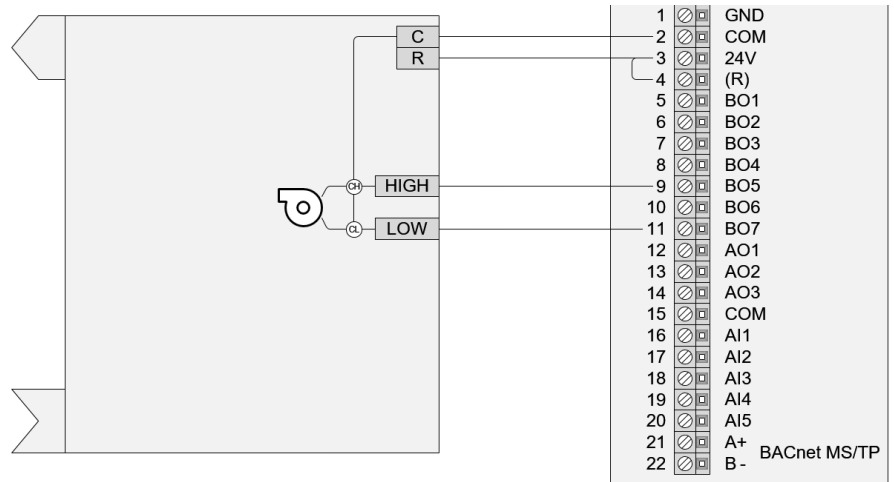

Add a 24VAC transformer when the equipment does not supply the power.

Fan Coil Unit (FCU) – Wiring

Fan Control – Single Speed Fans MSV-58 = On-Auto

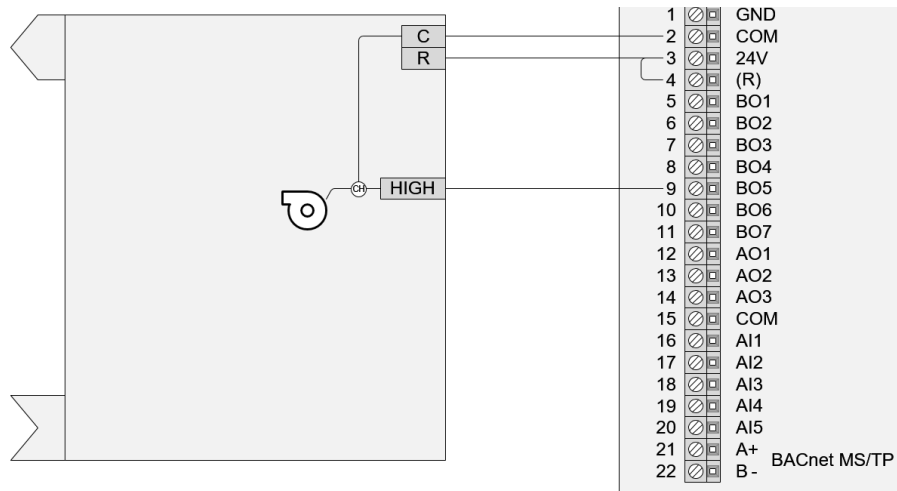

Add a 24VAC transformer when the equipment does not supply the power.

Fan sequence of operation

Occupied Mode:

Fan = **Auto** mode will energize the fan when the main PI cooling and heating demands are above 1% demand.

With the fan mode set to **ON**, the fan will always energize during Occupied periods.


In the controller deadband between heating and cooling setpoints, Autodemand (Keepfan BV-66) = FanLow allows the fan to stay ON, and (Keepfan BV-66) = FanOff will shut down the fan completely.

Unoccupied Mode:


The fan will always operate in Auto mode during Unoccupied periods

Fan Coil Unit (FCU) – Wiring

Optional inputs

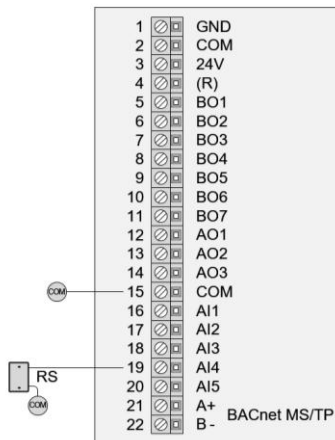

Optionally connect a 10K type 3 remote thermistor room sensor. MSV-2 default setting is “AutoDet”; so, detecting the remote sensor will replace internal thermostat temperature sensor. Changing MSV-2 to “Intern” will keep internal temperature sensor for control; this provides a way to read remote temperature from AI-4 for monitoring purpose.

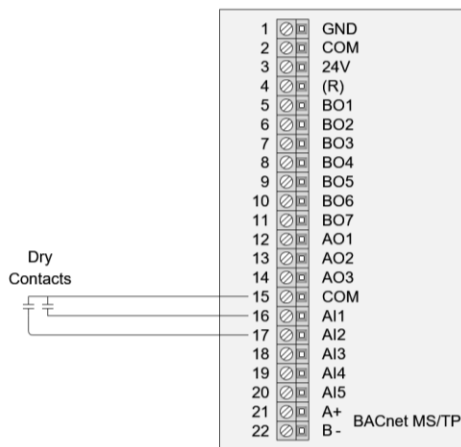


Optionally use MSV-46 and MSV-47 to configure AI-1 and AI-2 functions.

Fan Coil Unit (FCU) – Wiring

FCU Control Curves



Speed Auto Occupied

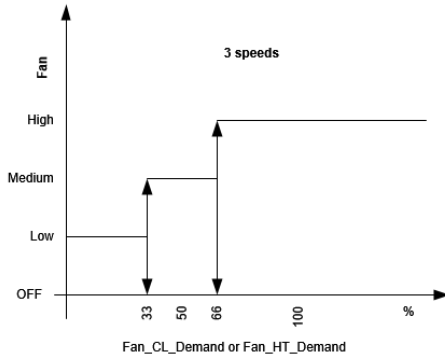



Fan Speed Control

3 Speeds

Speed Auto Unoccupied

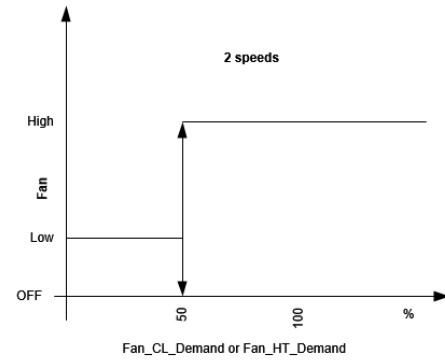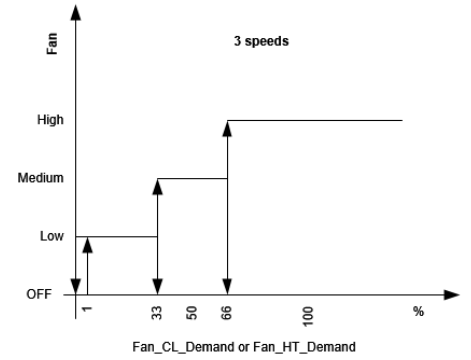


2 Speeds

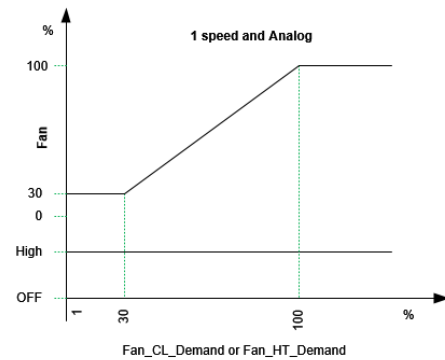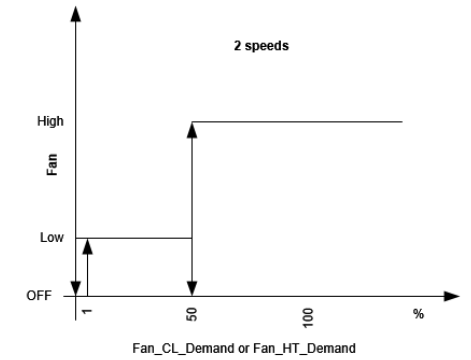

Analog Speed





Note: For all curves, it is required:

- ✓ CLG_Dem > 25%
or
- ✓ HTG_Dem > 25%

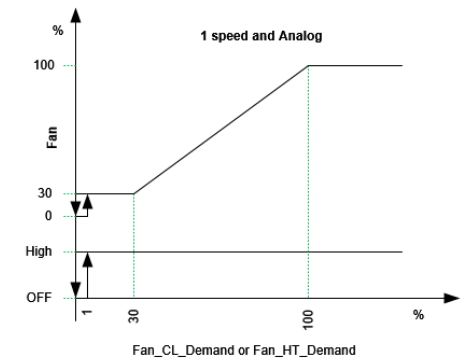


Fan Coil Unit (FCU) – Wiring

Proportional Band Example

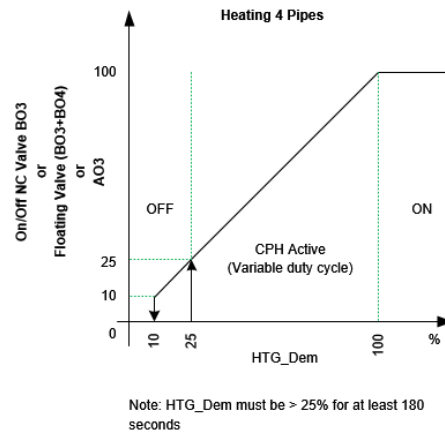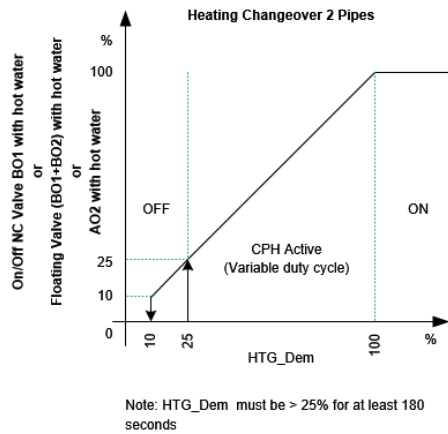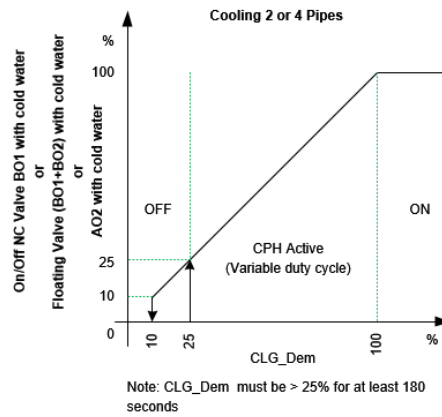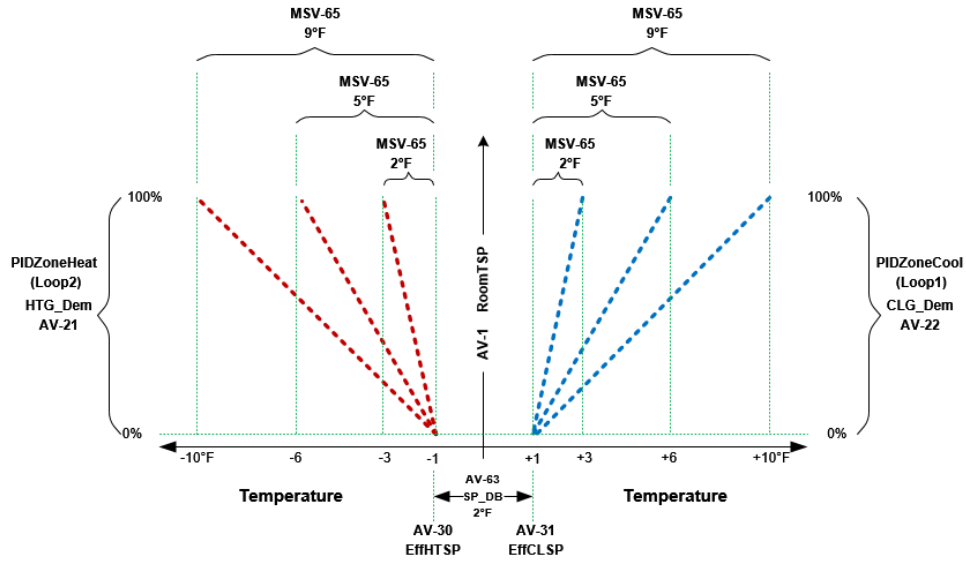

Fan Coil Unit (FCU) – Wiring

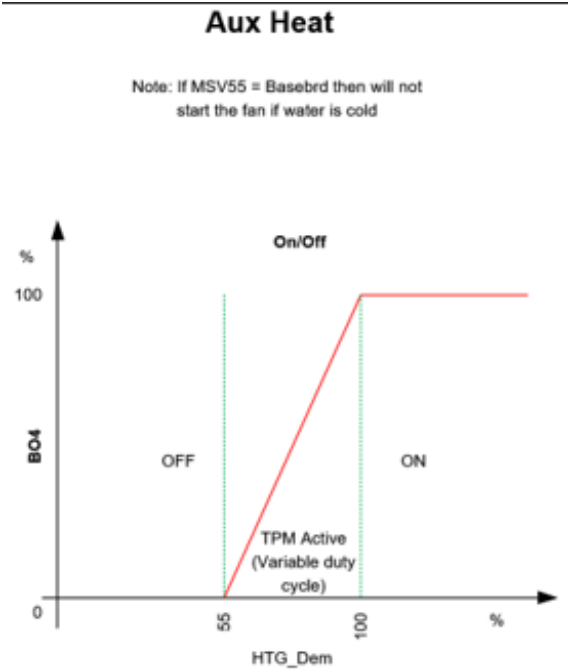

Fan Coil Unit (FCU) – Wiring

Floating Valve Actuator Operation

<i>Demand</i>	OPEN output	CLOSE output	What happens
<i>0%</i>	OFF	ON	Drives close until end switch. CLOSE will stay ON while motor is stopped.
<i>100%</i>	ON	OFF	Drives open until end switch. OPEN will stay ON while motor is stopped.
<i>1–99% (e.g., 34%)</i>	OFF	OFF	When the actuator reaches the target position, it will hold this position. Outputs will stay OFF until the demand percent changes, then the controller pulses OPEN or CLOSE to trim.

Notes:

- Outputs are interlocked so OPEN and CLOSE are never ON at the same time. A 5 second delay between changing direction provides protection to motor gearbox.
- Actuator's internal end switches will stop the motor when physical limits are reached.

Fan Coil Unit (FCU) – Wiring

FCU Configuration and System Mode

DESCRIPTION	Valve motor control type	Analog input 3 configuration	Pipe number	Auxiliary output configuration	Reheat type	Control sequence of operation	System Mode
BACnet OBJECT NAME:	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	MODE
OBJECT INSTANCE:	BV-75	MSV-48	MSV-52	MSV-54	MSV-55	MSV-15	MSV-16

EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices
4 Pipes 0-10Vdc Valves	Floating	None	4 Pipes	None	None	Ch-Ht	Off Auto Heat Cool
4 Pipes Floating Valves	Floating						
4 Pipes On-Off Valves	On/Off						

EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices	Note:
2 Pipes On-Off Valves	On/Off	COS	2 Pipes	None	None	Cool	Off Auto Heat Cool	If AI1 COS water temperature is over 65°F (Ch_Over BV-40 = Heat) and "System Mode" is "Cool" then "System Mode" will automatically switch to "Auto" and user won't be able to select "Cool" until water temperature drop below 63°F (Ch_Over BV-40 = Cool). So, when Ch_Over (BV40 = Heat), user choices will be limited to: Off, Auto, Heat If AI1 COS water temperature is under 63°F (Ch_Over BV-40 = Cool) and "System Mode" is "Heat" then "System Mode" will automatically switch to "Auto" and user won't be able to select "Heat" until water temperature increase over 65°F (Ch_Over BV-40 = Heat). So, when Ch_Over (BV40 = Cool), user choices will be limited to: Off, Auto, Cool

EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices
2 Pipes 0-10Vdc Valves	Floating	None	2 Pipes	Reheat	Coil or Baseboard	Cool-Rt	Off Auto Heat Cool
2 Pipes Floating Valves	Floating						
2 Pipes On-Off Valves	On/Off						

EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices	Note:
2 Pipes 0-10Vdc Valves	Floating	None	2 Pipes	None	None	Cool	Off Cool	If SeqOper is changed from BACnet network to "Cool", and previous "System Mode" was "Auto" or "Heat" then "System Mode" will automatically switch to "Cool"
2 Pipes Floating Valves	Floating							
2 Pipes On-Off Valves	On/Off							

EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices	Note:
2 Pipes 0-10Vdc Valves	Floating	None	2 Pipes	Reheat	Coil or Baseboard	Heat-Rt	Off Heat	If SeqOper is changed from BACnet network to "Heat-Rt", and previous "System Mode" was "Auto" or "Cool" then "System Mode" will automatically switch to "Heat"
2 Pipes Floating Valves	Floating							
2 Pipes On-Off Valves	On/Off							


EQUIPMENT	VALVCTL	AI3_CFG	PipeNum	Aux_CFG	Reheat	SeqOper	Mode Button User Choices	Note:
2 Pipes 0-10Vdc Valves	Floating	None	2 Pipes	None	None	Heat	Off Heat	If SeqOper is changed from BACnet network to "Heat", and previous "System Mode" was "Auto" or "Cool" then "System Mode" will automatically switch to "Heat"
2 Pipes Floating Valves	Floating							
2 Pipes On-Off Valves	On/Off							

Fan Coil Unit (FCU) – Setup

SETUP

Setup Menu

9. Access the Setup Menu by holding the two left buttons and enter pin 1, 2, 3, 4

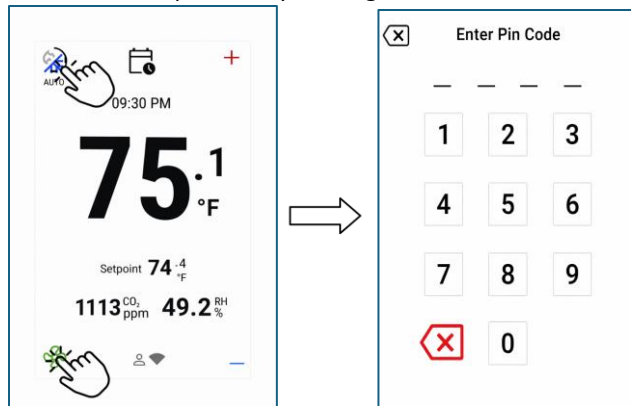

10. From this menu, you can select configuration menu by double clicking on the icons



	MSTP Communication Configuration
	Quick RTU Application Setup
	WIFI Configuration
	Buttons Lock Configuration
	Display Configuration
	Shows additional Information about the OpenStat
	Scroll Menu Choices
	Select
	Back Menu

Fan Coil Unit (FCU) – Setup

1. Config - MSTP Config

MS/TP Configuration Configures the MSTP Properties page to define the global MSTP settings Next page	Address + Device network address 126 Next page	Instance ^ Device ID in BACnet network 0213126 Next page	Baudrate ^ Data transmission speed 76800 Next page
Max. Master + Limit of master devices 127 Next page	Max. Frames + Max frames before passing token 003 Next page	Save  Chose the check mark to confirm your changes, or retreat to the menu without saving Next page	

2. Config – Quick Setup

Welcome to the Quick Setup  Configures your thermostat quickly using essential settings for immediate comfort Next page	PIPENUM ^ CFG Pipe number installed 4 PIPES Next page	VALVCTL ^ CFG Valve motors control type On/Off Next page	SeqOper ^ CFG Control sequence of operation CI-ht Next page
Fan_Seq ^ CFG Control fan sequence On-Auto Next page	Reheat ^ CFG Reheat type None Next page	Aux_CFG ^ CFG Auxiliary output None Next page	AI2_CFG ^ CFG Analog input 2 None Next page
AI3_CFG ^ CFG Analog input 3 None Next page	System_Unit ^ System/Database unit Imperial Next page	Save  Chose the check mark to confirm your changes, or retreat to the menu without saving Next page	

3.

Fan Coil Unit (FCU) – Setup

4.  Config – WIFI Settings (Refer to separate document “OpenStat Series - WIFI User Guide” for more info)

>

Wifi Settings

Access Point

✕

AP

Sta

Please refer to the OpenStat UserGuide to connect to Wifi

<

✓

>

Access Point - Enable

✕





<

✓

>

Station - Enable

✕





<

✓

5.  Config - Lock Type

>

Lock Type - SetPoint

✕









<

✓

>

Lock Type - Temperature

✕









<

✓

>

Lock Type - MODE

✕









<

✓

>

Lock Type - FAN

✕









<

✓

6.  Config Display

>

Display - Metric

✕









<

✓

>

Display - Brighness

✕









<

✓

>

Display - Bgcolor

✕









<

✓

>

Display - Language

✕









<

✓

7.  Config – About

About

✕

Model Name	MAC
OS537MHCW-RTU	D8:80:39:6C:FB:94
Hardware Version	Device Name
H: 041	OFFICE 303
F/W version	Address
D: 0.004 F: 0.520-52	MSTP: 5
A: 1.052 W: 0.045	IP: 192.168.10.34

Fan Coil Unit (FCU) – BACnet Objects

BACNET OBJECTS

Overview

GREEN = Important

No Color = Optional depending on equipment

Recommended: MSVs and AV(s) write at default priority (16), everything else priority 8 to 3

Quick Setup: Sequence, units, and service inputs • BV-50 Auto mode authorization • MSV-204 Temperature displayed units • MSV-205 BACnet objects temperature units • BV-75 Valve motor control type • MSV-15 Control sequence operation • MSV-47 AI-2 configuration • MSV-48 AI-3 configuration • MSV-52 System pipe number Fan: Output location and control type • MSV-17 Fan mode • MSV-58 Fan control sequence • BV-66 Fan speed with no demand • AV-25 ECM minimum speed % Heating: Stage configuration • MSV-55 Reheat type • MSV-75 Heating valve travel time • MSV-78 Output cycles per hour heating • BV-64 Reheat control type • BV-79 Modulating heat action (AO3) Cooling: Stage configuration • MSV-76 Cooling valve travel time • MSV-77 Output cycles per hour cooling • BV-78 Modulating cool action (AO2) Auxiliary Output: • MSV-54 Auxiliary output configuration PID Loops: • Loop-1 Cooling PID • Loop-2 Heating PID	T Set points: Sensor locations and set points • MSV-2 Temperature input location • MSV-65 Heating/cooling proportional band • MSV-70 Room temperature setpoint type (Sets AV-1 as heat, cool, or central set point) • AV-1 Room temperature set point • AV-41 Standby heating set point • AV-42 Standby cooling set point • AV-43 Unoccupied heating set point • AV-44 Unoccupied cooling set point • AV-58 Maximum heating set point • AV-59 Maximum cooling set point • AV-63 Room temperature set point deadband Occupancy: Motion Sensor location and timers • MSV-44 Select PIR Motion sensor input • AV-27 Set occupancy override time (OpenStat Button) • AV-28 Motion Set occupancy override time • SCH-1 Occupancy schedule General Operation and Monitoring: Occupancy, status, and set points • MSV-16 System mode (heat, cool, auto, off) • MSV-17 Fan mode (auto, low, med, high) • MSV-6 Occupancy command • MSV-5 Effective occupancy (status) • MSV-100 Help message (alarm status) • AV-1 Room temperature set point • AV-7 Effective room temperature • AV-21 Heating demand • AV-22 Cooling demand Input and Outputs: Status for inputs and overrides outputs • AI-1 thru AI-8 Analog/binary inputs, CO2, and humidity (read-only) • AO-1 thru AO-3 Analog outputs • BO-1 thru BO-7 Binary outputs
---	---

Fan Coil Unit (FCU)

Physical Inputs and Outputs

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	DEFAULT VALUE	TAGS	RANGE
BO-1	BO_1	Binary output 1	Off	Status	Dependent on MSV-52 and BV-75
BO-2	BO_2	Binary output 2	On	Status	Dependent on MSV-52 and BV-75
BO-3	BO_3	Binary output 3	Off	Status	Dependent on MSV-52 and BV-75
BO-4	BO_4	Binary output 4	On	Status	Dependent on MSV-52 and BV-75
BO-5	BO_High	High-speed fan output	Off	Status	Dependent on MSV-58
BO-6	BO_Med	Medium-speed fan output	Off	Status	Dependent on MSV-58
BO-7	BO_Low	Low-speed fan output	Off	Status	Dependent on MSV-58
AO-1	AO_ECM	Fan ECM output	0%	Status	Dependent on MSV-58
AO-2	AO_2	Analog output 2	0%	Status	Cooling or Heating 0-100%
AO-3	AO_3	Analog output 3	0%	Status	Heating 0-100%
AI-1	AI_1	Analog input 1		Status	Dependent on MSV-46
AI-2	AI_2	Analog input 2		Status	Dependent on MSV-47
AI-3	AI_3	Analog input 3		Status	Dependent on MSV-48
AI-4	AI_4	Remote room sensor		Status	32-122°F (0-50°C)
AI-5	AI_5	Unused		Status	
AI-6	RoomT	Room temperature		Status	32-122°F (0-50°C)
AI-7	RoomRH	Room humidity		Status	5-90%
AI-8 *	RoomCO2	Room CO2		Status	0-2000 PPM
BI-1	Motion	Motion detection	Off	Status	Off / Active



Objects tagged as **Status** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

* RoomCO2 only available on "C" models like "OST537MHC"

Analog Values (AV)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
AV-1	RoomTSP	Room Temperature setpoint	User	72°F (22°C)	54-90°F (12-32°C)
AV-7	Eff_T	Effective temperature used for control	Status	---	-40-122°F (-40-50°C)
AV-9	OATemp	Outdoor air temperature	Status	---	-40-122°F (-40-50°C)
AV-12	SATemp	Supply air temperature	Status	---	-40-122°F (-40-50°C)
AV-13	CHOV_T	Changeover temperature	Status	---	-40-122°F (-40-50°C)
AV-21	HTG_Dem	Heating demand	Status	---	0-100%
AV-22	CLG_Dem	Cooling demand	Status	---	0-100%
AV-23	Fan_HT_Demand	Fan heating demand	Status	---	0-100%
AV-24	Fan_CL_Demand	Fan cooling demand	Status	---	0-100%
AV-25	ECM_Min	ECM minimum speed output	Cfg	30%	0-100%
AV-27	OvrTime_Set	Set occupancy override time	Cfg	60 min	15 – 480 min
AV-28	MotionOvrTime_Set	Motion Set occupancy override time	Cfg	10 min	1 – 60 min
AV-30	EffHTSP	Effective heating setpoint	Status	---	---
AV-31	EffCLSP	Effective cooling setpoint	Status	---	---
AV-39	OccHTSP	Occupied heating setpoint	Status	---	---
AV-40	OccCLSP	Occupied cooling setpoint	Status	---	---
AV-41	STBHTSP	Standby heating setpoint	Cfg	69°F (20.5°C)	---
AV-42	STBCLSP	Standby cooling setpoint	Cfg	78°F (25.5°C)	---
AV-43	Unoc_HT_SP	Unoccupied heating setpoint	Cfg	62°F (16.5°C)	---
AV-44	Unoc_CL_SP	Unoccupied cooling setpoint	Cfg	80°F (26.5°C)	---
AV-50	RT_Cal	Room temperature calib	Cfg	0	-5 to 5
AV-58	MaxHTSP	Maximum heating setpoint	Cfg	90°F (32°C)	40-90°F (4.5-32°C)
AV-59	MinCLSP	Minimum cooling setpoint	Cfg	54°F (12°C)	54-100°F (12-37.5°C)
AV-63	SP_DB	Setpoint deadband	Cfg	2	2 to 5

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represents objects or properties typically meant to be displayed on graphics for various required visualizations.

Binary Values (BV)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	INACTIVE / ACTIVE TEXT
BV-2	OVRSTAT	Occupancy override status	Status	Normal	Normal / Overrid
BV-3	Mot_Det	Motion detection	Status	None	None / Moving
BV-5	OccSch	System occupancy schedule	Status	On	Off / On
BV-14	Aux_Cmd	Auxiliary network command	Cmd	Off	Off / On
BV-15	FanStat	Fan status	Status	---	Stopped / Running
BV-25	AuxStat	Auxiliary output status	Status	Off	Off / On
BV-29	AI1Stat	Analog input 1 binary contact status	Status	Deactivated	Deactivated / Activated
BV-30	AI2Stat	Analog input 2 binary contact status	Status	Deactivated	Deactivated / Activated
BV-31	AI3Stat	Analog input 3 binary contact status	Status	Deactivated	Deactivated / Activated
BV-35	Window	Window detection status	Status	Close	Close / Open
BV-36	Filter	Filter sensor status	Status	Normal	Normal / Alarm
BV-37	ServALM	Service alarm status	Status	Normal	Normal / Alarm
BV-38	Door	Door detection status	Status	Close	Close / Open
BV-40	Ch_Over	Change over status	Status	Cool	Cool / Heat
BV-50	AutoMod	Auto mode authorized	Cfg	Yes	No / Yes
BV-64	Reh_Opt	Reheat control option	Cfg	On-Off	Pulse1S / On-Off
BV-66	KeepFan	Fan auto mode	Cfg	Fan Low	Fan Low / Fan Off
BV-75	VALVCTL	Valve motor control type	Cfg	On/Off	On-Off / Floating
BV-78	AO2_Dir	AO2 action	Cfg	Direct	Direct / Reverse
BV-79	AO3_Dir	AO3 action	Cfg	Direct	Direct / Reverse
BV-200	LockStPoint	Lock Setpoint	Cfg	Unlock	Unlock / Lock
BV-201	LockMode	Lock Mode	Cfg	Unlock	Unlock / Lock
BV-202	LockFan	Lock Fan	Cfg	Unlock	Unlock / Lock
BV-203	WifiStatus	Wifi Status	Status	---	Off / On

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represents objects or properties typically meant to be displayed on graphics for various required visualizations.

Multi-State Values (MSV)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-2	Tsource	Temperature input location	Cfg	AutoDet	AutoDet Intern AI-4
MSV-5	Eff_Occ	Effective occupancy mode	Status	Occupied	Occupied Unoccup TempOcc Standby
MSV-6	Occ_Cmd	Occupancy command	Cmd	Loc_Occ	Loc_Occ Occupied Unoccup
MSV-15	SeqOper	Control sequence of operation	Cfg	Cl-Ht	Cooling Heating Cool-Rt Heat-Rt Cl-Ht
MSV-16	MODE	System mode	User	Auto	Off Auto Cool Heat
MSV-17	FAN	Fan mode	User	Auto	Lo Med Hi Auto
MSV-19	KeyLock	Keypad lock level	Cfg	None	None Fan Mode FanMode All
MSV-26	BO3_BO4	BO3/BO4 status	Status		Stopped Open Close
MSV-27	BO1_BO2	BO1/BO2 status	Status		Stopped Open Close
MSV-28	FanStat	Fan status	Status		Off Low Med High

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-44	Bi_PIR	Select PIR Motion sensor input	Cfg	None	None NO, AI1 (BI) NC, AI1 (BI) NO, AI2 (BI) NC, AI2 (BI) NO, AI3 (BI) NC, AI3 (BI) NO, AI4 (BI) NC, AI4 (BI) NO, AI5 (BI) NC, AI5 (BI) External Intern
MSV-45	BI_SCH_Input	Select schedule input	Cfg	None (On)	None (Off) None (On) Scheduler AI-1 AI-2 AI-3 AI-4 AI-5 External
MSV-47	AI2_CFG	CFG Analog input 2	Cfg	None	None Overrid (<i>remote override switch</i>) Filter Service
MSV-48	AI3_CFG	CFG Analog input 3	Cfg	None	None COC/NH (<i>Normally Heat ChangeOver Contact</i>) COC/NH (<i>Normally Cool ChangeOver Contact</i>) COS (<i>ChangeOver Sensor</i>) SS (<i>Supply sensor remote monitoring 10K type 3 sensor</i>)
MSV-49	Door_Loc	Door contact input location	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5
MSV-51	Windows_Loc	Window contact input location	Cfg	None	None AI-1 AI-2 AI-3 AI-4 AI-5
MSV-50	AI5_CFG	CFG Analog Input 5	Cfg	None	None Fan Lock
MSV-52	PipeNum	Pipe number	Cfg	4 Pipes	2 Pipes 4 Pipes
MSV-54	Aux_CFG	Auxiliary output configuration	Cfg	Reheat	Reheat Occ-NO Occ-NC Fan-NO Fan-NC Network (<i>Can be controlled by BACnet</i>)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-55	Reheat	Reheat type	Cfg	Basebrd	Basebrd Coil
MSV-58	Fan_Seq	Control fan sequence	Cfg	On-Auto	L-M-H L-H L-M-H-A L-H-A On-Auto (<i>Single speed or 0-10Vdc</i>)
MSV-65	PB	Heating/Cooling proportional band	Cfg	5 F 2.2 C	3 F (1.2 C) - 10 F (5.6 C)
MSV-70	Display_SP	Setpoint displayed for user	Cfg	Center	Heating Center Cooling
MSV-75	BO3Time	BO3/BO4 travel time for 3 states valve	Cfg	1.5 minutes	0.5 min - 6 min
MSV-76	BO1Time	BO1/BO2 travel time for 3 states valve	Cfg	1.5 minutes	0.5 min - 6 min
MSV-77	CL_CPH	Cooling output cycle per hour	Cfg	4 CPH	3 - 8 CPH
MSV-78	HT_CPH	Heating output cycle per hour	Cfg	4 CPH	3 - 8 CPH
MSV-100	HELP_mess	Help message	Status	Normal	Normal Service Filter Window
MSV-200	Brightness	Brightness Control	Cfg	Med	Low Med-Low Med
MSV-201	BgColor	Background Color	Cfg	White	White Orange Blue Green Red
MSV-202	MainDisplay	Main Display	Cfg	Temp	Temp Setpoint Nothing
MSV-203	Language	Language selection	Cfg	English	English

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	STATE TEXTS
MSV-204	Display_Units	Temperature displayed units	Cfg	F	C F
MSV-205	System_Unit	System/Database Unit	Cfg	Imperial	Metric/Imperial
MSV-221	Radar_Status	Radar_status	Cfg	Enable	Disable/Enable
MSV-223	Detection_range	Detection_range	Cfg	5_m	1_m to 7_m
MSV-235	Radar_Freq	pll_frequency_word	Cfg	---	Channel 1 to 8
MSV-244	Sensitivity	duty_cycle_repetition_r	Cfg	Medium	Low Medium High very-high

Please note that objects tagged as:

- **Cfg:** represents configuration properties of the device that are typically only set once during commissioning and start-up.
- **Status:** represent objects or properties typically meant to be displayed on graphics for various required visualizations.

Loop(s)

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
LOOP-1	PIDZoneCool	PID Zone cooling	Status		0-100%
LOOP-2	PIDZoneHeat	PID Zone heating	Status		0-100%

Default values:

Loop-1 : Kp = 20, Ki = 0.05, Bias = 0%

Loop-2 : Kp = 20, Ki = 0.05, Bias = 0%

Schedule

OBJECT INSTANCE	FCU OBJECT NAME	DESCRIPTION	TAGS	DEFAULT VALUE	RANGE
SCH-1	OccSchedule	Occupancy schedule	Cfg	Inactive	Inactive / Active

Network

RS-485 NETWORK GUIDELINES


The best way to ensure a robust and reliable RS-485 network is to build it around a daisy-chain configuration.

Connecting a multidrop 485 network.


The EIA RS-485 Specification labels the data wires "A" and "B", but many manufacturers label their wires "+" and "-". In our experience, the "+" wire should be connected to the "A" line, and the "-" wire should be connected to the "B" line. Reversing the polarity will not damage a 485 device but will not communicate. That being said, the rest is easy: always connect "+" to "+", and "-" to "-".



Do not forget the Signal Ground. While a differential signal does not require a signal ground to communicate, the ground wire serves an important purpose. Over hundreds of thousands of feet, there can be significant differences in the voltage level of "ground". The function of the signal ground wire is to tie the signal ground of each node to one common ground. If the ground voltage rises above 3 VAC, data will be lost, and the port itself will often be damaged. However, if the differences in signal grounds are too great, further attention is necessary.

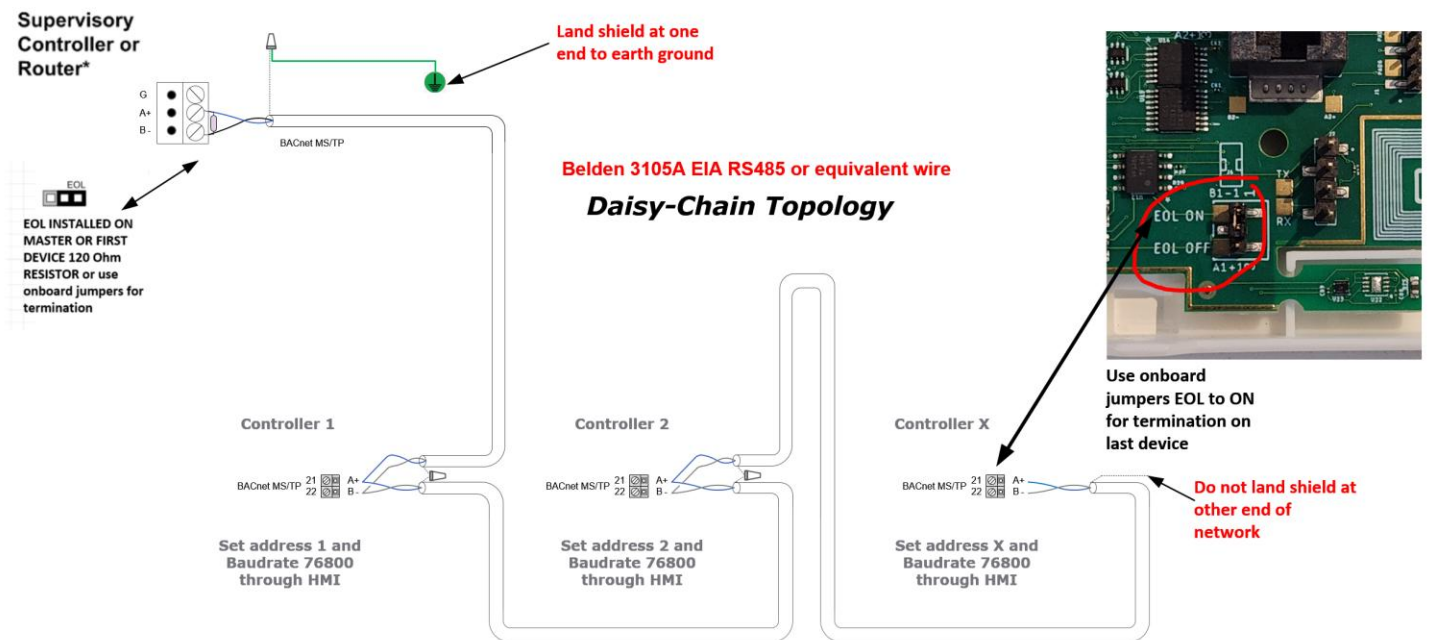

TESTING WIRING

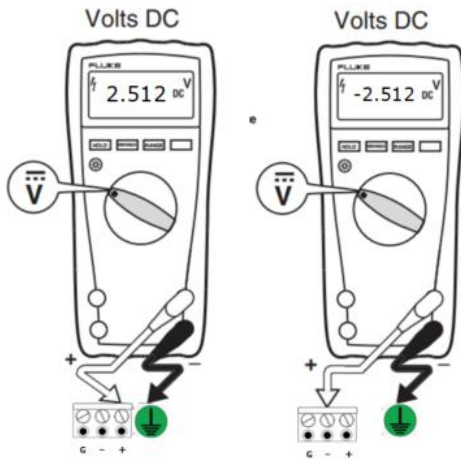


On a connected RS-485 network, measure with your **RMS** multi-meter from either “+” or “-” to earth ground. You should read about 2.5VDC. If you read higher than 2.75VDC, you are encountering noise and either you do not have a shielded twisted pair cable, you have a grounded shield on both sides, or the integrity of your cable is compromised. If you are reading lower than 2.1VDC, then a device on your network or front end is either limiting the biasing circuit or causing an issue such as no termination on both ends of the network, etc.




Measure with your multi-meter from “+” to “-” while the RS-485 network is connected. You should read between 200mVAC to 600mVAC average. If you read higher than 700mVAC average, a device may be compromising your network, or you may not have your shield landed in one location of your controller grounded

NON-FUNCTIONING TOPOLOGIES

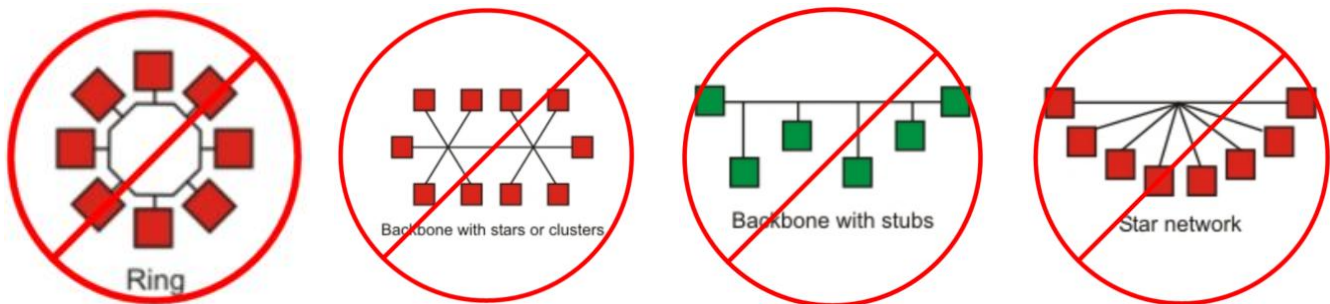


Occupancy Logic


OS537Mxxx (RTU and FCU) Occupancy Logic (when MSV-6 = Loc_Occ)

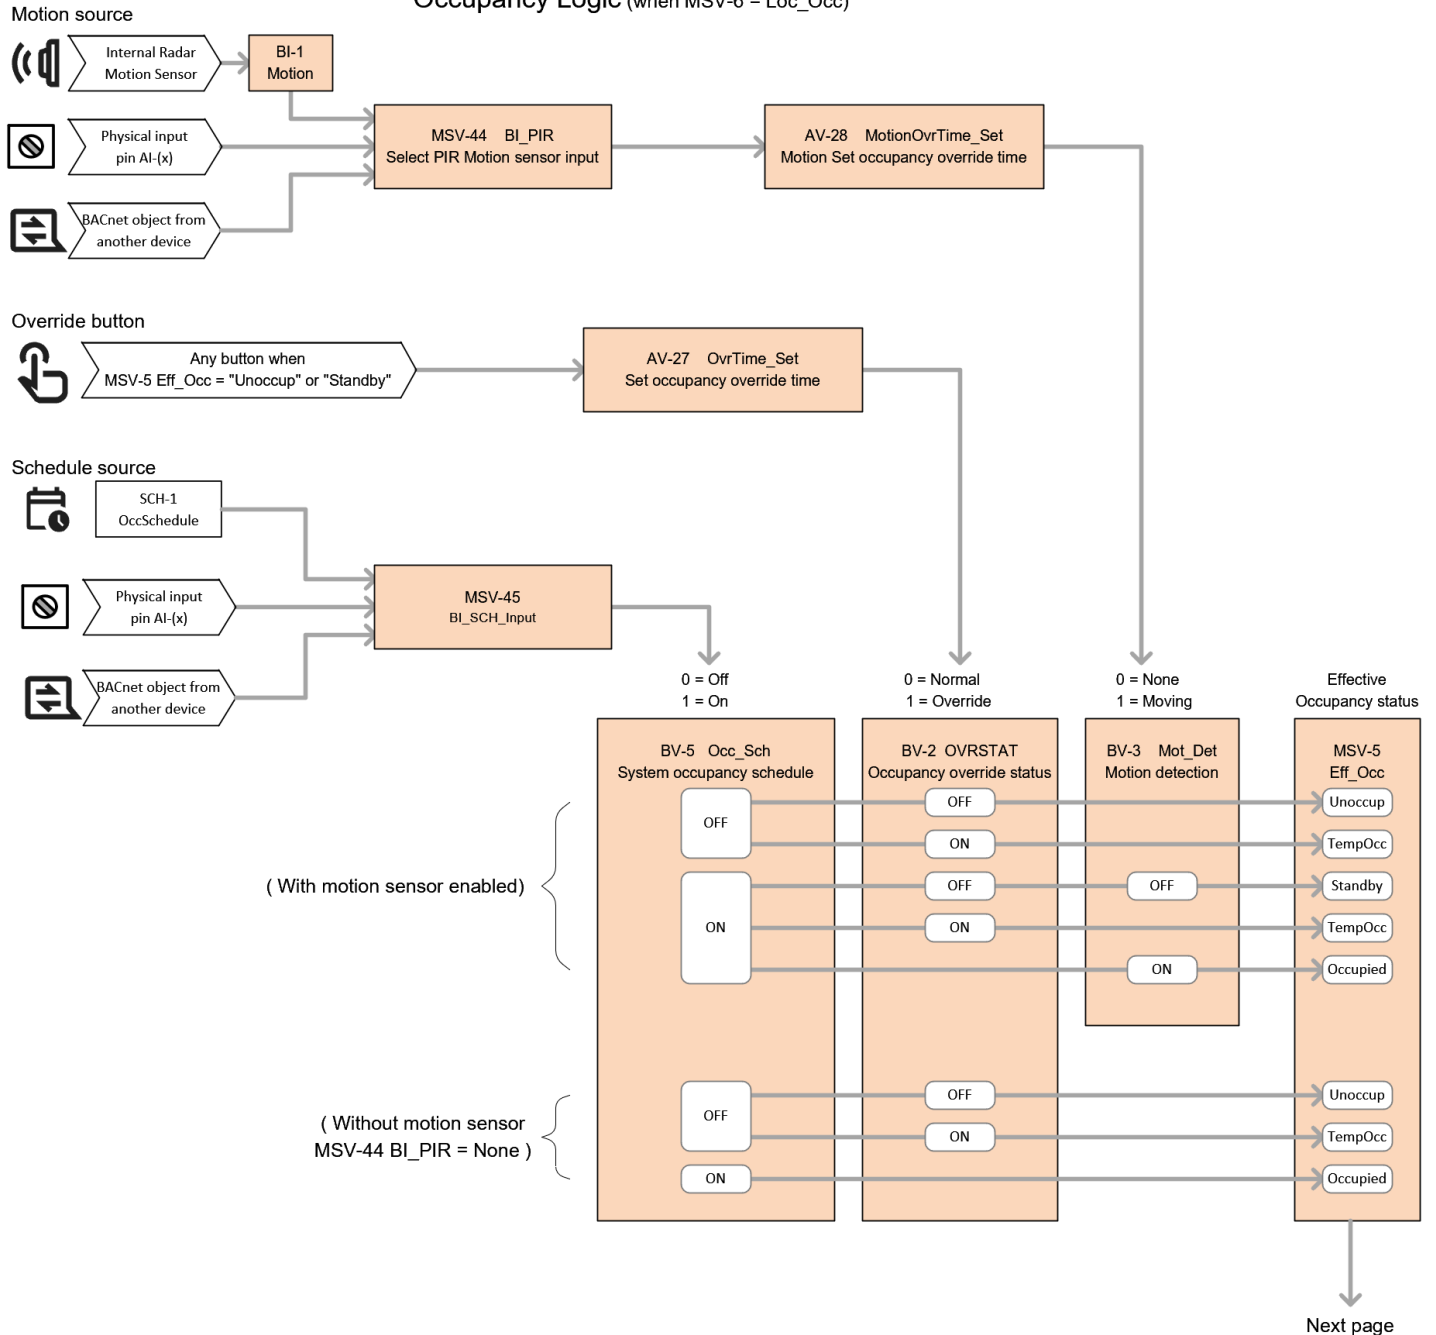

OS537Mxxx (RTU)
Occupancy Logic (continued)

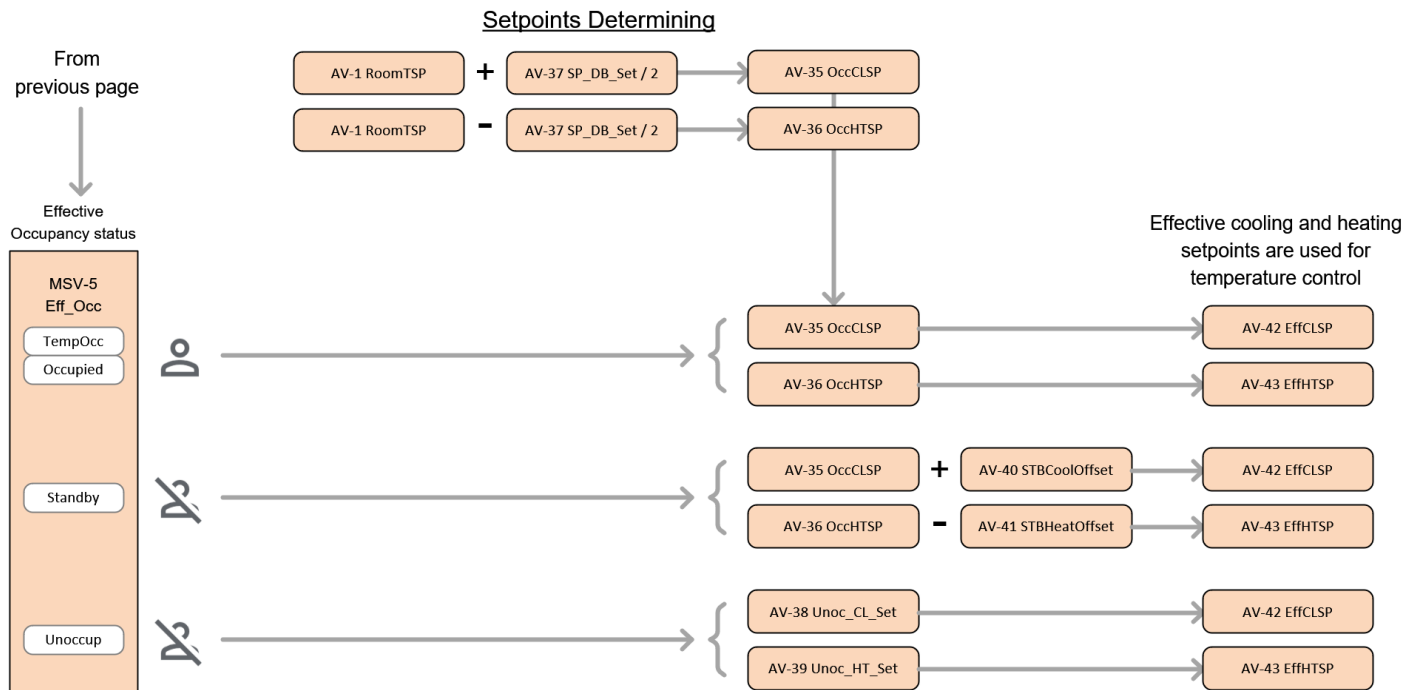


OS537Mxxx (FCU) Occupancy Logic (continued)

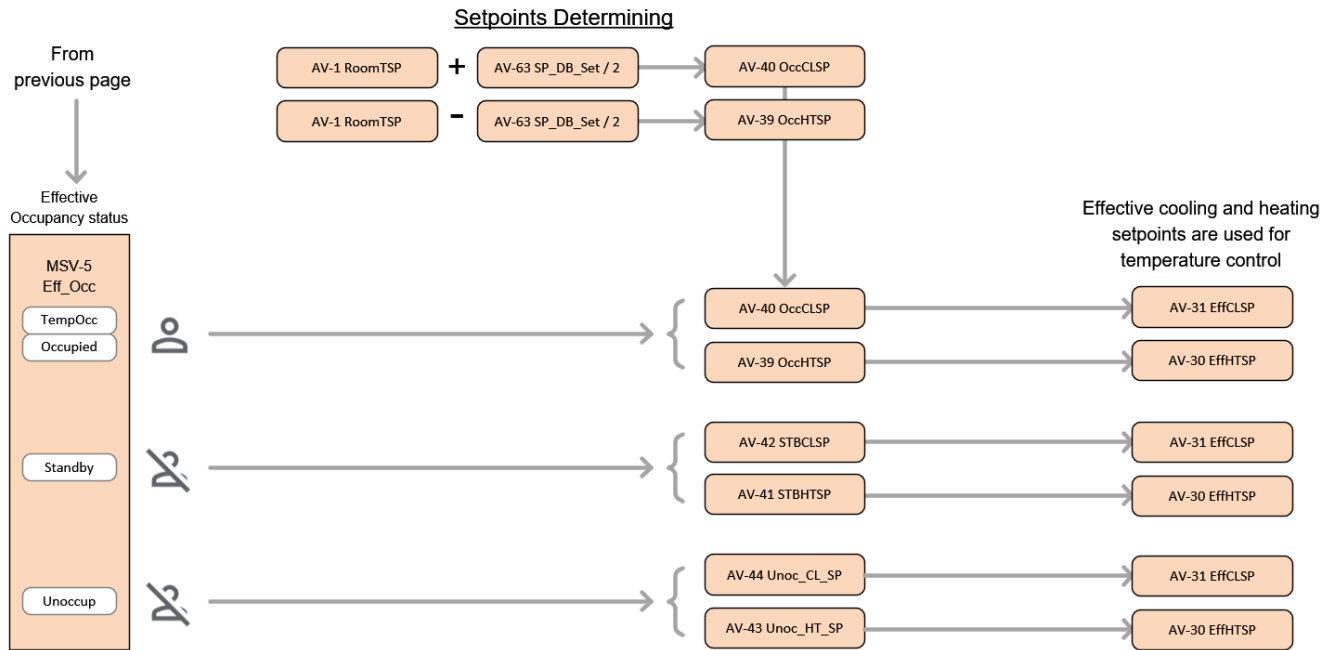

OS537Mxxx (FCU only)

Door / Window Logic

(When Door and Window inputs are selected, this logic has priority over previous sequences)

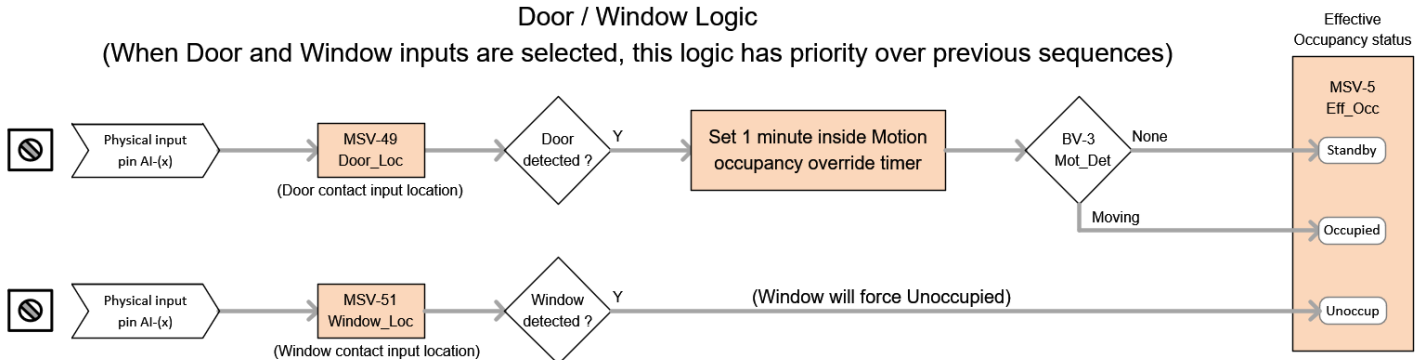

Occupancy Sequence of operation:

1. The thermostat determines occupancy using multiple inputs: Motion sensor, schedule input, user push buttons, or reading external BACnet object from the network. FCU can also use door and window contacts.
2. The **following sequences assume** that Occ_Cmd (MSV-6) = "Loc_occ" (*Local Occupancy*). Else effective occupancy status (MSV-5) will follow the Occ_Cmd "Occupied" or "Unoccup"
3. Motion detection is selected using MSV-44 BI_PIR input; it can be from internal Radar "M" models, physical inputs Ai1 to Ai5 or external BACnet network binary status.
4. If motion is detected, the system enters a "Moving" state, triggering an internal "Motion" timer linked to AV-28 "MotionTimer_Set". Typically, 10 minutes.
5. The motion detection output is represented by BV-3 Mot_Det "Set to Moving". Once the timer expires, if no motion is detected again, BV-3 change to "None" (inactive).
6. BV-5 (Occ_Sch) represents the effective schedule status. It is set according to "Select schedule input" (MSV-45) input chosen. The choices are the "internal occupancy schedule" (SCH-1), any physical inputs Ai1–Ai5 or an external BACnet network binary status.
7. When BV-5 schedule is active "ON" and a motion source has been selected, the effective occupancy status (MSV-5) will switch from "Standby" to "Occupied" on motion detection.
8. When BV-5 schedule is active "ON" and MSV-44 BI_PIR input is set to "None", the effective occupancy status (MSV-5) will be "Occupied".
9. When BV-5 schedule is inactive "OFF", the effective occupancy status (MSV-5) will be "Unoccupied".

The unoccupied  icon will be displayed on LCD.

10. If user presses any button, AV-27 will set the internal override timer. Typically, 60 minutes.

The occupied  icon will be displayed on LCD.


11. Effective cooling (AV-42) and heating (AV-43) setpoints are used for controlling the system. They are calculated according to the "effective occupancy status" (MSV-5). See the previous flowchart.

FCU Specific sequences:

12. Door_Loc (MSV-49) selects the source for the door contact.
13. Windows_Loc (MSV-51) selects the source for the window contact.
14. In occupied mode, when door open, means the contact open on (Ai-x), then the internal motion timer is set to 1 minute, assuming someone is leaving the room. After 1 minute the effective occupancy status (MSV-5) goes to "Standby". If BV-3 motion detect "Moving" then MSV-5 switch back to "Occupied".
15. If anytime, a window open, means an open contact on (Ai-x) input, then "effective occupancy status" (MSV-5) is forced as unoccupied.

Radar Settings

Typical Performance

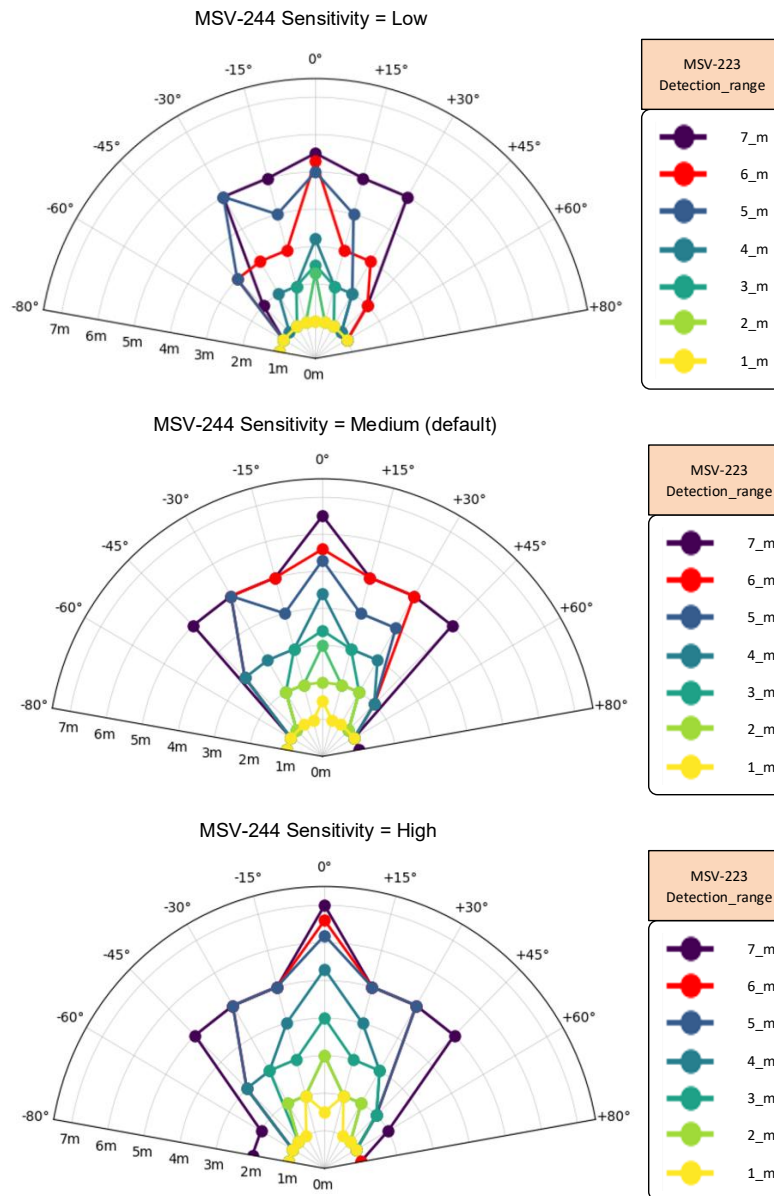

Recommendation:

- Avoid using same channels for two controllers facing each other.

OST537

Configurable Wall

BACnet MS/TP & Wi-Fi Controller

Description

- Configurable Wall Controller
- ASHRAE G36 Compliant Applications
- AHU, FCU, RTU, HP, WSHP, VAV
- 15 I/O: 5 UI, 3 AO, 7 BO
- Sensors: Temp, RH% - Standard
- Motion and CO2: Optional
- WiFi6: WPA3/2.4 GHz W MODELS
- BACnet MS/TP: B-BC BTL Certification
- BACnet WiFi6 IP w/ WEB services: B-BC BTL Certification

OPEN STAT
TOUCH

Strato
Automation



MODEL	TEMP RH%	MOTION	CO2 NDIR	BACNET WIFI	MSTP
OST537HW	X			X	X
OST537MHW	X	X		X	X
OST537MHCW	X	X	X	X	X
OST537HW-1*	X			X	X
OST300HW-1*	X			X	X

Application: The OST537 controller streamlines the management of standard HVAC equipment such as FCU, RTU, HP, WSHP and VAV. The OST537 provides numerous configurations and flexibility to align with diverse project requirements

Technical Specifications

Power supply:

- 24 VAC/VDC $\pm 15\%$; Class 2

Current Consumption:

- 6 VA controller only
- 96 VA Max including BO's 2A each

Communication Protocols:

- BACnet MS/TP half-wave device
- Baud 9600, 19200, 38400, 76800 Bps (76800 default) RS485 transceiver is a 1/4 load device
- Mini B USB MS/TP network access
- Optional WiFi6 2.4Ghz BACnet IP module with integrated WEB services that fully support REST API's
- BTL listed: B-BC, BACnet Building Controller

Hardware

- Microprocessor: STM32 (ARM CortexTM M33) 32 bits
- CPU Speed: 250 MHz
- Memory: 64 Mbytes SDRAM
- External Flash 128MB
- Real-time clock (RTC): Built-in capacitor (one-week backup)
- Full color, IPS, backlit, capacitive
- LCD touchscreen, display resolution 320 x 480

Configuration

- Configurable using the Capacitive Touch Screen, writing to the BACnet configuration objects or utilizing the embedded WEB page services or Strato Software tools.

Inputs:

- 5 Universal Inputs (AI/BI)
- Thermistor 10K Ω (type 2 or 3)
- Dry contact
- Voltage 0 - 10 Vdc (Input impedance of 20 K Ω)
- Resolution: 12 Bits (4096 segments)

Outputs:


- 7 Binary Outputs
- MOSFET Solid State Relays, Isolated 10 to 30VAC, 2.0A max
- 3 Analog Outputs
- Voltage 0 - 10 VDC linear

Humidity & Temperature Sensors

- Sensirion™ SHT40
- $\pm 1.8\%$ RH @ 25-75% RH overall $\pm 1.3\%$
- $\pm 0.2^\circ\text{C}$ @ 0°C to 60°C
- $\pm 0.36^\circ\text{F}$ @ 32°F to 140°F

Radar Motion Detection Sensor:

- Operating Principle: Radar cross-section optimized for human being
- Detection distance and angle: 20 feet (6M) @ 0°
16 feet (5M) @ $\pm 45^\circ$
3 feet (1M) @ $\pm 80^\circ$

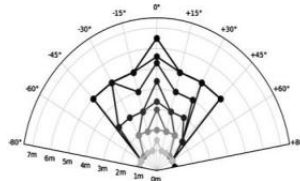

Optional CO2 Sensor: Telaire™ T6793

- Self-calibrating, non-dispersive infrared (NDIR)
- Sensor Range: 400-2000 PPM
- Accuracy: $\pm 45\text{ PPM}$ @ 3% of reading
- Accuracy is valid after a minimum of 2 weeks of continuous operation.
- Response Time of 5 minutes


Mechanical:

- Dimensions: W 3.58"(91 mm) x H 4.92"(125 mm) x D 0.98"(25 mm)
- Stacking temperature: -30°C to 50°C / -22°F to 122°F
- Operating conditions: 0°C to 50°C / 32°F to 122°F
- 10% to 90% H.R. without condensation
- Mounting type: Standard 2" x 4" electrical junction box
- Enclosure: White color, PCABS material UL94VO

Warranty: 3 Years


Certifications:

- UL 916 Energy Management Equipment
- BTL listed B-BC
- FCC Class B digital device, pursuant to part 15 of the FCC Rules

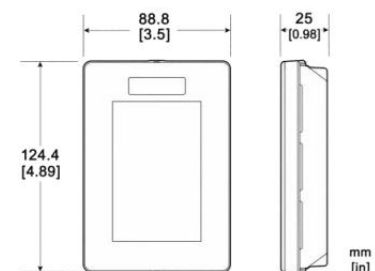

* Special OEM versions

End User Operation Guide (RTU)

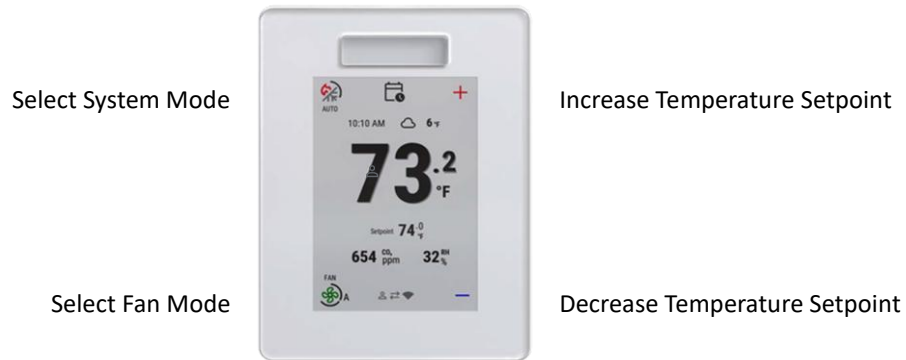


Normal display:

	System Status: <i>OFF / No Cooling / Cooling / No Heating / Heating</i>
	System Status Auto Mode: <i>No demand / Heat demand / Cool demand</i>
	Fan Status: <i>OFF / ON / Auto OFF / Auto ON</i>
	Status: <i>Unoccupied / Occupied **With Motion Model [Future]</i>
	BACnet MSTP communication is connected
	Wi-Fi connected
	Service needed on equipment (select mode Off for 10 sec before retry)

Left Buttons Choices:

	Select System Mode: <i>OFF / Auto Heat-Cool / Cooling Only / Heating Only</i>
	Select Fan Mode: <i>ON / Auto</i>

When Schedule is Unoccupied:

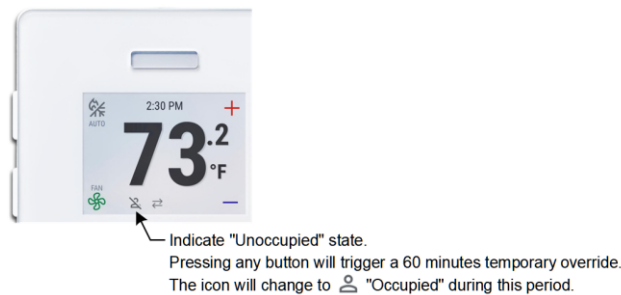

End User Operation Guide (FCU)

Select System Mode

Increase Temperature Setpoint

Select Fan Speed

Decrease Temperature Setpoint



Normal display:

   	System Status: OFF / No Cooling / Cooling / No Heating / Heating
  	System Status Auto Mode: No demand / Heat demand / Cool demand
   	Fan Status: OFF / ON / Auto OFF / Auto ON
 	Status: Unoccupied / Occupied
	BACnet MSTP communication is connected.
	Wi-Fi connected
	Service needed on equipment (select mode Off for 10 sec before retry)
	Window is open (will stop the equipment - used for hotel room)

Left Buttons Choices:

   	Select System Mode: OFF / Auto Heat-Cool / Cooling Only / Heating Only
   	Select Fan Speed: Low / Med / High / Auto

When Schedule is Unoccupied:



Indicate "Unoccupied" state.
Pressing any button will trigger a 60 minutes temporary override.
The icon will change to  "Occupied" during this period.