

TPMS SENSOR


Installation instructions

Model:TY-0910466

voltage: 3V



FCC ID:2BPVITPMSTY046

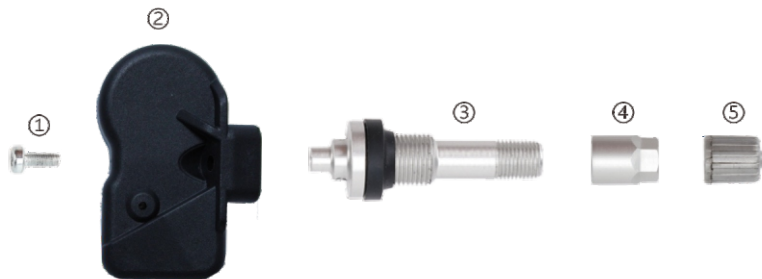

① Screw ② Sensor ③ Valve Stem ④ Nut ⑤ Valve Cap

⚠ Caution:

Please follow the instruction of car manufacturer for the safety and correct operation.

⚠ 注意事项:

为确保安全以及正确的使用，请参考说明书的步骤进行安装

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Installation

- 1.Put down the screw nut;
- 2.Slide the valve stem through the valve hole of the rim. Tighten the screw-nut with 4.0 Nm with the help of the Torque tool.
- 3.Assemble the tire, be sure that sensor would not touched with the rim and tire.

Note: Use different way to re-learn according to the different vehicle.

安装说明

- 1.将压紧螺母旋下;
- 2.将气门嘴从轮毂孔穿过，并用扭矩扳手用4.0Nm的力把压紧螺母旋紧;
- 3.安装轮胎，确保传感器不受轮毂与轮胎边缘的挤压;

注意：根据不同的车型学习方式进行学习

WENZHOU WOMA AUTO PARTS CO., LTD.

地址：浙江省温州市瑞安市塘下镇场桥汽配创业园 电话 (Tel) : +86-577-65372588
Add: Floor 5th, building 2nd Changqiao Auto Parts Pioneer Park, 网址 (Web) : www.womacn.com
Tangxia Town, Ruian City, Wenzhou City, Zhejiang Province, China 邮箱 (E-mail) : sales@womacn.com

MADE IN CHINA

www.womacn.com