 


Flossing Toothbrush

User Manual



Model: ABB885

Contents

Important Safeguard	01
Included Accessories	03
Product Overview	04
Power Handle Charging	05
3 Working Modes	06
Instructions for Use	07
Specialty Tip Usage	09
Care and Maintenance	10
Troubleshooting Guide	11
FCC Warning	12

Important Safeguard

When using this product for the first time, it is common to experience minor discomfort with some gum bleeding. This is because the gums are not quite used to the high-vibration cleaning method. It is recommended to use gentle mode for beginners and expect this discomfort to continue for 1-2 weeks upon initial use. If bleeding persists for longer than 2 weeks, please stop using the product immediately and consult your dentist.

Warning

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions:

- For users with teeth correction, dental repair, dental implants, etc., please use this product under the guidance of a dentist or doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not immerse the magnetic charger in water or any liquid.
- This product has a built-in rechargeable battery. Keep away from fire and do not charge it in a high-temperature environment.

1

Important Safeguard

- Do not knock or drop this product. If the product is damaged due to collision or falling, please stop using it.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and maintenance should not be done by children without supervision.
- Please use a 5V adapter when charging.

Caution


- Make sure that the charging port and charging cable are dry before charging; otherwise, it may cause an electric shock or short circuit.
- Do not use the toothbrush when soaking in a bath or shower.
- Do not place metal objects on the magnetic charger while it is powered on.

Note:


- The product and accessory illustrations in the manual are for reference only. Due to product updates and upgrades, the actual product may differ slightly from the illustration. Please refer to the actual product.
- This product is intended for home-use only. Do not use it in a commercial setting.

2


Included Accessories

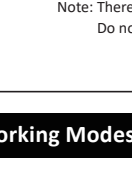


Brush Head X 2

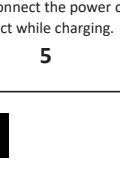

Water Pipe X 1

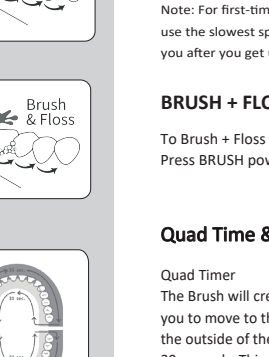


Magnetic Charger X 1

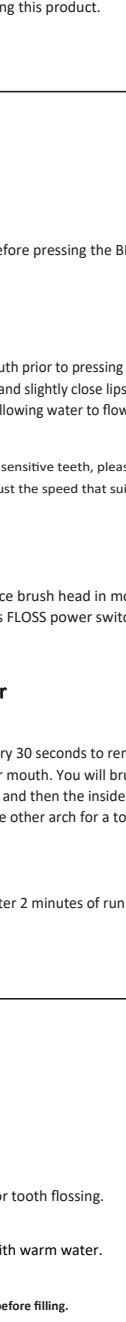

Main Device X 1

3


Product Overview

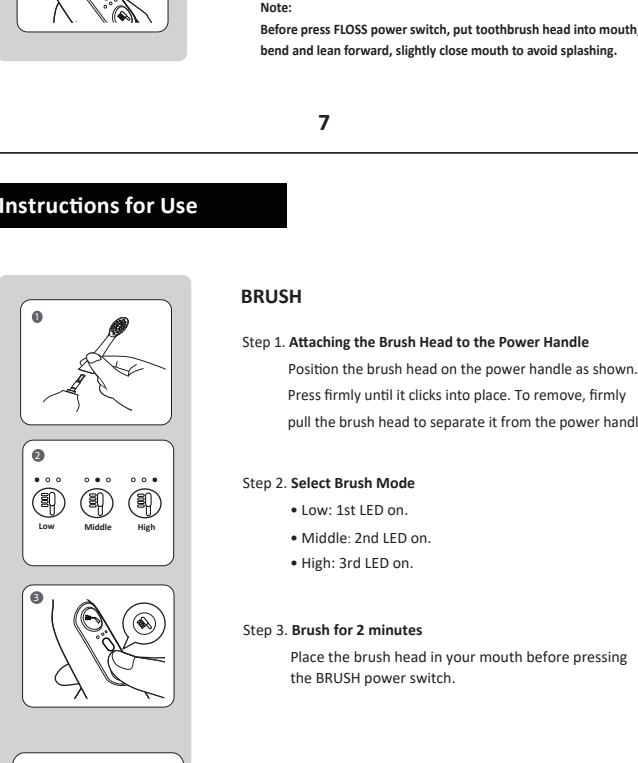


4

Power Handle Charging

1. Power off the device while charging.
Attach the charger to the designated area on the body.
2. Charge the power handle 12 hours based on the battery pre-charging status for first use.
3. Charge the power handle with the magnetic charger with the power bank, PC, or other 5V/1A devices.
4. Disconnect the plug after fully charged.

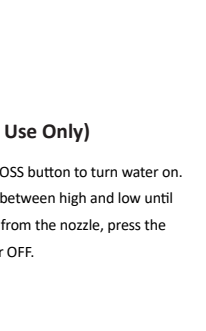


Charging Indicators Status

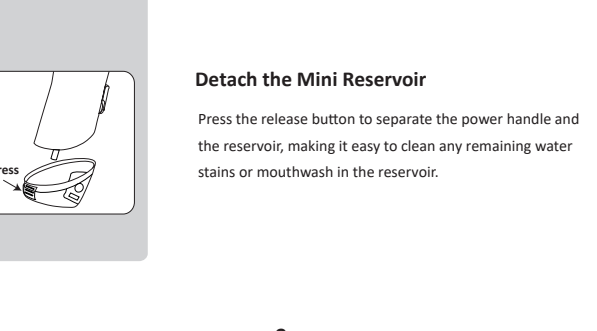

Note: There is no need to connect the power cord when using this product. Do not use this product while charging.

5

3 Working Modes

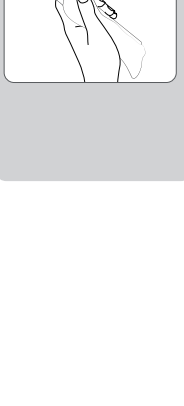

BRUSH

Place the brush head in your mouth before pressing the BRUSH power switch.

FLOSS

Always place the brush head in your mouth prior to pressing the FLOSS power switch. Lean over the sink and slightly close lips enough to prevent splashing while still allowing water to flow from mouth into sink.

Note: For first-time users and those with sensitive teeth, please use the slowest speed first, and then adjust the speed that suits you after you get used to it.

BRUSH + FLOSS

To Brush + Floss at the same time, place brush head in mouth. Press BRUSH power switch, then press FLOSS power switch.


Quad Time & 2-Minute Timer

Quad Timer
The Brush will create a short pause every 30 seconds to remind you to move to the next section of your mouth. You will brush the outside of the teeth for 30 seconds and then the inside for 30 seconds. This will be repeated on the other arch for a total of 2 minutes to clean all teeth.

2-Minute Timer
The brush will automatically shut off after 2 minutes of run time.

6

Instructions for Use

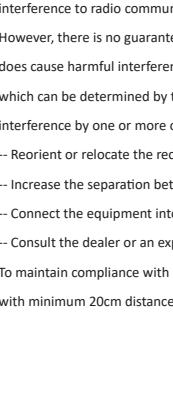

FLOSS

Step 1: Prepare the Reservoir

There are two methods to fill water for tooth flossing.

1. Use Mini reservoir
Open the lip and fill the reservoir with warm water.
2. Use water pipe to connect external reservoir
Insert water pipe into connection port firmly, put gravity ball into external reservoir.

Step 2: Select Floss Mode

- Low: 1st LED on.
- Middle: 2nd LED on.
- High: 3rd LED on.

Step 3: Floss for 2 minutes

Select floss speed and place the brush head in your mouth before pressing the FLOSS power switch.

Note: Before press FLOSS power switch, put toothbrush head into mouth, bend and lean forward, slightly close mouth to avoid splashing.

7

Instructions for Use

BRUSH

Step 1: Attaching the Brush Head to the Power Handle

Position the brush head on the power handle as shown. Press firmly until it clicks into place. To remove, firmly pull the brush head to separate it from the power handle.

Step 2: Select Brush Mode

- Low: 1st LED on.
- Middle: 2nd LED on.
- High: 3rd LED on.

Step 3: Brush for 2 minutes

Place the brush head in your mouth before pressing the BRUSH power switch.

Select the Brush mode

- Each time you press the power switch, the mode changes. The selected mode indicator will glow.
- To switch the mode, press the power switch within 5 seconds. (Diagram: -->)
- The power is turned OFF when the power switch is pressed after operating for 5 seconds or longer in each mode. (Diagram: -- -->)

8

Specialty Tip Usage

Prime Unit (First Time Use Only)

Point the tip into sink. Press FLOSS button to turn water on. Repeatedly switch floss speed between high and low until water flows. After water flows from the nozzle, press the FLOSS button to turn the water OFF.

Using Mouthwash & Other Solutions

The brush can be used to deliver mouthwash and antibacterial solutions. After using any special solution, rinse unit to prevent clogging by partially filling reservoir with warm water and running unit with brush head pointed into sink.

Detach the Mini Reservoir

Press the release button to separate the power handle and the reservoir, making it easy to clean any remaining water stains or mouthwash in the reservoir.

9

Care and Maintenance

CARE AND MAINTENANCE

Before cleaning, unplug from the electrical outlet.

After Each Use

1. After each use, when all functions are turned OFF, remove the brush head from the handle and rinse brush head under running water.
2. Wipe the handle dry after each use.

General Cleaning / Removing Hard Water Deposits

- Clean the product when necessary by using a soft cloth and mild non-abrasive cleanser.
- Hard water deposits may build up in your unit, depending on the mineral content of your water. If left unattended, it can hinder performance. Cleaning internal parts: add 2 tablespoons of white vinegar to a full reservoir of warm water. Point the handle and brush head into sink. Turn Water Flosser ON and run until reservoir is empty. Rinse by repeating with a full reservoir of clean warm water. This process should be done every 1 to 3 months to ensure optimal performance.

10

Troubleshooting Guide

Problem	Possible Cause	Remedy
Reservoir leak water.	Reservoir does not well connected.	The reservoir must snapfully onto the power handle.
Less water pressure or without liquid flows out.	The brush head does not well connected.	Take down the brush head and re-set it.
	When using the mini reservoir, the upper water pipe connection port is not closed.	Close the water pipe connection port firmly to avoid air leakage.
	The power handle and water pipe are not connected properly when using external reservoir.	Reconnect the water pipe and the power handle to ensure that the water pipe will not loosen or fall off.
	The internal water outlet is clogged after not being used for a while.	Slap or shake the power handle several times.
Vibration weakened	1. The bristle is pressed too hard. 2. The brush head is fixed too tightly.	1. Do not press the bristle with too much force. 2. Reconnect the brush head to the drive shaft, and make sure it is fixed with a certain gap.
It only works for a few minutes even after charging.	The battery has reached the end of its service life.	Contact service center for support.
	Charging time was insufficient.	Charge the appliance for at least 10 hours.

11

FCC Warning

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

12