

G10 Pro



**QUICK
START GUIDE**


THANK YOU

Thank you for purchasing the GIIKNEW G10 Pro Speaker. We sincerely appreciate your support and trust in our brand. Our goal is to enhance your golfing experience, allowing you to fully enjoy the pleasure of playing golf while listening to your favorite music. If you have any questions or need further assistance, please do not hesitate to contact us at giiknew_vip@outlook.com. We value your feedback and are committed to providing you with exceptional customer service.


PARAMETERS

Product Model	G10 Pro	Waterproof Level	IPX7
Bluetooth Version	V5.3	Bluetooth Range	100FT
Battery Capacity	2500mAh	Response Frequency	70Hz~18KHz
Output Power	15W	DC Power Input	Type-C 5V/1A
Playback Time	8H (at 50% volume)	Charging Time	≤3H
Horn Specification	Φ57MM	Distortion Degree	<1%

ACCESSORIES

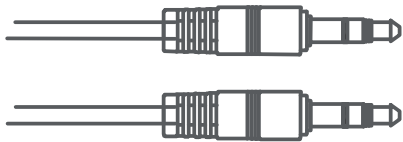

AUX Audio Cable*1

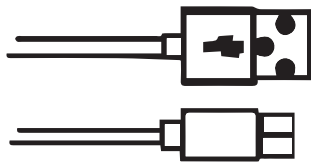


Type-C Cable* 1



Lanyard * 1

BUTTON FUNCTIONS

- ① Power on / Power off / TWS
- ② Volume Down / Previous Song
- ③ Play / Pause / Answer / Hang up
- ④ Volume Up / Next Song
- ⑤ Indicator Light
- ⑥ Charging / TF Card / AUX Audio

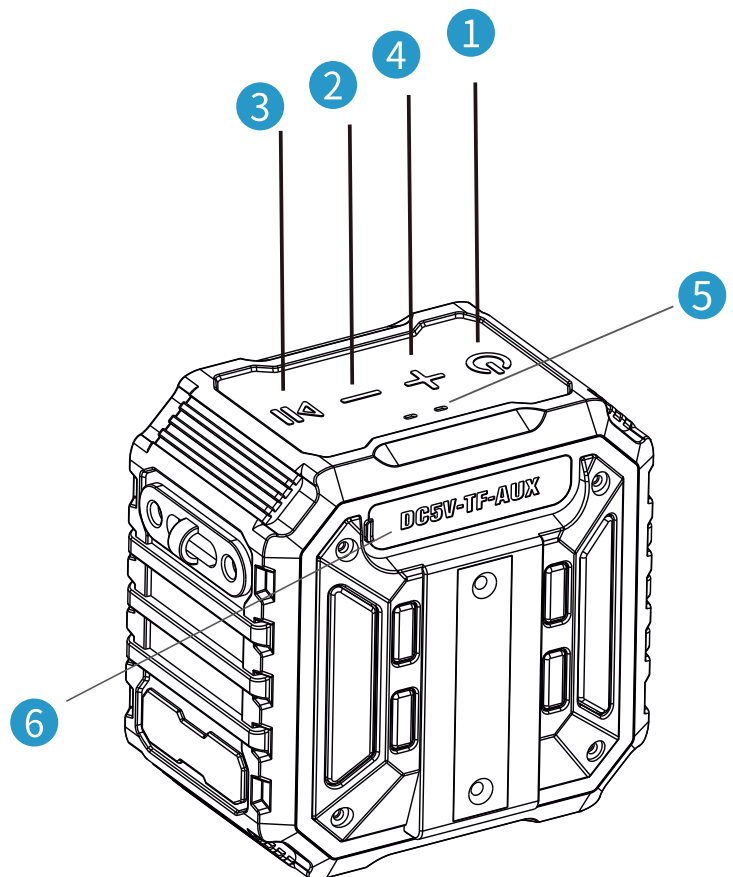

CONTROL BUTTONS

Button	Operate	Function Description
	Short Press	Mode switching
	Long Press	Press for 2s to turn on
		Press for 2s to turn off
	Long Press	Press for 8s to reset
		Enter/Exit Stereo Pairing (TWS Mode)
	Short Press	Play or pause the music
		Answer or hang up the phone call
	Long Press	Press for 2s to disconnect Bluetooth connection
		Press for 2s to reject the phone call
	Double Press	Dial the last number
	Short Press	Turn up the volume (16 levels)
	Long Press	Press for 2s to skip to the next track
	Short Press	Turn down the volume (16 levels)
	Long Press	Press for 2s to skip to the previous track

HOW TO USE

1. Pairing

After powering on, the blue indicator light will flash rapidly, indicating the speaker is in Bluetooth pairing mode. Open your phone's Bluetooth settings, find the device named "G10 Pro", and tap to connect. Once successfully paired, the blue light will stay solid.

2. TWS Interconnection

① First-Time Setup:

- Turn on both G10 Pro speakers (blue light flashes).
- Double-click the power button on each speaker.
- The yellow light will flash, indicating TWS pairing mode.
- After 3 seconds, one speaker's yellow light will stay solid (main speaker) with a fast-flashing blue light, while the other speaker's yellow light stays solid (successful TWS pairing).
- Search for "G10 Pro" in your Bluetooth list and connect. The main speaker's solid blue light confirms pairing success.

② **After First Setup:** Once manually paired the first time, future connections are automatic—just search and connect to “G10 Pro”.

③ **2-Pack Version:** The two G10 Pro speakers come pre-paired from the factory. Simply connect to “G10 Pro” in your Bluetooth settings.

3. AUX Audio Cable

Plug the AUX cable into your phone and the speaker. A blue light confirms a successful connection.

4. Type-C Cable (Supports charging while playing)

Connect the Type-C cable to your computer and the speaker. A blue light indicates a successful connection.

5. TF Card (Supports up to 64GB)

Insert the TF card—the speaker will automatically detect and play supported files. Formats: APE/FLAC/WMV/WAV/MP3.

SAFETY INSTRUCTIONS

- 1. Avoid water exposure** - Never charge near water sources or in rainy conditions to prevent electric shock hazards.
- 2. Handle cables with care** - Protect all cables from damage, paying special attention to connector integrity.
- 3. Disconnect when not in use** - Always unplug the Type-C charging cable during thunderstorms or extended periods of non-use.
- 4. Keep away from heat** - Maintain safe distance between the speaker and any heat-generating equipment (e.g., stoves, heaters).
- 5. Temperature precautions** - Prolonged exposure to extreme heat or cold may permanently damage battery performance.
- 6. No unauthorized repairs** - The speaker contains no user-serviceable parts - do not disassemble under any circumstances.

CHARGING INSTRUCTIONS

- 1. Use only 5V-1A/2A charging** – Avoid incompatible fast-charging methods (e.g., PD, Quick Charge, GaN), as higher voltages may damage the motherboard.

2. Charge before use after long storage – If unused for over 3 months, recharge the device before powering on.

3. Maintain battery health – For extended storage, recharge every 3 months to preserve battery life.

4. Fully charge before first use – Ensure the device is fully charged upon initial setup.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARRANTY

We are committed to providing you with the highest quality products. GIIKNEW G10 Pro Speaker comes with a 12-month warranty, ensuring that they are free from defects in materials and workman ship. In the unlikely event that you experience any issues with your purchased product within the warranty period, please contact us via email at giiknew_vip@outlook.com. Our dedicated customer support team will be glad to assist you and resolve any concerns you may have.