

T-37说明书 成品尺寸：73X85mm 80g书纸 四折

LED indicator status	
Power on	white light is on for 1 s
Power off	orange light is on for 1 s and then goes off
TWS pairing status	left/right earphone will flash white and orange lights alternately
The device pairing status is displayed	white and orange lights are flashing on the primary earphone (the lights of the secondary earphone are off)
Connection successful	Light off
Headset low battery warning	orange light flashes
Headset charging	orange indicator light of the earphone is steadily on
Headphones fully charged	orange light off
Charging case charging	Digital display (flashing) of LED screen
The charging case is fully charged	The charging case is fully charged. The LED screen displays the number 100 (constantly on)

Product diagram	
	
	

Touch operation	
■ General mode	Voice Assistant: Press and hold the touch area of the left earphone for 2 seconds to start Volume Increase: Click on the right earphone touch area Volume Down: Click on the left earphone touch area
■ Music playback mode	Play/Pause: Double click on any earphone touch area Previous: Three hits left earphone touch area Next: Three hits right earphone touch area
■ Call mode	Answer/hang up a call: Double click on any earphone touch area Reject incoming calls: Press and hold any earphone touch area for 2 seconds
■ Game/ Music mode switch	Music Mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt "music mode") Game Mode: Press and hold the right earphone touch area for 2 seconds (Voice prompt "game mode")


Charging case charging specifications	
The Type-C charging cable connects the charging case to the 5V power adapter. (Gentle reminder: headset battery power below 3.3V to start broadcasting low battery reminder)(Voice prompt: "battery low"), red light blinking, every 1 minute to remind you to charge the headset in time	

Product specification	
BT version: V5.4 Transmission distance: ≥10m Speaker unit: Φ13mm 32Ω Frequency response: 20Hz-10KHz Sensitivity: 118dB±3dB Rated current(headset): 30mA	Rated current(Charging case): 300mA Music playing time: ≈5-7hours Charging time (charging case): ≈1.5hours Battery capacity (charging case): 300mAh Charging time (headset): ≈1.5hours Battery capacity(headset): 30mAh

Packing list	
	Earbud *2 earbud cover(S)*2 earbud cover(L)*2
	Type-C Charging cable *1
	Charging case *1
	Instructions and Warranty card *1

Product operation instructions	
BT pairing: 1. Remove the earphones from the charging case, and the left and right earphones automatically enter the Bluetooth pairing mode, waiting for connection. (Voice prompt tone: "pairing") 2. Turn on BT on the mobile phone, search the device name "T-37", and click to enter the connection. (Voice prompt tone: "connected")	

Restore factory settings	
1. When no device is connected, the left/right headphones are switched off after 5 consecutive taps on the left/right headphones. 2. When connecting the device, after 5 consecutive clicks on the left/right headset, long press again for 10s within 3s, the left/right headset turns off. (Voice prompt: "power off")	

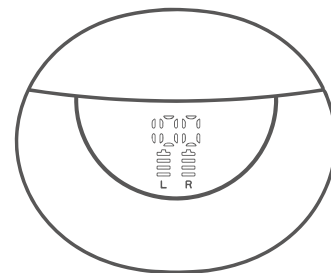

T-37 True wireless BT earbuds
T-37 Auriculares BT verdaderamente inalámbricos

正面

Estado del indicador LED	
Encendido	Luz blanca se enciende durante 1 s
Apagado	La luz naranja se enciende durante 1 s y luego se apaga
Estado de emparejamiento TWS	El auricular izquierdo / derecho parpadeará alternativamente con luz blanca y luz naranja
Estado de emparejamiento de dispositivo de entrada	Las luces blancas y naranjas del auricular principal parpadearán (las luces del auricular secundario se apagan)
Conexión exitosa	Luz apagada
Advertencia de batería baja del auricular	La luz naranja parpadea
Auriculares cargando	La luz indicadora naranja del auricular se mantiene encendida
Auriculares completamente cargados	La luz naranja se apaga
Cargando la funda de carga	Visualización digital (parpadeante) de la pantalla LED
Cargador completamente cargado	El estuche de carga está completamente cargado. La pantalla LED muestra el número 100 (permanecido encendido)

Diagrama del producto	
	
	

Operación táctil	
■ Modo general	Asistente de voz: Mantenga presionado el área táctil del auricular izquierdo durante 2 segundos para iniciar. Aumentar el volumen: Haga clic en el área táctil del auricular derecho. Disminuir el volumen: Haga clic en el área táctil del auricular izquierdo.
■ Modo de reproducción de música	Reproducir/Pausar: Haga doble clic en cualquier área táctil del auricular. Anterior: Tocque tres veces el área táctil del auricular izquierdo. Siguiente: Tocque tres veces el área táctil del auricular derecho.
■ Modo de llamada	Contestar/colgar una llamada: Haga doble clic en cualquier área táctil del auricular. Rechazar llamadas entrantes: Mantenga presionado cualquier área táctil del auricular durante 2 segundos.
■ Cambio entre modo de juego y modo de música	Modo Música: Mantenga presionado el área táctil del auricular derecho 2 segundos (se oirá "modo música"). Modo Juego: Mantenga presionado el área táctil del auricular derecho 2 segundos (se oirá "modo juego").

Especificaciones de carga de la funda de carga	
El cable de carga Type - C conecta la funda de carga al adaptador de poder de 5V. (Recordatorio amable: cuando la batería del auricular está por debajo de 3.3V, comenzará a emitir una advertencia de batería baja)(Mensaje de voz: "batería baja"), parpadeo de luz roja, cada 1 minuto para recordarte que cargues el auricular a tiempo.	

Especificaciones del producto	
Versión de BT: V5.4 Distancia de transmisión: ≥10m Unidad de altavoz: Φ13mm 32Ω Respuesta de frecuencia: 20Hz-10KHz Sensibilidad: 118dB±3dB Corriente nominal (auriculares): 30mA	Corriente nominal (estuche de carga): 300mA Tiempo de reproducción de música: ≈5-7 horas Tiempo de carga (estuche de carga): ≈1.5 horas Capacidad de la batería (estuche de carga): 300mAh Tiempo de carga (auriculares): ≈1.5 horas Capacidad de la batería (auriculares): 30mAh

Lista de embalaje	
	Auriculares*2 tapa de los auriculares(S)*2 tapa de los auriculares(L)*2
	Cable de carga Type-C *1
	Estuche de carga *1
	Instrucciones y tarjeta de garantía*1

Especificaciones de carga de la funda de carga	
Emparejamiento BT: 1. Retire los auriculares de la funda de carga, y los auriculares izquierdo y derecho entrarán automáticamente en el modo de emparejamiento Bluetooth, esperando la conexión. (Tono de mensaje de voz: "emparejando") 2. Encienda el BT en el teléfono móvil, busque el nombre del dispositivo "T - 37" y haga clic para entrar en la conexión. (Tono de mensaje de voz: "conectado")	

Restaurar la configuración de fábrica	
1. Cuando no hay ningún dispositivo conectado, los auriculares izquierdo/derecho se apagan después de 5 toques consecutivos en los auriculares izquierdo/derecho. 2. Cuando se conecta el dispositivo, después de 5 pulsaciones consecutivas en el auricular izquierdo/derecho, mantén pulsado nuevamente durante 10 segundos dentro de los 3 segundos siguientes, y el auricular izquierdo/derecho se apagará. (Se emitirá un aviso de voz: "Apagado").	

FCC Warning Statement	
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.	
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.	
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for assistance.	
This device has been evaluated to meet general RF exposure requirements. It can be used in portable exposure conditions without restriction.	

反面