


Product Specifications

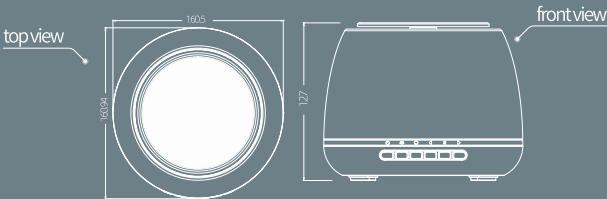

Charging & Power Supply

Charging Specs

- Input Voltage: 5V / 1A (Use original or certified charger)
- Charging Current: 0.8A – 1A
- Full Charge Time: Approx. 2.5–3 hours (depending on battery capacity)

Battery Info

- Battery Capacity: 2600 mAh
- Operating Voltage: 3.3V – 4.2V (Lithium battery)
- Power-Off Consumption: $\leq 15\mu\text{A}$ (Ultra-low standby power)

Charging Instructions

- Use a Type-C/USB cable to connect the speaker's charging port to a power adapter.
- The indicator light is red while charging and turns green when fully charged.
- Music Playback Time: 6–8 hours

Troubleshooting



Problem	Solution
Cannot Power On	Check the battery level. Charge for 30 minutes and try again
Bluetooth Connection Failed	Turn off other Bluetooth devices to avoid interference. Restart the speaker
Lights Not Responding	Make sure the speaker is not in off mode. Restart the speaker
Turntable Not Rotating	Ensure the speaker is not in off mode. Restart the speaker

User Manual



- Model: XR-YX003
- Package Weight: 840g
- Package Dimensions: 19 × 19 × 15 cm

Rotating Display Speaker

This product is a multifunctional portable Bluetooth speaker.

It also functions as a variable-speed rotating display stand, featuring 7-color RGB lighting, a rotating turntable design, Bluetooth 5.2 high-speed connectivity, and a built-in lithium battery. Suitable for both indoor and outdoor use, it offers high-quality music playback, interactive lighting effects, and product display capabilities.



Dreamy Light Show



Immersive Sound



Dual Speakers



Touch-Sensitive Controls

Bluetooth Name

MoodTune

Notices

Powering On

- When powered on, the device will automatically run a self-check, testing the lights and rotating base.
- If Bluetooth is not connected after powering on, it will automatically turn off after 5 minutes to save power. Press the power button briefly to reconnect.
- The product will automatically power off after 15 minutes of inactivity to conserve energy.

Safe Use

- Do not disassemble or modify the speaker to avoid short circuits or electric leakage.
- Keep away from high temperatures, open flames, and humid environments to prevent battery damage or swelling.

Battery Care

- Fully charge the speaker before first use.
- If unused for extended periods, charge once every 3 months to maintain battery health.
- Avoid full discharge (charge when battery level drops below 10%).

Lights & Turntable

- Gradient lighting mode may increase power consumption. Turn it off to extend battery life when not needed.
- Do not forcibly stop the turntable while it is running to avoid motor damage.
- Make sure the product is placed on a flat surface before placing display items on the turntable to prevent them from falling.

Additional Tips

- When adjusting volume, press and hold the button for continuous adjustment; release to stop.
- If Bluetooth connection fails, restart the speaker or clear your phone's Bluetooth pairing list and try again.
- When the battery is low, the lights may flash with the music.

Load capacity


- approx. 200g at level 1, 500g at level 2.

Bluetooth Connection Guide

- Automatically enters pairing mode when powered on
- Enable Bluetooth on your phone/device, then select "MoodTune" to connect
- Bluetooth 5.2 supported · Effective range: 10m (unobstructed)

Button Functions Description

Button Layout: 1-6 (left to right)

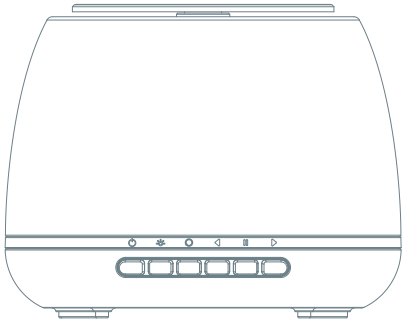

Buttons	Operation	Functions
	Short Press	Power: Short press to turn on
	Long Press	Long press to turn off
	Short press	Light On (Single Color) · Click Again to Cycle Through 7 Colors
	Double press	Double-click after power-on: Activates RGB gradient color mode
	Long press	Light Off
	Short press	Press once: Turns on (default low speed) Press again: Switches to high speed Press a third time: Turns off
	Short press	Previous Track
	Long press	Volume Down
	Short press	Play/Pause Toggle
	Short press	Next Track
	Long press	Volume Up

FCC WARNING

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction