

Instruction Manual

Product number: T70M

Foreword

This product is a high-end high-definition sports camping product launched in response to market demand. The product has industry-leading digital video recording, camera, slow photography, video display and other functions. It is your outdoor sports, home security, deep waterproof and other functions. Meet your shooting anytime, anywhere.

Operation notes

1. This product is a high-precision product, please do not drop or hit it
2. Do not put the camera close to objects with strong magnetism, such as magnets and motors. Also, avoid placing the product near objects that emit strong radio waves. Strong magnetic fields may cause product failure or damage images and sound.
3. Please select a brand of Micro SD card. Ordinary cards cannot be guaranteed for normal use.
4. Do not store the Micro SD card in or near a strong magnetic place to avoid losing the data stored in the Micro SD card.
5. During the charging process, if there is overheating, smoke or odor, please immediately pull out the power and stop charging to avoid fire.

6. When charging, please keep the product out of the reach of children. The power cord may cause children to accidentally suffocate or get an electric shock.
7. Please place the product in a cool, dry and dust-free place.

Product Features

>The waterproof shell with waterproof function is convenient for you to shoot wonderful water sports, the waterproof shell can be deeply waterproof

>Video resolution up to 4608x2592

>Wide-angle HD lens

>Ultra high-definition 1.3-inch IPS screen + 1.3-inch high-definition secondary screen, display and play wonderful videos

>Removable battery, easy to replace the battery, extend the service life

>Support up to 256G memory card

>Various video recording formats: 5K, 4K, 2.7K, 1080P, 720P

>Various shooting modes: normal, timer, automatic, continuous shooting

> Multiple recording modes: normal, loop, time-lapse, slow motion

 
Product diagram



- | | |
|-----------------------------|----------------|
| 1 Speaker | 2 Shutter key |
| 3 Indicator light | 4 Front screen |
| 5 Memory card slot/USB port | 6 Power key |
| 7 Touch screen | 8 Down key |
| 9 Indicator light | 10 Down key |

Key function definition

>Touch screen operation gesture

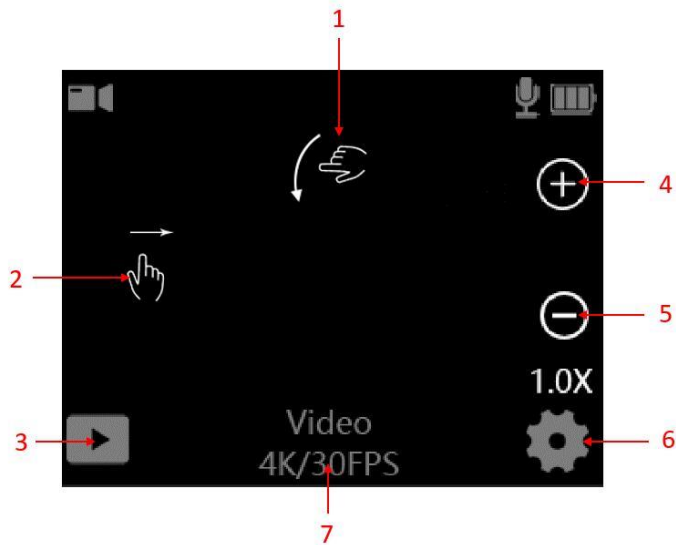

1.  Slide down to open the WIFI/Power off/Lock interface.
2.  Slide to switch between recording and shooting modes.
3.  Click to open the album.
4.  Digital zoom: zooming in.
5.  Digital zoom: zoom out
6.  Click to open the menu
7.  Click to open mode selection

> power key

1. Press and hold the "power key" for about 2-3 seconds to turn on/off.
2. After turning on, briefly press this button to enter the shooting mode selection interface. Press the down keys to select the desired shooting mode, and then press the shutter button to confirm.
3. Short press twice under the shooting interface to enter the album.
4. If the camera crashes, press and hold this button for 15 seconds to force it to shut down.

> Shutter key

1. In recording mode, short press to start recording, short press again to stop recording
2. Short press to take a photo in the photo mode
3. In the file playback mode, short press to play the video, long press to delete the current file
4. Short press to confirm option in the setting menu
5. In the photo or video mode, long press the shutter key to open the setting menu corresponding to the current shooting mode.

> Down key

1. Long press in video mode / photo mode to switch the screen display.
2. In the album, the stand-alone button can browse videos or photos.
3. In the setting mode, short press this key to select the setting item in the menu.

>USB socket

There are 3 function choices when connecting to a computer:

1. USB mode, select this function, the camera acts as a card reader function, you can view the video and photo files in the Micro SD card on the computer, and charge the camera at the same time.
2. Camera, select this function, the camera can be used as a computer camera, and charge the camera at the same time.
3. Select the charging mode, the camera can record or take pictures while charging.
4. Connect the 5V power adapter to charge the camera.

> Micro SD card slot

Support 16-256G capacity Micro SD card. (Note: High-speed card with C10 or above standard should be selected. Please format it with this machine before using it)

>Indicator light

Work indicator: blue light

Charging indicator: red light

Product main function introduction

 
1. Main/sub screen display switching

This product is equipped with a 1.3-inch high-definition front display to enhance the user's self shooting experience. Pictures can be switched between the main screen and the sub screen.

Main / sub screen display switching mode: in video mode and photo mode, long press " down key" to switch from main screen display to sub screen display, and long press again to switch back to main screen display.


2. Camera settings

Briefly press the "power key" in the photo or video mode to open the mode selection interface, press the " down key " to select the required shooting mode, and then press the "shutter key" to confirm.

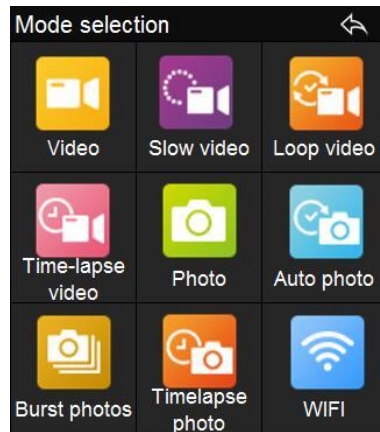

3. Setting menu

 
Press and hold the shutter key for 2 seconds in the recording or photographing mode to enter the menu.

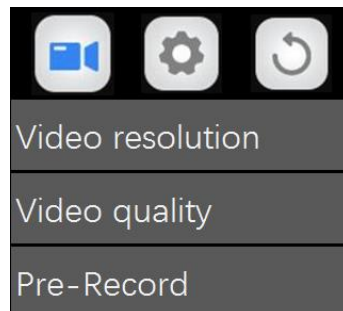

Long press the “down key” to switch between different settings menus: current mode settings menu → camera system settings menu → exit.

Press the “down key” to scroll down to select the item to be set, and press the shutter button to confirm.

 4. Video, photo function

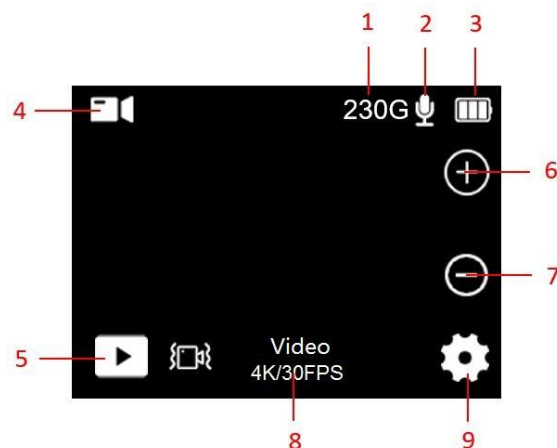

1 Available storage capacity 2 Sound recording

- | | |
|--------------------------|---------------------------------|
| 3 Battery power | 4 Mode icon |
| 5 Album Icon | 6 Digital zoom: zooming in |
| 7 Digital zoom: zoom out | 8 Mode and resolution Menu icon |
| 9 Menu icon | |

5. WIFI and APP function

APP download

For Android, please search " **SupCam Pro** " in the Google APP store to download and install. IOS system search " **SupCam Pro** " in the Apple App Store to download and install. Or scan the QR code below to download the APP.



Start WIFI

 
In video mode or photo mode, press the "down button" to turn on WIFI. The camera enters the WIFI interface and displays the WIFI name "ActionCam_XXXX" and WIFI password "12345678". Find the corresponding WIFI name of the camera in the WIFI settings of the phone to connect to WIFI.

APP operation

Connect the phone to the camera WIFI and open the APP to enter the APP homepage.

- A) Click " ENTERPRISE VIEW" to enter the APP operation interface.
- B) Album: Download videos and photos from the camera to the phone and keep them in this album.


SupCam Pro

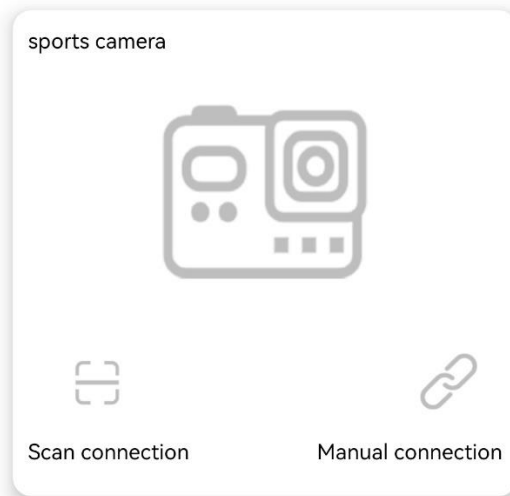

ENTERPRISE VIEW



 APP operation interface function introduction

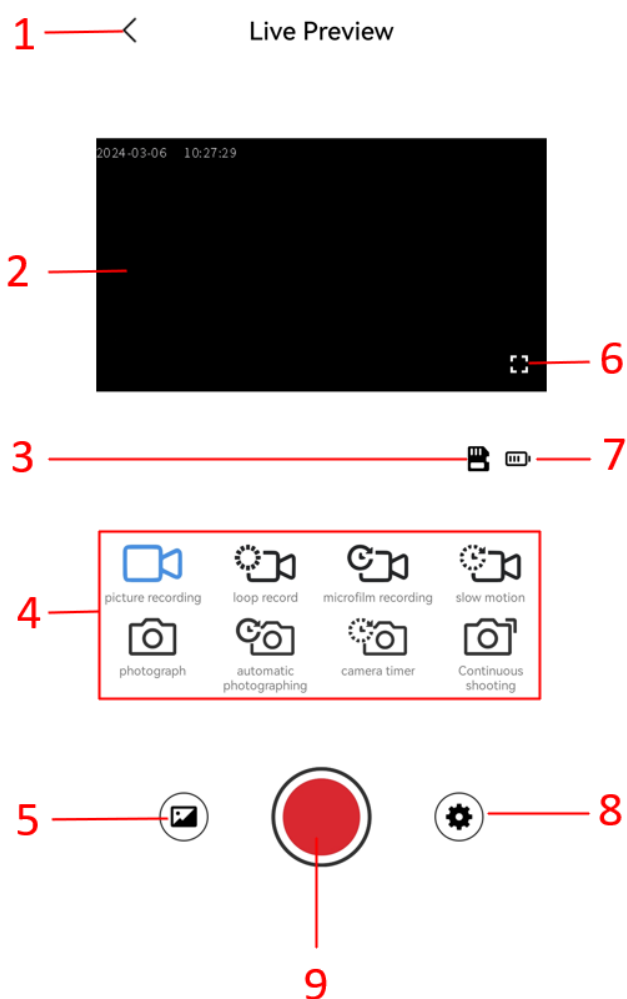

- | | |
|------------------------|-----------------------|
| 1 Drop out | 2 Preview Image |
| 3 SD card | 4 Working mode |
| 5 Album | 6 Full-Screen Preview |
| 7 Camera battery level | 8 Menu |
| 9 Shutter button | |

6. Specifications

Image sensor	SONY
Function mode	Recording, photo, playback....
LCD screen	1.3" IPS HD screen + 1.3" IPS HD screen
Picture resolution	64M,56M,50M,30M,24M,20M,12M,8M
Video resolution	5K(4608*2592P30fps) 4K(3840*2160P60/30fps), 2.7K(2688*1520P60/30fps), 1080P(1920*1080P60/30fps), 720P(1280*720P120/60/30fps)
Storage medium	Micro SD Card (Maximum supporting 256GB)
File format	JPG H.264(MP4)

USB Port	USB-C
Power supply	Built-in 3.7V rechargeable lithium battery
Menu language	English/ Spanish.....
Power saver	3min/5min/10min/OFF
Operation system requirements	Windows XP/ Vista/7/8, Mac 10.8
Dimensions	68.5*32*37.1mm

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.