

Maxcam Remote FAST Start Guide

1. Fully charge your camera and remote.
2. Power on your remote and Maxcam POV action camera.
3. You will need to pause the camera and remote for syncing.
4. With the camera and remote paused, place one finger on the camera mode button and one on the camera Power/ Record button. Within 2 seconds: Push and hold the mode button, then push and release the power / record button once while holding the mode button. You will see the remote connection number increase by 1 number, if this is the first camera synced a 1 will be displayed on the remote. (If you don't push the power record Button within 2 sec the cameras Wi-Fi will turn on.)

*For more detailed Instructions and feature overviews, please visit www.maxviewoptics.com

Highlights

After initial pairing, remote controls up to (5) Maxcam action cameras with one button. Functions include Power ON Auto Record /Pause/Off and when not recording conserves batteries with the Auto Power off feature. All cameras and remote will power down after 3 min when not recording. But don't worry they all will power back on just as fast with a push of button. The Maxcam remote technology gives you the feedback you need, all on an LCD screen: Number of connected cameras, record length, remote battery life and the green LED indicate recording, pause/on and off.

Maxcam remote has been optimized at 100 feet giving you the distance and control over your cameras.

Note: Maxcam remote is only compatible with Maxcam POV action cameras.

FCC REGULATIONS

Warning: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for

help.

The device has been evaluated to meet general RF exposure requirement.