

S5 Tablet

Quick Start Guide

English / Español

Table of Contents

 *From here on: Guide in English*

01 Device Overview	3
02 Ports & Physical Dimensions	4
03 Unboxing & First-Time Setup	5
04 Connect to Wi-Fi	5
05 Sign in to a Google Account	6
06 Pre-Installed Apps	6
07 Managing Pre-Installed Apps	7
08 Using a microSD Card & Transferring Files	7
09 Android 14: Screen-Off Music Playback	8
10 Parental Controls	9
11 Parental Controls (continued)	11
12 FAQs	13

 *A partir de aquí: Guía en español*

13 Información del Dispositivo	14
14 Puertos y Botones	15
15 Primeros Pasos	16
16 Conectar a Wi-Fi	16
17 Cuenta y Aplicaciones	17
18 microSD y Archivos	17
19 Controles Parentales	18
20 Música con Pantalla Apagada	19
21 Preguntas Frecuentes	19

 *From here on: Guide in English*

22 FCC Compliance Statement	20
23 Warranty & Support / Garantía y Soporte	20

Device Overview

Operating System	Android 14
Processor	MediaTek MT8766
Display	5.5-inch HD screen (720 × 1280)
RAM	4GB
Internal Storage	64GB eMMC
Expandable Storage	microSD (TF) card up to 1TB
Battery	3.85V / 3000mAh (up to 10–15 hours music playback)
Headphone Jack	Standard 3.5mm (supports 4-pole mics, including Apple headphones)
USB Port	USB Type-C (charging, file transfer, OTG support)
Microphone	Built-in single silicon mic (for voice search)
Connectivity	Wi-Fi 2.4GHz / 5GHz (no cellular, no SIM card)
Camera	None – no photo or video capability

 *Privacy-first design: No camera, no GPS, no mobile data—just music, books, and safe browsing.*

Ports & Physical Dimensions

Key Components:

- | | |
|----------------------|--------------------------|
| 1 Volume Up button | 5 USB Type-C port |
| 2 Volume Down button | 6 Microphone |
| 3 Power button | 7 3.5mm headphone jack |
| 4 Built-in speaker | 8 microSD (TF) card slot |



Unboxing & First-Time Setup

What's in the Box:

- S5 Media Player
- USB-C charging cable
- microSD ejection pin
- This Quick Start Guide

Powering On (It's Simple!): Press and hold the power button (right side) for 3 seconds until the screen lights up. Wait 1–2 minutes while the device boots into setup.

 *No special steps needed—just press and go!*

Connect to Wi-Fi

- After startup, select your language.
- Tap your home Wi-Fi network name.
- Enter the password → Tap “Connect”.
- You'll see  “Connected” when successful.

 This device only uses Wi-Fi—it cannot make calls, send texts, or use mobile data.

Sign in to a Google Account

A Google account lets you:

- Download apps from the Play Store
- Sync books, music, and settings
- Use YouTube, Google Play Books, and more

During setup, tap “Add Account” → Google. Sign in with an existing Gmail, or tap “Create account” to make a new one (free).

Pre-Installed Apps

Your device comes with popular U.S. media apps, pre-installed and ready to use.

-  Local Music Player: RetroMusic Player
-  Online Music Services: Spotify, Spotify Kids, Amazon Music, Apple Music, Deezer, Pandora
-  Reading & Audiobooks: Kindle, Audible, Audiobooks, Libby, LibriVox

 *All apps can be uninstalled if not needed—and reinstalled anytime from the Google Play Store.*

Managing Pre-Installed Apps

- Uninstall: Long-press any app icon → Tap “Uninstall”
- Reinstall: Open Play Store, search the app name, and tap “Install”

Recommendation: Keep RetroMusic Player for reliable local music playback with screen off.

Using a microSD Card & Transferring Files

microSD Card Tips

Supports cards up to 1TB. Always power off before inserting/removing. Recommended folders: Music/, Books/

Transfer Files from Computer

1. Connect the S5 Media Player to your computer using the USB-C cable.
2. On the device, swipe down and select “File Transfer” from the USB notification.
3. On your computer, drag files into the correct folders (e.g., Music, Books).
4. When done, swipe down the notification panel → Tap “Eject device” → Then unplug.

Android 14: Screen-Off Music Playback

Whether music continues when the screen is off depends on content type, not just the app.

-  Plays with screen off (recommended):
 - RetroMusic Player playing local audio files
 - Spotify, Deezer, Amazon Music playing standard songs (not videos)
-  Stops when screen turns off:
 - YouTube / YouTube Music (free accounts)
 - Spotify “Music Videos” or video podcasts
 - Any content showing full-screen video (even if you’re only listening)

 *If you see moving video (like an MV), it’s treated as video—not audio—and will pause when the screen turns off. For reliable background play, use local MP3s in RetroMusic Player.*

Parental Controls

Option 1: Set Up Parental Controls on the S5 Media Player

You can complete the full setup directly on the S5 Media Player—no other phone needed. The device will link a child account to your parent account and apply basic restrictions.

Setup Steps:

- Go to **Settings** → **Digital Wellbeing & Parental Controls**.
- Tap “**Parental controls**” → “**Get started**”.
- Sign in with your **child’s Google Account** (create one if needed).
- When prompted, sign in with your **parent Google Account** to approve supervision.
- Choose basic restrictions:
 - Daily screen time limit
 - Allowed apps (others will be hidden)
 - Location sharing (if supported by the device)

 *Your parent account will remain signed in on this device. Wi-Fi is required for enforcement. For better privacy and remote control, consider Option 2.*



Set up parental controls

You'll choose age-appropriate content ratings, privacy settings, and screen time rules for this device and your child or teen's Google Account.



Let's do this

Parental Controls (continued)

Option 2: Google Family Link (Recommended!)

Manage your child's device securely from your own smartphone—without signing your account into the S5 Media Player.

Setup Steps:

- On your smartphone (iOS or Android), install the **Google Family Link** app.
- Open the app and sign in with your **parent Google Account**.
- Follow the prompts to create or select your child's account.
- On the S5 Media Player, sign in only with the **child's Google Account**.
- From your phone, you can:
 - Approve or block app installations
 - Set daily screen time limits and bedtime schedules
 - Remotely lock the device
 - View activity reports (requires recent Wi-Fi sync)

 *Never sign in with your parent account on the S5 Media Player—keep only the child account on the device for best security and performance. Wi-Fi is required for syncing and enforcing rules.*



Get more controls

Download the Family Link app on a parent's device
from Google Play or the App Store



Supervise your child from a parent's device



See this device's location and label important

places

FAQs

English

- **Q: My computer doesn't see the device. What should I do?**
 - A: Try a different USB cable (some only charge). On the device, swipe down and select "File Transfer" from the USB notification.
- **Q: Why does Spotify stop when the screen turns off?**
 - A: You may be playing a "Music Video." Go back to the song list and tap a regular track (no video).
- **Q: How do I shut down the device?**
 - A: Press and hold the power button for 3 seconds → Tap "Power off".
- **Q: Can I locate this device if it's lost?**
 - A: No—this device has no GPS. However, Family Link still works for app approval and screen time control.
- **Q: I forgot my lock screen password. How can I reset it?**
 - A: Power off, then hold **Power + Volume Up** to enter Recovery. Use volume keys to select "wipe data/factory reset", confirm with Power, then choose "Reboot system now".

Información del Dispositivo

 *A partir de aquí: Guía en español*

Sistema	Android 14
Pantalla	5.5" HD (720×1280)
RAM / Almacenamiento	4 GB / 64 GB + microSD hasta 1 TB
Batería	3000 mAh (10–15 h música)
Auriculares	Jack 3.5 mm (compatible con micrófonos Apple)
USB	Tipo-C (carga, archivos, OTG)
Conectividad	Wi-Fi 2.4/5 GHz (sin SIM, sin datos móviles)
Cámara	Ninguna

 *Sin cámara ni GPS: solo música, libros y navegación segura.*

Puertos y Botones

- | | |
|-----------------------|-------------------------------------|
| 1 Botón Subir volumen | 5 Puerto USB Tipo-C |
| 2 Botón Bajar volumen | 6 Micrófono |
| 3 Botón de encendido | 7 Entrada para auriculares (3.5 mm) |
| 4 Altavoz frontal | 8 Ranura para tarjeta microSD |



Primeros Pasos

Contenido de la caja: S5 Media Player, cable USB-C, pin para microSD, guía rápida.

Encender: Mantén presionado el botón de encendido (3 seg) hasta que la pantalla se ilumine.

 ¡Listo! No hay pasos adicionales.

Conectar a Wi-Fi

- Selecciona tu idioma.
- Toca tu red Wi-Fi.
- Ingresa la contraseña → “Conectar”.
- Verás  “Conectado”.

 Solo usa Wi-Fi—no tiene llamadas ni SMS.

Música con Pantalla Apagada

✓ Funciona bien:

- RetroMusic Player (archivos locales)
- Spotify / Deezer / Amazon Music (solo canciones de audio, sin video)

✗ Se detiene:

- YouTube / YouTube Music (con cuenta gratuita)
- Videos musicales o podcasts con imagen

💡 Si ves un video, el sistema lo pausará al apagar la pantalla. Usa archivos MP3 en RetroMusic para reproducción continua.

Controles Parentales

Opción 1: En el propio dispositivo

- Ajustes → Bienestar digital → Controles parentales.
- Inicia sesión con la cuenta del niño, luego con la tuya.
- Configura límite de tiempo y apps permitidas.

 *Tu cuenta quedará en el dispositivo. Se requiere Wi-Fi.*

Opción 2: Google Family Link (recomendado)

- Instala “Family Link” en tu teléfono.
- Crea una cuenta para tu hijo.
- En el S5, inicia sesión **solo con la cuenta del niño**.
- Controla apps, horarios y bloqueo desde tu móvil.

 *No inicies sesión con tu cuenta en el S5.*

Música con Pantalla Apagada

✓ Funciona bien:

- RetroMusic Player (archivos locales)
- Spotify / Deezer / Amazon Music (solo canciones de audio, sin video)

✗ Se detiene:

- YouTube / YouTube Music (con cuenta gratuita)
- Videos musicales o podcasts con imagen

💡 Si ves un video, el sistema lo pausará al apagar la pantalla. Usa archivos MP3 en RetroMusic para reproducción continua.

Preguntas Frecuentes

- **¿La computadora no ve el S5?** Usa un cable que soporte datos (no solo carga) y selecciona “Transferencia de archivos”.
- **¿Spotify se detiene al apagar la pantalla?** Estás escuchando un video. Elige una canción normal o usa RetroMusic.
- **¿Cómo apagar el dispositivo?** Mantén presionado el botón de encendido → “Apagar”.
- **¿Se puede rastrear si se pierde?** No tiene GPS, pero Family Link sigue funcionando para control remoto.

FCC Compliance Statement

Warning: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception—which can be determined by turning the equipment off and on—the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirements. It may be used in portable exposure conditions without restriction.

Warranty & Support / Garantía y Soporte

One-Year Limited Warranty / Garantía limitada de un año

What's Covered? / ¿Qué cubre?

- Defects in materials or workmanship under normal use during the warranty period.

Defectos en materiales o mano de obra bajo uso normal durante el período de garantía.

What's Not Covered? / ¿Qué no cubre?

- Damage caused by accidents, drops, liquid exposure, misuse, or unauthorized modifications.

Daños causados por accidentes, caídas, exposición a líquidos, uso indebido o modificaciones no autorizadas.

- Cosmetic wear that does not affect device functionality.
Desgaste estético que no afecte la funcionalidad del dispositivo.
- Damage from improper storage, operation outside specifications, or third-party accessories.
Daños por almacenamiento inadecuado, uso fuera de las especificaciones o accesorios de terceros.

How to Claim / Cómo solicitar servicio

- Contact us with your device serial number and order number.
Contáctanos con el número de serie del dispositivo y tu número de pedido.
- Warranty service may require shipping the device to an authorized service center.
El servicio de garantía puede requerir el envío del dispositivo a un centro autorizado.

Support Channels / Canales de soporte

-  www.gooddealer.cn/pages/contact/
-  support@gooddealer.cn



FC Made in China

 support@gooddealer.cn

© 2025 GoodDealer