

Wireless Trailer Light Kit

100% Cable-free Solution



INSTRUCTION

Please read the instruction carefully and keep it properly


LED TRAILER LIGHT KIT

WIRELESS Instruction Manual

Content:




• insert plug

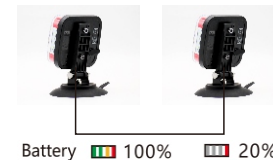

Parameters:


Power	5W
Input	10~30V,DC
LEDs	36 pcs
Color	Red, White
IP Rating	IP67
Operating Temp	-40°~+65°C
Approvals	ECE R4 R6 R7, EMC R10, RoHS
Transmission	100 ft
Charging	2.5H
Using	8H
Mounting	Magnet
Size	108X102X68mm

Battery status:

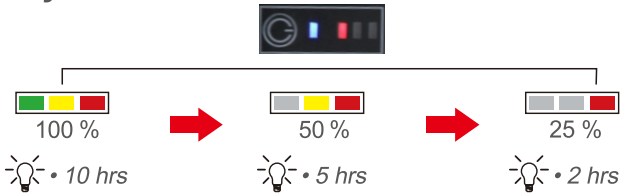


1. Check the battery status before using and charging them if necessary.
2. Check the light functions before using .
3. When not in use for a long time, please recharge the lamp every 2 months.
4. Replacement lamps or additional lamps must be re- paired before use.

Functions:

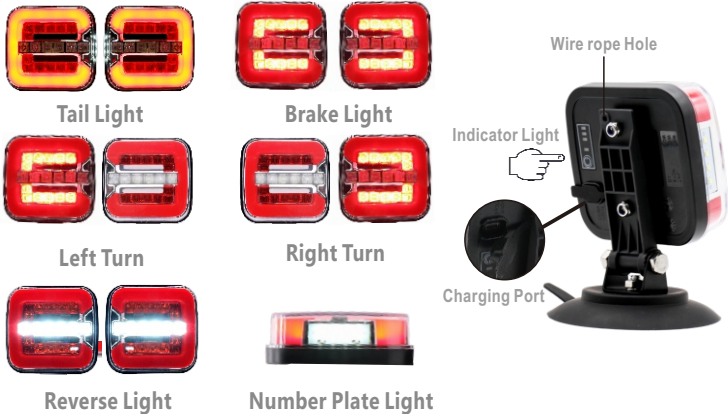

Using:
(Plug&Play)


The manufacturer has properly paired the lamps and transmitter and it is ready to use with the following simple steps.

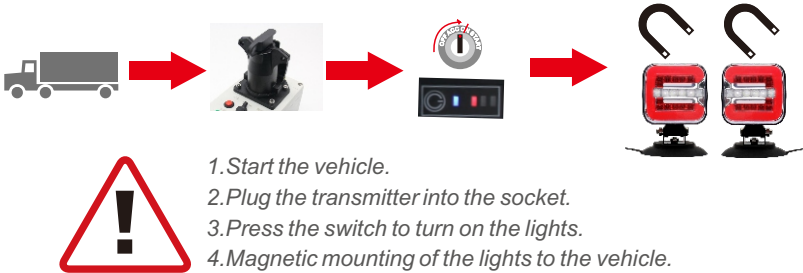

Tips: Before driving, make sure all signals are working properly. Avoid driving violations.

Pairing:

In the rare case that it does not work properly, please re-pair the lamp and emitter as follows:

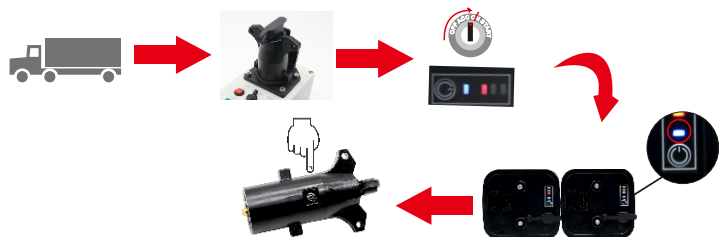

1. Start the vehicle.
2. Prepare both the left and right lights, then press their power buttons at the same time.
3. Press the pairing button on the transmitter 1-2 times within 3 seconds of pressing light's power buttons.
4. Upon completing the above steps, the light will automatically pair with the transmitter. If pairing fails, repeat the steps.

NOTE: After re-pairing, if the lights still don't come on, try another vehicle if conditions allow. If it is not possible to test again, please contact customer service and we will offer you a replacement or refund.


Installation:

1.Iron Plate

If your vehicle does not contain iron, such as wood or plastic, you can use an iron plate to mount it on, and then mount the magnetic light on the plate.




2.Wire Rope

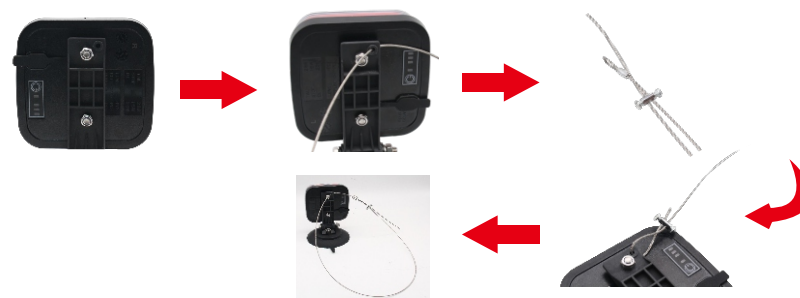

1. Pass one end of the wire rope through the hole on the bracket,
2. Pass the wire rope through the hole on the other end of the wire rope,
3. Pull the wire rope through one of the holes on the studs,
4. Wrap the wire rope around the steel tube on the car,
5. Then pass it through the other hole on the studs,
6. Tighten the screws at last.

In this way, even if the magnetic light is dropped, it will not be lost.

Product chart:

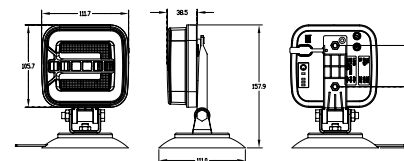

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.