

XIHAMA

TikTok Remote Control & Wireless Earbuds User Manual



PREFACE

Thank you for choosing XIHAMA B5 TikTok Remote Control & Wireless Earbuds. Please read this manual carefully before use and take special notice of the section on **Precautions** to ensure optimal performance and safety. Keep it for future reference.

I PRECAUTIONS

⚠ Important Notes

- * This device is only compatible with iOS 14+ and Android 7+ systems. Please update your device to the required version before use.
- * The remote control and earbuds operate on different system profiles. To use both on the same device simultaneously, please connect each via Bluetooth according to the instructions. (Most smartphones and tablets support dual Bluetooth connections.)

Other Reminders

Charging & Storage

- Charge both the earbuds and charging case fully before first use for best performance.
- Use only compatible 5V / 1A chargers and cables to avoid damage. Avoid using fast chargers (over 5V/2A).
- Charge in a safe environment, and unplug the device once fully charged to prevent overcharging.
- If not used for a long time, charge the device regularly to maintain battery health.
- Store in a cool, dry, and ventilated place, avoiding extreme temperatures and humidity.

Usage Guidelines

- This remote control doesn't support audiobook apps, music apps, or Kindle devices (including Kindle, Oasis, and Paperwhite).
- Modified devices (e.g., rooted or flashed phones) may experience compatibility issues with the remote.
- For best remote control performance, avoid using split-screen mode on your phone.
- Keep the product out of reach of children and pets to prevent accidental ingestion or damage.
- To protect your hearing, it's recommended to keep the volume at a comfortable level and avoid extended listening sessions.
- This device is only sweat-resistant. Do not use in rainy, snowy, or foggy conditions to avoid water damage.
- Do not disassemble or modify the earbuds or charging case.
- Avoid dropping or subjecting the product to strong impact.
- Clean the earbuds and charging case with a dry cloth. Use a dry cotton swab to gently clean the charging contacts inside the case. Avoid using abrasive or corrosive cleaners.

PRODUCT OVERVIEW

1.Product Introduction


This 3-in-1 device packs a Bluetooth remote, wireless earbuds, and a charging case into one sleek, compact design—perfect for creators and everyday users alike.

●**Bluetooth Remote Control:** The charging case doubles as a smart remote control. It supports video browsing on TikTok, YouTube, and Instagram short video sections, as well as page turning in eBook apps such as Apple Books, Google Play Books, Libby, and the Kindle app. **(Note: This remote control doesn't support audiobook apps, music apps, or Kindle devices, including Kindle, Oasis, and Paperwhite).** It also allows you to take photos or record videos using your phone's default camera app — all with a flick of your finger.

●**Wireless Earbuds:** Enjoy clear stereo sound and hands-free calls. The earbuds also support voice assistant wake-up on your phone. Lightweight and compact, they free you from tangled cables and let you watch videos without disturbing others.

●**Charging Case:** Keeps your earbuds fully powered—just place them in the case and they start charging instantly. Enjoy uninterrupted use anytime, anywhere.

2.Product Components

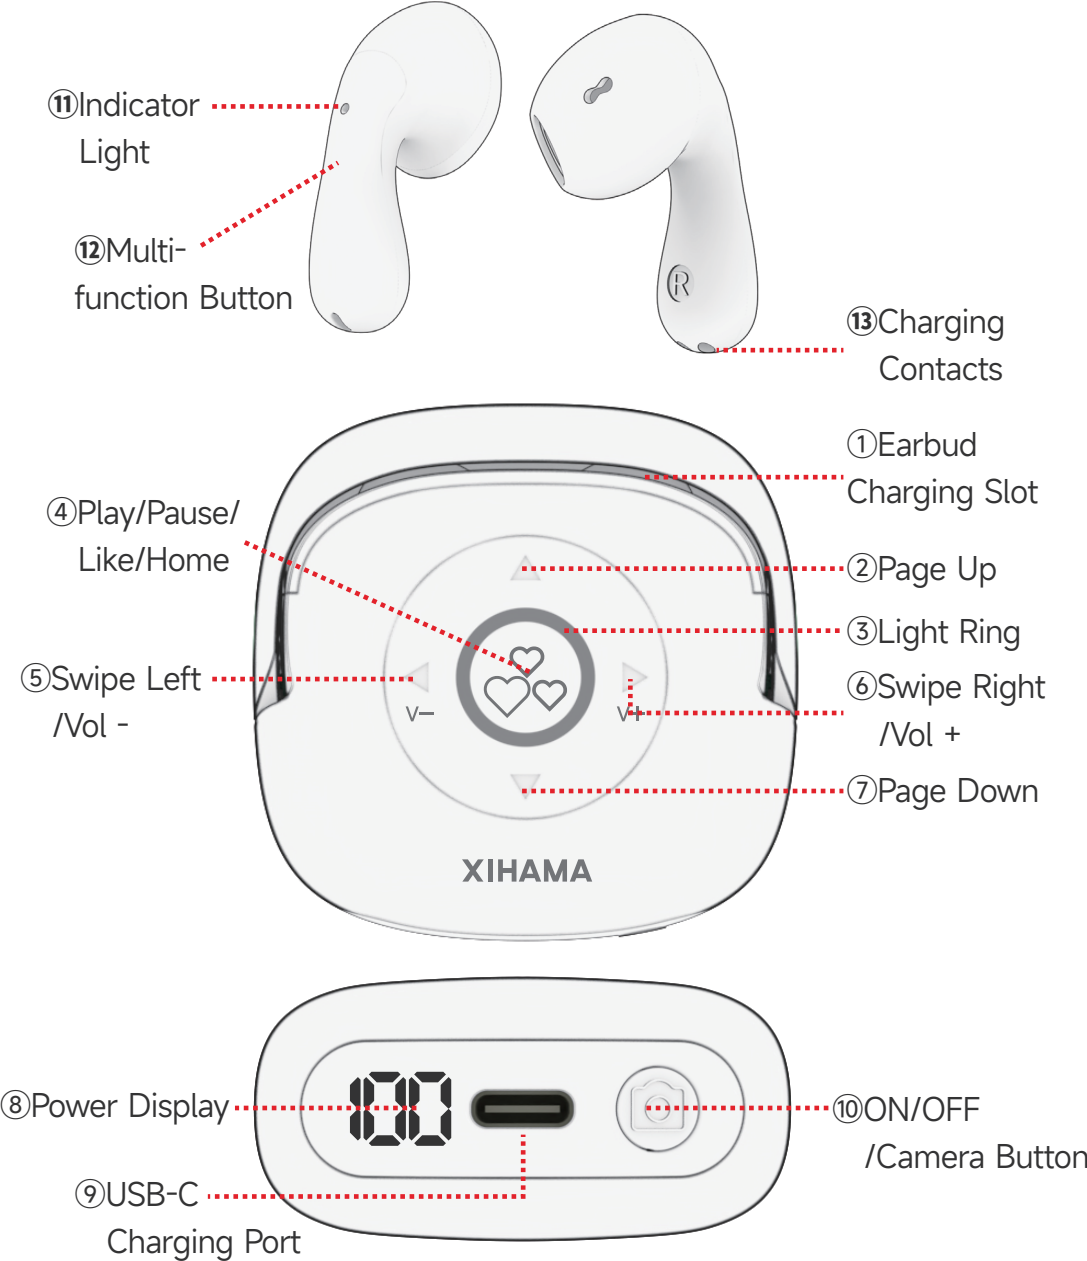

3.Product Specifications

Item	Remote Control Charging Case	Earbuds
Compatible System	iOS 14+ / Android 7+	Universal
Bluetooth Version	V5.4	
Bluetooth Name	B5-Remote Control	B5
Bluetooth Range	33 ft / 10 m (in open area without obstacles)	
Total Battery Life	Max 48 hours (Earbuds + Charging Case) in turn	
Battery Capacity	400 mAh	30 mAh x 2
Charging Input	DC 5V / 1A	5V / 30 mA
Charging Time	About 2 hours	About 1 hour
Dimensions	2.2 x 2.16 x 1.1 in (56 x 55 x 28 mm)	0.75 x 0.75 x 1.26 in (19 x 19 x 32 mm)
Weight	1.4 oz (38.6 g)	0.1 oz (3.6 g)

Package List:

1 x Charging Case
1 x Pair of Wireless Earbuds
1 x Finger Ring Strap
1 x Detachable Neck Strap
1 x USB-C Charging Cable
1 x User Manual

III POWER SUPPLY

1.Charge the Case

- Use the included USB-C cable to connect the case to a 5V/1A power adapter.
 - A full charge takes approximately 2 hours.
 - During charging, the <⑧ Power Display> shows the current battery percentage and displays “100” when fully charged.
 - To check the battery level at any time (even if the remote is off), press the <⑩ ON/OFF/Camera Button>.
- Note:** Avoid using fast-charging adapters (over 5V/2A) to prevent battery damage.



2.Charge the Earbuds

- Place the earbuds into the case. They will automatically power off and start charging.
- A full charge takes approximately 1 hour.
- The <⑪ Indicator Light> lights up white while charging and turns off when fully charged.
- When the earbuds' battery is low, they will beep to alert you. Please recharge them promptly to avoid interruption.

IV HOW TO USE

Remote Control Functions



1.Power On/Off

- Press and hold the <⑩ ON / OFF / Camera Button> for 3 seconds to turn the remote on or off.
- If no Bluetooth connection is established within 30 minutes, or if no action is taken within 3 hours after Bluetooth connection, the remote will automatically power off.


2.Bluetooth Connection

- After powering on, the remote will automatically enter pairing mode, and the <③ Light Ring> will keep flashing.
- Enable Bluetooth on your device and search for 'B5-Remote Control'.
- Select "B5-Remote Control" to pair and connect. The <③ Light Ring> will turn off once connected.

- Select "B5-Remote Control" to pair and connect. The <③ Light Ring> will turn off once connected.
- If the connection is lost, the <③ Light Ring> will begin flashing again.

Note:

- Once paired for the first time, the remote will reconnect automatically the next time.
- If the <③ Light Ring> does not flash after powering on and the remote cannot connect to your device, it may have automatically reconnected to a previously paired device. In this case, please disconnect it from that device first, then try connecting to your current device again.

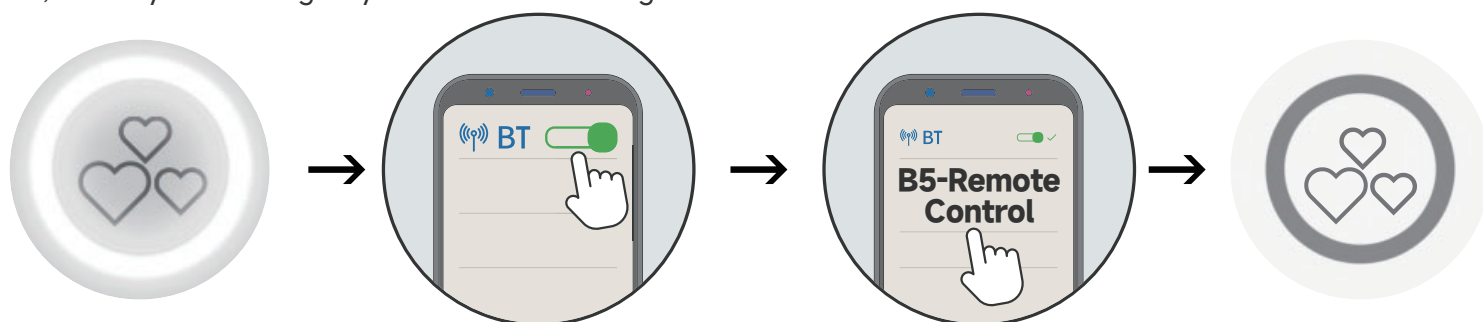


3.Device Settings Before Use

1)※ For iOS Users (iOS 14+)

The following steps are required for iOS users.


- Enable Assistive Touch and adjust Tracking Sensitivity: Settings → Accessibility → Touch → Assistive Touch. Turn it on and set Tracking Sensitivity to around 30% for best performance. (Adjust slightly depending on your device model.)

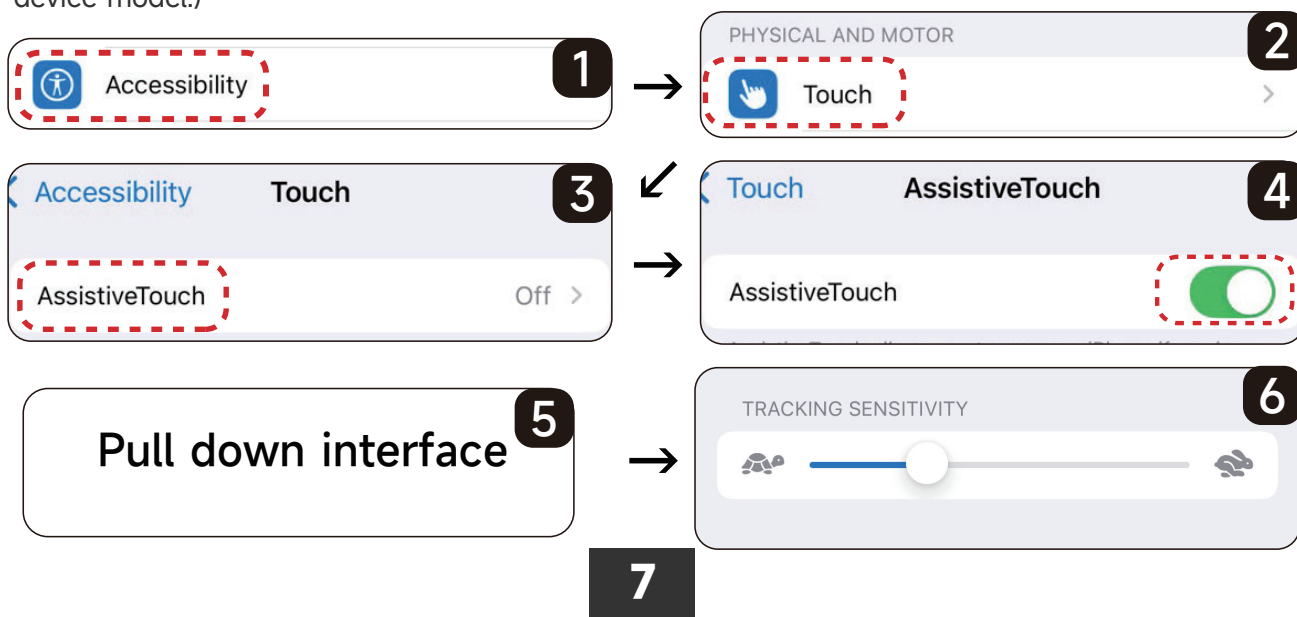

2)For Android Users (Android 7+)

If the pointer speed is too fast or the pointer appears jumbled when connecting for the first time, adjust the pointer speed as follows. (If the pointer speed is not an issue, this step is not required.)

●Go Settings → Search for Pointer Speed → Click Pointer Speed → Set the Pointer Speed to around 30% for best performance. (Adjust slightly depending on your device model.)

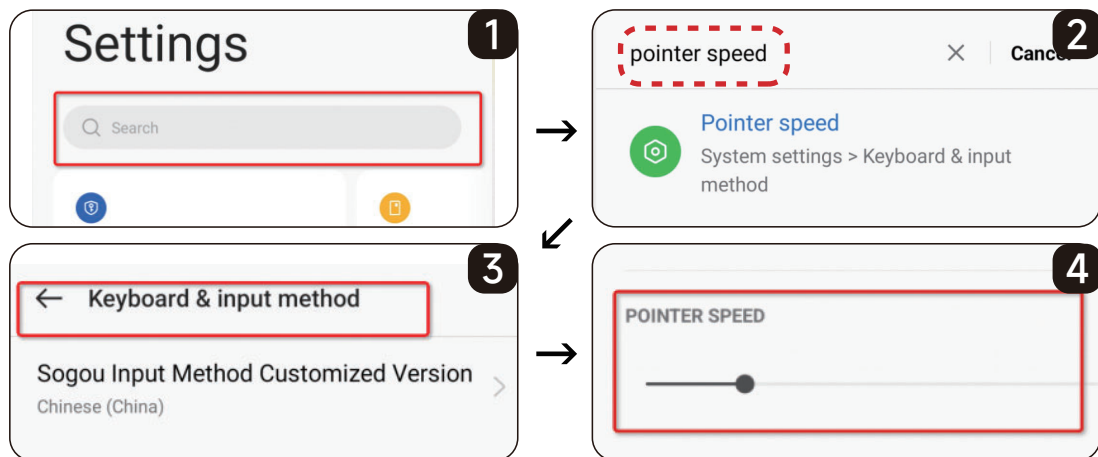

4.TikTok Remote Control

1)Switch Page: 🖱️

●Press <② Page Up> and <⑦ Page Down> to move to the previous and next video.

●Press <⑤ Swipe Left / Vol -> and <⑥ Swipe Right / Vol +> to switch to the left and right swipe.

2)Pause / Play: ▶️

●Press <④ Play / Pause / Like / Home> to pause and play the video.

3)Like a Video: ❤️

●Double press <④ Play / Pause / Like / Home> to like the video.


4)Return to Home Screen: 🏠

●Press and hold <④ Play / Pause / Like / Home> to return to the device's home screen. (The system will go back one level at a time until it reaches the home screen.)

5)Adjust Volume: 🔊

●Press and hold <⑤ Swipe Left / Vol -> and <⑥ Swipe Right / Vol +> to adjust the volume.

Important Note: Avoid repeatedly pressing the same button too quickly, which may cause the cursor to move erratically or make the remote control unresponsive.

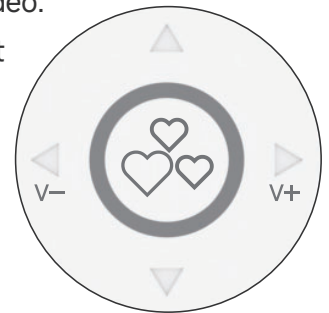

5. Camera Shutter

- Open your device's default Camera app.

- **Take Photo:** Press <⑩ ON / OFF / Camera Button> to take a photo in photo mode.

- **Record Video:** Press <⑩ ON / OFF / Camera Button> to start and stop recording in video mode.

- **Return to Home Screen:** Press and hold <④ Play / Pause / Like / Home> to return to the device's home screen. (The system will go back one level at a time until it reaches the home screen.)

Note: The camera shutter button only works with the phone's default Camera app. * **It does not support taking photos or recording videos in third-party apps (such as TikTok).**



6. E-Book App Page Turner

- Open a compatible e-book app on your device, such as Apple Books, Google Play Books, Libby, or Kindle app. **Note:** This remote control does not support audiobook apps, music apps, or Kindle devices (including Kindle, Oasis, and Paperwhite).

- **Flip Pages:** Press <② Page Up> / <⑦ Page Down> or <⑤ Swipe Left / Vol -> / <⑥ Swipe Right / Vol +> to turn pages. (Some apps use vertical scrolling, others use horizontal—try both and see which works.)

- **Return to Home Screen:** Press and hold <④ Play / Pause / Like / Home> to return to the device's home screen. (The system will go back one level at a time until it reaches the home screen.)

Tip: If the remote doesn't work well with your e-book app on a tablet, try rotating the screen orientation (portrait ↔ landscape) to improve compatibility.

Wireless Earbuds

1. Power On


- **Automatic:** Remove the earbuds from the charging case - they will power on automatically.

- **Manual:** Press and hold the <⑫ Touch Control Area> on an earbud for 6 seconds to power it on individually.

2. Power Off

- **Automatic:** Place the earbuds back into the case - they will power off automatically. (If not connected to Bluetooth, the earbuds will auto power off after 3 minutes.)


- **Manual:** Press and hold the <⑫ Touch Control Area> on either earbud for 6 seconds— both earbuds will power off simultaneously.

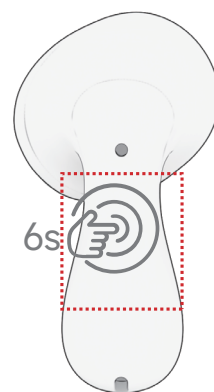

3. Bluetooth Pairing

- Open the case and take out both earbuds. They will automatically pair with each other (TWS pairing).
- Once paired, only one earbud's <11 Indicator Light> keeps flashing, indicating they are ready to connect.
- Enable Bluetooth on your device and search for "B5".
- Select "B5" to pair and connect. The <11 Indicator Light> will turn off once connected.
- If the connection is lost, the light will start flashing again.

Note: Once paired for the first time, the earbuds will reconnect automatically the next time.

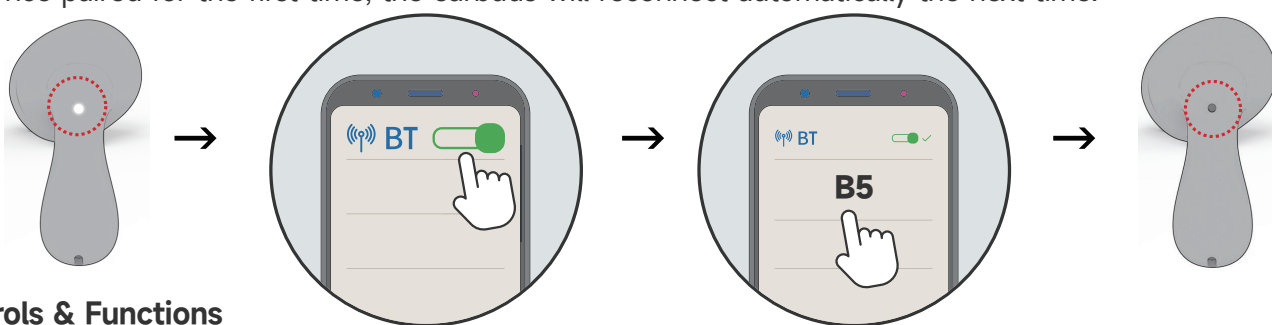

4. Controls & Functions

Tip: Each time you tap the <12 Touch Control Area>, a confirmation beep will sound.

- **Play / Pause Music:** Single tap either earbud.
- **Previous Track:** Quickly Double-tap the left earbud.
- **Next Track:** Quickly Double-tap the right earbud.
- **Answer / End Call:** Single tap either earbud when a call comes in / during a call.
- **Reject Call:** Press and hold either earbud for 2s when a call comes in.
- **Activate Voice Assistant:** Press and hold either earbud for 3s. (Ensure "Voice Assistant" & "Wake with Wireless Headset" are enabled in your phone settings.)

◆ How to Use the Detachable Neck Strap?

1. Connect / Disconnect the Neck Strap

The neck strap consists of two parts: a Finger Ring Strap and a long strap for wearing on the neck.

- **To Disconnect:** Press the center button on the connector at the end of long strap, then pull out the Finger Ring Strap.
- **To Connect:** Align the ring on the Finger Ring Strap with the slot on the connector. Press the center button and insert the Finger Ring Strap until it clicks into place.



2.Attach the Finger Ring Strap to the Charging Case


Step 1: Slide the lid of the charging case to one side to create a small gap.

Step 2: Insert the loop end of the finger ring strap into the gap.

Step 3: Slide the lid to the opposite side to expose the loop, then pull it through.

Step 4: Thread the other end of the strap through the loop and pull to tighten.

Tips: For your convenience, one finger ring strap is pre-installed and an extra strap is included in the package. You can use or remove it as desired.

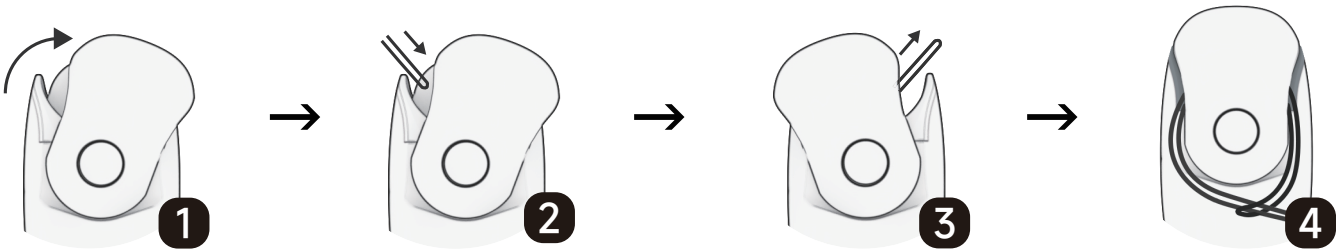

V TROUBLESHOOTING

Remote Control Charging Case

Problem	Possible Causes	Solutions
Remote Won't Turn On	Battery is fully drained	Charge the remote using the provided cable, then try again
Charging Case Not Charging	Damaged cabl or charger	Try a different cable and charger
	Incompatible charger	Use a standard 5V  1A charger
Can't Pair with Device	Bluetooth connection interference	(1) Restart the remote and your phone's Bluetooth (2) Turn off Bluetooth on nearby devices or change location
	Device already connected to another phone	Disconnect the other device and retry pairing
Remote Doesn't Work Properly	Phone system modified or flashed	Restore your phone to default settings
	App not supported	Only supports TikTok, YouTube Shorts, Instagram Reels, and eBook apps.

No Cursor Appears on Screen	For iPhone: Assistive Touch is off	Enable it (see P7)
	For iPhone: Tracking sensitivity not ideal	Set it around 30% . Adjust slightly depending on your device model. (see P7)
	For Android: Pointer speed not ideal	Set it around 30% . Adjust slightly depending on your device model. (see P8)
	For Android: Show Taps not enabled	Go to Settings > Developer Options > Show Taps

Wireless Earbuds

Problem	Possible Causes	Solutions
Earbuds Won't Turn On	Battery fully depleted	Place earbuds in the charging case to recharge
Can't Pair with Device	Not in pairing mode	Put earbuds back into the case and take them out again
	Previously connected device interfering	Remove "B5" from the Bluetooth list and reconnect
Battery dropped quickly from ~60% to low	Battery was nearly depleted; display adjusted after low battery alert	This is normal – battery level may drop suddenly once the low battery warning is triggered
Both earbuds flashing; two "B5" devices appear	Earbuds failed to pair with each other	Turn off Bluetooth on your device, then tap the <⑫ Multi-function Button> on both earbuds 4 times to reset. Wait for one indicator to flash only.

VI AFTER-SALES SERVICE

If you encounter any issues with the product, need assistance with its use, or have any other ideas or suggestions, please feel free to contact us: **JMKJafter-sales@hotmail.com**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction