



QUICK START GUIDE

for RBF models



WARRANTY INFORMATION

Your QuietCool product includes a 2
Year Limited Warranty.



For more information on your
warranty, please scan the QR code or visit
QuietCoolSystems.com/warranty



INSTALL



1.

Scan the QR code above or visit QuietCoolSystems.com/install, select your product, and follow the installation instructions. Be sure to read all instructions before installing the product.

DOWNLOAD



2.

Download the QuietCool Register Booster Fan app onto your iOS or Android device and create an account.

Scan the QR code above or visit QuietCoolSystems.com/support/ and click the link to download the app to your device.




SETUP

3.

After creating an account, tap the ⊕ icon at the top of the Home screen and select Add Device.

Tap your product at the top of the page and follow the Wi-Fi setup instructions that follow.

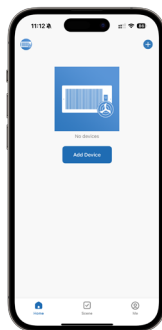

ENJOY

4.


Your Register Booster Fan is now installed!

Using the app you can set Timer or Auto mode, adjust your turn on temperatures for Auto Cool or Auto Heat, and more.



PRODUCT OVERVIEW

Aluminum Grille
Premium-quality grille with a sleek, glossy finish for a seamless, stylish fit in any home.

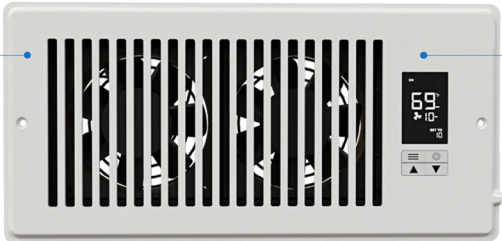



Easy to Use Controls
Easily adjust temperature settings, fan modes, and more with the built-in screen and button controls on the face of the grille.

App Control
With built-in Wi-Fi you can easily control the settings and modes of your Register Booster Fan from anywhere.



High Quality Motors
Dual, high quality 10 speed PWM controlled DC motors in a high quality plastic enclosure ensures powerful and efficient operation

APP INTERFACE

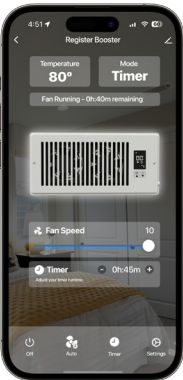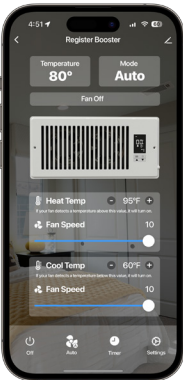

- TEMPERATURE**
The temperature detected inside your HVAC register.
- MODE**
The currently selected Mode.
- STATUS BAR**
The current status of the Register Booster Fan.
- MODE ADJUSTMENTS**
Adjustments available for the current mode. In timer mode you can adjust the length of the timer and fan speed. In Auto mode you can adjust the Heat Activation Temperature, Auto Heat Fan Speed, Cool Activation Temperature, and Auto Cool Fan Speed.
- CONTROL BAR**
Turn the fan off, select Auto or Timer mode, and navigate to Settings page.

CONTROL INTERFACE



- Menu Button**
Cycle through Auto Cool, Auto Heat, and Timer modes and adjust their settings.
- Settings Button**
Cycle through Display, Temperature Unit, and Temperature calibration settings.

- Up Button**
Change the selected setting upwards.
- Down Button**
Change the selected setting downwards.

WARNINGS

- ① Ensure your power source meets this product's electrical requirements.
- ① Check local codes for any additional safety measures needed for a code compliant installation.
- ① Read all instructions prior to installation and before using this product.
- ① If you are unsure about installation, hire a qualified, trained, and licensed professional. Improper installation will void the warranty.
- ① Do not attempt to hardwire this product. Modifications or retrofitting may cause injury, electrical damage, and will void the warranty.
- ① Never use this product in hazardous environments, including flammable, explosive, chemical-laden, or wet areas.
- ① Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings.
- ① Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- ① This product contains rotating parts. Use caution during installation, operation, and maintenance.
- ① Avoid inserting fingers or foreign objects into ventilation or exhaust openings to prevent electric shock, fire, or damage. Do not block or tamper with the product while in use.
- ① Do not rely solely on programmed on/off settings to disconnect power. Always unplug before installing, servicing, or moving the product.
- ① Do not use this product if the power cord is damaged or if it malfunctions, has been dropped, or is otherwise damaged.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To satisfy FCC&IC RF exposure requirements, a separation distance of 20 cm or more should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

Limited by local law regulations, version for North America does not have region selection option.