

 
说明书尺寸:65mm*95mm, 要求: 封面157g双铜, 内页80g书纸, 四色印刷, 骑马钉装订

Catalogue	01	Instructions for use	02	Package contents	03	Product overview	04	Charging compartment	05
Package contents	02	Before using and operating this product, please read and abide by the following precautions to ensure the best performance of the product and avoid dangerous or illegal situations.	03	Product overview	03	Earphone	04		05
Product overview	03	1 Do not use this product in gray, high humidity or dirty places, so as not to cause internal circuit failure of the product.	04	Earphone	04	C-shaped arc ear bridge	05		06
Instructions for use	05	2 Do not put Kaipin close to heat sources or naked fire sources, such as electric heaters, microwave ovens, stoves, water heaters, wrong candles or other places that may be exposed to high temperatures.	05	Charging line *1	05	Out of the hole	06		07
Product specifications	10	3 Please place this product away from other Bluetooth devices and Wi-Fi devices.2.4	06	Charging compartment *1	06	Charging contact	07		08
After-sales product warranty description	11	4 GHz computer peripherals, unidirectional telephones, microwaves ovens, refrigerators and other electronic devices to prevent signal interference or signal loss.	07	Instructions *1	07	Touch area	08		09
Nonwarranty regulations	12	5 Please use this product within the temperature range of -20°C~60°C.	08		08	Mike	09		10
Warranty card	13	6 Do not place any heavy objects on the product.	09		09	LED light strip	10		11
Content of harmful substances	14	7 Exposure to high volumes while driving may distract attention and lead to accidents.	10		10	Type-C charging hole	11		12
Maintenance and upkeep	15	8 Please place the product and other accessories in a ventilated, cool, and out of direct sunlight.	11		11		12		13
		9 Do not disassemble or modify products and accessories by yourself, otherwise the products and accessories will not be covered by the company's warranty.	12		12		13		14
		10 Do not use strong chemicals or strong detergents to clean this product and its accessories. Please use a clean and dry soft cloth to wipe this product or its accessories.	13		13		14		15
		11 In case of thunder and lightning or not used for a long time, please unplug all the cables of this product.	14		14		15		16
		12 If the product is not used for a long time, please re-enter and exit the headphones regularly and use the charging cable to charge them to extend the battery life.	15		15		16		17
		13 This product is strictly forbidden to use. Please keep it out of the reach of children. Beware of	16		16		17		18

Instructions for use

Wearing headphones

- 1 Take the headphones out of the charging.



- 2 Judge the wearing direction of the headphones (small in the front, large in the back), and take the opportunity to clamp the headphones in the Chinese position of the auricle.



Connect the mobile phone to use Bluetooth

Mobile phone "In mobile phone blue, set up the page to search for Bluetooth name-"GT15", click to connect and pair.



3 Appropriately adjust the headphones and ear bridge wear, so that the sound hole is directly facing the ear canal to ensure comfortable and clear listening.



Recommended wearing angle: 18°-25°

 
There is obvious pain in the ear when wearing it. It is recommended to slightly expand the angle of the ear bridge to make it more comfortable to wear.

Connect to the mobile phone APP to use

Open the mobile phone's blue calendar, search for "Black Intelligence" in major application markets or scan it for a two-dimensional code, do not load and install the APP.

- ① First of all, complete the pairing of headphones and APP connections.
- ② Experience more AI and personalized functions.

* Volume synchronization function
In order to get a better listening experience, if the device supports the volume synchronization function (such as the Hongmeng system), it is recommended to turn on the volume synchronization function.
Hongmeng System Setting Reference: Settings > Bluetooth - Headphone Setting Icon > Bluetooth Device Volume Synchronization with Mobile Phone.

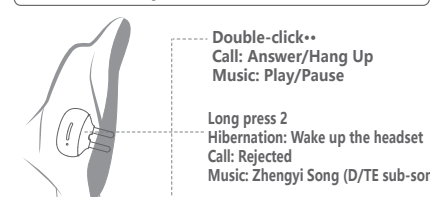

Re-pair and reset

After touching the headphones five times in a row, the headphones push the red light orange and flash five times, that is, the reset is successful..



Five strikes----

Note: You can try to use the re-pairing and reset functions when there is silent, unable to connect and unable to search for devices.

 
About charging

- 1 Use charging to charge the headphones
Put the headphones in the charging compartment, close the compartment lid, and start charging.



- When the battery is greater than 10%, the lamp paper is white.
- When the battery is less than 10%, the light bar will touch the color.

Note: During the use of the headphones, when you hear a low-power prompt, it means that the remaining battery of the headphones is 20% or even lower. Please enter the warehouse to charge it as soon as possible.



- Yandianzhong
- C fully charged

- 2 Use the Type-C charging cable to charge the charging compartment
- Charging: the LED light strip is orange
- Fully charged: LED light strip is self-colored

Product specifications

Product specifications	SoundAI FairyClip A3
Product specifications	SoundAI FairyClip A3
Connection method	Bluetooth 5.4
Communication distance	≤15M
Music endurance	~8h
Total battery life	32h
The number of battery life in the charging compartment	~3Times
The time required for the headphones to be fully charged	≤1h
The time required for the charging compartment to be fully charged	<1.5h
Protection level	IPX4

*Execution standard: GB4943.1-2022

After-sales product warranty description

The after-sales service of GT15 wireless headphones is strictly implemented in accordance with the Law of the People's Republic of China on the Protection of Consumer Rights and Interests and the Product Quality Law of the People's Republic of China. The service content is as follows: During the validity period of the three guarantees, you can follow these provisions. Enjoy the right to return, exchange and repair. Repair, replacement and return should be handled with the relevant order number or invoice. No reason to return the goods (e-commerce channel) on the 17th, and the logistics cost will be borne by the user; If there is a product performance failure of this product, you can enjoy the following services free of charge after testing and confirmation.

Type of service	Service policy
Return goods	Free return for product quality reasons within 7 days from the date of receipt
Exchange	Free replacement for product quality reasons within 15 days from the date of receipt
Maintain	Free repair for product quality reasons within 1 year from the date of receipt

Non-warranty regulations

The following situations (but not limited to the following situations) are not within the scope of the three-guarantee service:

1 The content on the warranty card does not match or is modified with the physical label of the goods.Zhi, machine serial number, etc.

4 Damage to products and accessories caused by man-made reasons.

3 Using non-sound intelligence original accessories, resulting in product failure or accidents.

7 There is no warranty card and a valid invoice, and it cannot prove that the product is valid in the three-guarantee period.

Warranty card

Customer's name :

Contact number :

Customer's address :

Postal code :

Host model :

Origin of the product :

Machine purchase store:

Postal code :

Store phone number :

Date of purchase :

Invoice number :

Warranty card

The name and content of harmful substances in the product

Parts Name	(pb)	(Hg)	(Cd)	Cr(VI)	(PBBs)	(PBDEs)
Plastic parts	0	0	0	0	0	0
Hardware	0	0	0	0	0	0
Basic machine	X	0	0	0	0	0
Basic machine components	0	0	0	0	0	0
Battery	0	0	0	0	0	0
Power cord	0	0	0	0	0	0

This form is compiled in accordance with the provisions of SJ/T 11364.

O: Indicates that the content of the harmful substance in all homogeneous materials of the component is below the limit requirements stipulated in GB/T 26572.

X indicates that the content of the harmful substance in at least one homogeneous material of the component exceeds the limit requirements stipulated in CB/T 26572.

Maintenance and upkeep

This product is a high-precision equipment, and proper maintenance and upkeep can better ensure its performance.

1 If the headphones are exposed to dust, sweat, ink, oil, pollen or chemicals (such as soap, hand soap, shampoo, shower gel, laundry detergent, detergent, cosmetics, anti-UV products, antibacterial sprays, high-concentration alcohol, insecticides, mosquito repellents, etc.) that are easy to damage the headphones, Please wipe it clean with a cloth dipped in a small amount of water, then gently wipe it with a dry hairless soft cloth and dry it thoroughly.

2 Do not use any chemicals or organic solvents (such as soapy water, hand sanitizer or other acid-base solvents) to clean the headphones to avoid residue irritation of the skin.

3 Regularly use soft hairless dum cloth to wipe products, do not use paper towels or cloths containing wood fibers, and do not use dirty or abrasive cloths.

4 When you use the headphones, please make sure that the headphones are dry and clean when you put them back in the charging case.

5 If you encounter a failure of the headphones not charging, please check whether the charging box and the charging contact point of the headphones are dirty. If so, please wipe it clean with a cloth or cotton swab dipped in a small amount of water and dry it thoroughly before trying again.

	项目		工艺	157g双铜+80g书纸
	日期		颜色	四色印刷

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.