 


AMPHIBIOUS TANK

2.4GHZ REMOTE CONTROL

✱ Please fully charge before playing

Battery Installation:

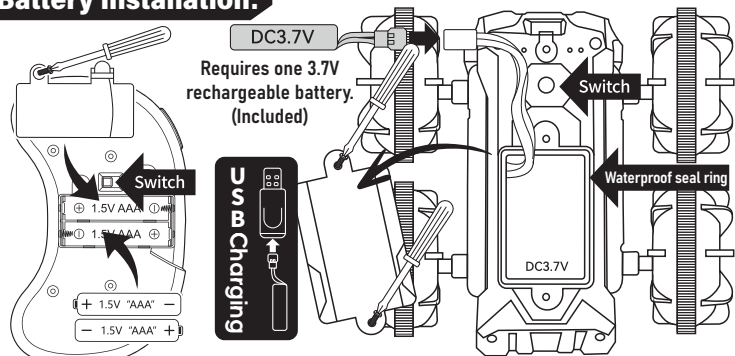

Requires one 3.7V rechargeable battery. (Included)

1. Insert 2 x 1.5V "AAA" batteries into the battery compartment of the remote controller with correct polarity.
2. Close the battery compartment: Tighten the screw by turning clockwise with a phillips screwdriver.

 
1. Open the battery compartment: Align the screwdriver with the small contact point on the battery cover and gently press down while dragging the battery cover to open.
2. Insert one 3.7V rechargeable battery into the toy battery compartment with correct polarity.

Battery Notice:

1. The remote control requires two 1.5V AAA non-rechargeable batteries (not provided);
2. The toy body requires one set of 3.7V rechargeable batteries (provided);
3. Do not charge the non-rechargeable batteries;
4. Do not mix new and old or different types of batteries;
5. Please note the polarity when installing or replacing the battery;
6. Please timely take out the battery with low power;
7. Do not short circuit the power supply terminal;
8. Take out and install the rechargeable battery: Loosen the main battery compartment screws with screwdriver, open the battery cover, connect and pull out the battery connector socket in the correct direction, then close the battery cover, tighten the screws of the battery cover with screwdriver;
9. This rechargeable battery is non-replaceable, and the rechargeable battery can only be charged under the supervision of adult;
10. Connect the supplied USB charger to the power supply with output voltage of 5.0V 2A; (such as: USB mobile phone charger, computer USB interface) to charge the battery;
11. During charging, the USB charger will be slightly warm, which is normal;
12. The product can only be charged with the recommended USB charger, and the USB charger is not a toy;
13. Regularly check whether the wire, plug, casing and other parts of the USB charger and the recommended charger are damaged. If there's any damage, stop using it before it is repaired;
14. Disconnect the USB charger before cleaning the toy;
15. Please do not disassemble or throw the bad batteries and battery pack into fire or water to avoid accident;
16. The toy must not be used by children under age 3.
17. Please keep your hands dry when charging, and keep the battery slot dry after taking out the battery.




Operate:

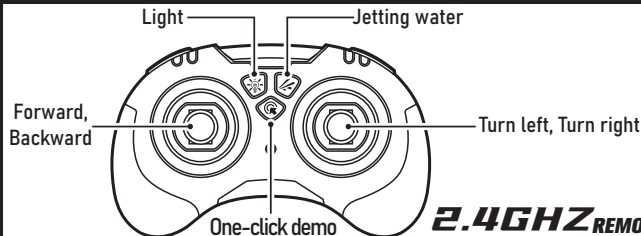


How To Play:

- Turn on the power switch of the remote control car, and the indicator will flash. Turn on the power switch of the remote control, and when the frequency emitted by the remote control is correct, the indicator will stop flashing and be normally on. (Note: If the indicator keeps flashing, it means that the frequency is incorrect; please turn off and then restart the toy);

 Driving in water:

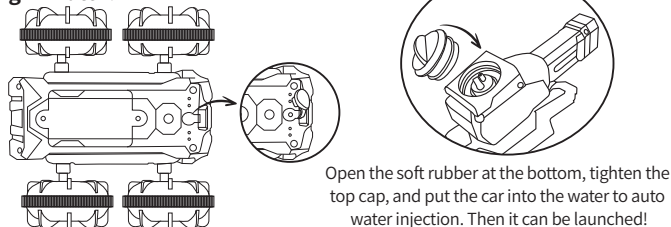

Driving in land:

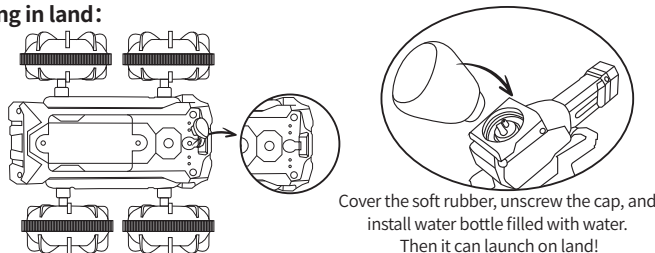 

WARNING

 
- The packaging parts (such as pack threads, ribbons, color boxes, etc.) are not toys. DO NOT play with them for fear of injury!
- The toy must be taken out of the package by an adult and can be handed over to a child after everything is OK.
- The toy must be operated under a direct supervision of the adult.
- This product contains small parts and poses a risk of suffocation. It is not suitable for children under 3 years old to play with.
- Never allow young children to play in or around water without adult supervision.
- The toy can only be used in water after it is installed in accordance with the instructions.

水陆射水坦克车

2.4GHz 远程遥控

※ 产品使用前请充满电再进行玩耍

电池安装：

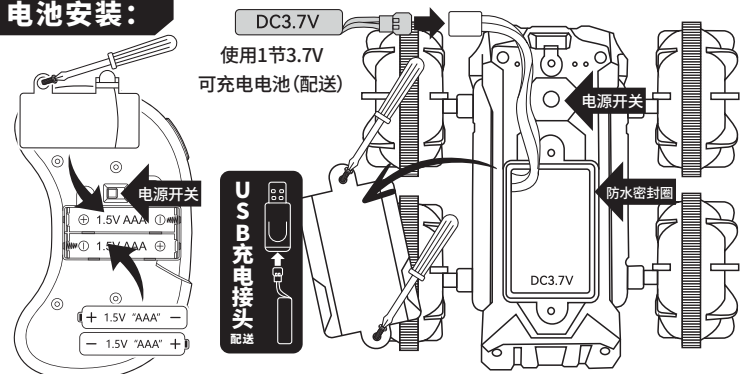

1. 将2节1.5V“AAA”非充电电池按照正确的极性装入遥控器的电池盒中。
2. 关闭电池仓盖子：用十字螺丝刀顺时针旋转拧紧螺丝。

 
1. 打开电池仓盖子：用十字螺丝刀逆时针旋转松开螺丝。
2. 将1颗3.7V 可充电电池按照正确的极性装入玩具的电池仓中。

电池注意事项：

1. 遥控车均使用1节3.7V充电锂电池（配送电池）；遥控器均使用2节1.5V AAA非充电电池。
2. 如何取出和放入电池：用螺丝刀松开电池盖螺丝钉，揭开电池盖，按正确极性放入电池和取出电池，然后合上电池盖，用螺丝刀拧紧电池盖螺丝钉；
3. 非充电电池不能充电；只能使用推荐电池一样或相同的电池；
4. 充电电池只能在成人监护下充电；请勿让小孩自行充电；
5. 充电电池在充电前应从玩具中取出；
6. 不同类型的电池或新旧电池不能混用；安装或更换电池请注意极性。
7. 用尽的电池应从玩具中取出；若长期不使用，请将玩具中的电池取出；
8. 电源端子不得短路；
9. 使用配送的USB充电头连接到输出电压为DC 5V 2A的电源上（如：USB插口充电器）。
10. 玩具不能连接到多于推荐数量的电源上；
11. 须定期检查USB充电头及推荐使用的充电器的电线、插头、外壳和其它部件是否损坏，如发现损坏应停止使用，直至修复完好，
12. 清洁玩具前应与USB充电头断开连接；
13. 请不要将坏电池、电池组分解或扔到火中、水里，以免发生意外；
14. 在充电过程中USB充电头会出现微温，属正常现象；
15. 产品只能使用USB充电头及推荐的电源进行充电，USB充电头及推荐的电源不是玩具；
16. 使用推荐的充电器的额定电压必须与当地的家用电压相符；
17. 玩具不能提供3岁以下儿童玩耍。
18. 充电时请保持手部干燥，取出电池后保持电池槽干燥。




操作说明：

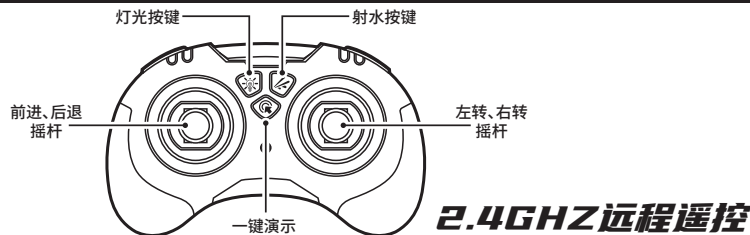


玩法说明：

- 打开遥控车电源开关灯光闪烁，开启遥控器电源开关，对上遥控器发出的频率后就停止闪烁亮。 (注意：灯光一直闪烁，表示对频不成功；重新将玩具关闭重启)；

 在水里：

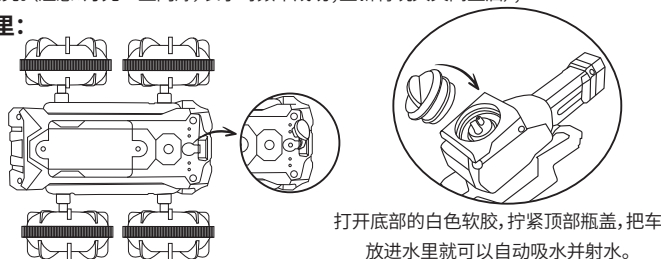

在陆地：

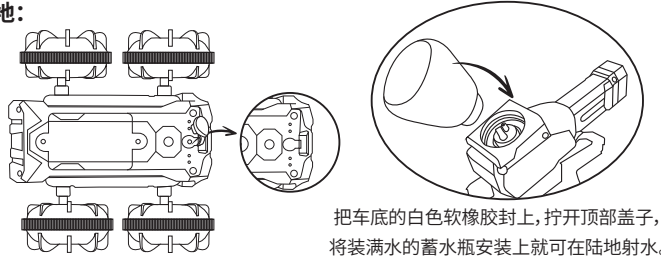 

警告

- 本产品内含小零件及小球，可能产生窒息风险，不适合3岁以下儿童玩耍。
- 本产品必须在成人直接监护下使用。
- 切勿让儿童单独在水里或者池塘旁边玩耍。
- 使用时请阅读说明。该包装含有重要信息，请给予保留。
- 请妥善回收处置废弃的玩具及包装物，以保护环境！
- 玩具只有按照说明书的要求完全安装好才能在水中使用。

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.