




Thank you for choosing **'ROCKSTAR'** Portable Wireless Karaoke Speaker. Please read this User's Manual carefully, before using the product, and please save this Manual for further reference. Before operating, please read all the safety notices to assure safe and appropriate use.

 Safety Notice:

- Do not disassemble or modify the speaker or the microphones for any reason, as they may get damaged or burn.
- Please keep the equipment along with all the accessories out of reach of children and pets. It can cause choking and/or serious injury.
- Please do not place the items in water, as liquid can damage

Package Includes:



- Portable Wireless Karaoke Speaker
- 2 Wireless Microphones
- USB Charging cable
- 3.5mm AUX Cable

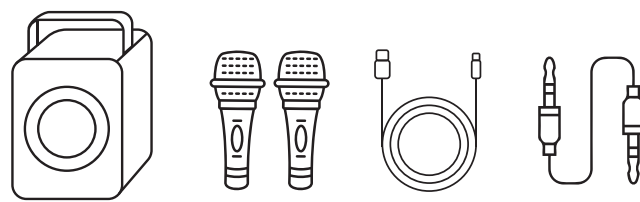

Specifications

- Output Power: 10W
- Drive Unit: 6.5Inch Subwoofer
- Wireless Version: V5.1
- Wireless Name: LAK-5500BLK
- Battery Capacity: 2400mAh(3.7V)
- Power Input: DC 5V=== 1A
- Battery Charging Time: about 5-6 Hours
- Play Time: about 4-5 Hours
- Wireless Range: 20m
- Micro SD Card/ USB Reader Supported

*The actual use time may differ by environment and use habits, for reference only.

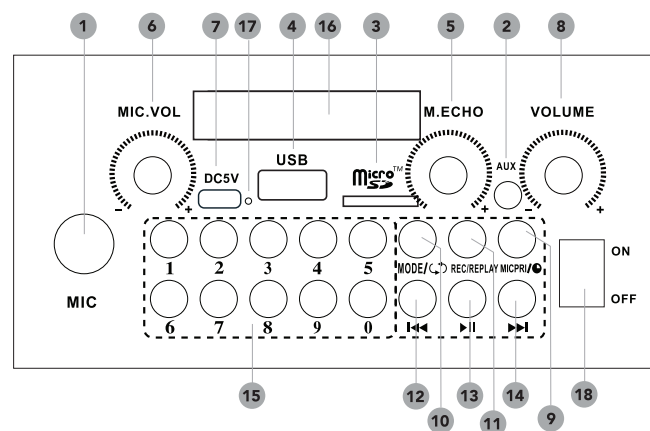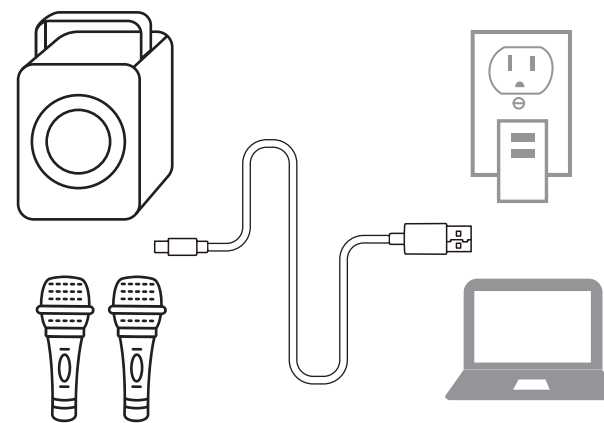

- 1 **Microphone Input:** 6.5mm jack/instrument input.
- 2 **AUX:** 3.5mm port, used to connect and play music with an audio cable.
- 3 **Micro SD Card Slot:** Insert a Micro SD card to play music stored on the card.
- 4 **USB Port:** Insert a USB Flash Drive to play music stored on the drive
- 5 **Microphone Reverb Adjustment:** Adjust the microphone echo volume.
- 6 **Mic Volume:** Adjust the microphone volume
- 7 **TYPE-C Charging Port:** Charges the speaker (wall plug not included)
- 8 **Power Switch/Main Volume:** The main volume knob controls the power on/off of the device. When the knob is turned to the lowest setting and then twisted further to the left, a 'click' sound indicates that the machine has been turned off (the display screen will no longer display anything). Conversely, twisting it to the right turns the machine on. After the machine is powered on, the volume can be controlled by rotating the knob right or left. Turning it to the left ("-") decreases the volume, and turning it to the right ("+") increases the volume.

- 9 MIC Priority:** Press to turn the microphone's priority function on or off, and press and hold to turn the music accompaniment on or off.
- 10 Mode/LED:** Press quickly to switch different modes: Bluetooth Mode/ FM Mode/USB Mode/TF Card Mode/AUX Mode. Press and hold to switch the lighting modes.
- 11 REC/REPLAY:** Press and hold to start recording. During the recording process, pressing it can stop the recording and play the current recording file; Short press to play the recorded files on the device. (Note: The recording function requires a USB drive or Micro SD card to be inserted. For recording, a wired microphone must be connected.
- 12 Previous Track:** Press to switch to the previous song.
- 13 Pause/Play:** Short press to pause/continue playback. (Note. In FM mode, long press this button for automatic reception function)
- 14 Next Track:** Press to switch to the next song.
- 15 Number Key 0-9:** In USB Flash drive or Micro SD mode, press the "0-9" number keys to quickly select the song you want, if you want to play the 3rd song, press the number 3 first. The display shows "0003", and the third song is played after 3 seconds; To play the 12th song press the number button 1 first, and then press the number key 2 (you must have this song in the folder to select it!) After that, the 12th song will be played, and the other songs you want will be selected similar.
- 16 Display Screen:** Power on status display.
- 17 Charging Indicator Light:** The red light is on during charging, the light turns off when fully charged.
- 18 Power Switch:** This switch has the function of turning on and off the machine.
- 19 Bluetooth Name:** G-T601

Charging the Speaker and the Microphones:

Plug the USB cable into the charging port of the Speaker or the Microphones.
Connect the other end of the cable to a USB power source, such as:

- A USB wall adapter (using a power outlet (not included)).
- A laptop or computer USB port.
- A power bank.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.