

尺寸 : 105x148mm
材质 : 100g书纸
工艺 : 双面四色印刷

 
Pairing method: Long - press the "ESC" + "+" keys for three seconds until the red light flashes. Then, immediately plug in the receiver.

What to do if the keyboard does not connect with USB?




Pairing method: Long - press the "ESC" + "+" keys for three seconds until the red light stays on. Then, immediately plug in the receiver.

What to do if the mouse does not connect with USB?



Press and hold the **left, middle, and right buttons** of the mouse for 3 seconds, then plug the USB into the computer.

 The functions of the shortcut keys




A single **function key** that triggers the function directly when pressed.

Features marked with * are not available on the Mac OS.

Keyboard shortcut combinations

Function Key	Win (Windows)	Mac (MacOS)
Print Screen	Print Screen	Print Screen
Scroll Lock	Scroll Lock	Scroll Lock
Pause/Break	Pause/Break	Pause/Break
Insert	Insert	Insert
Home	Home	Home
End	End	End
Left	Left	Left
Right	Right	Right
Up	Up	Up
Down	Down	Down
F1	F1	F1
F2	F2	F2
F3	F3	F3
F4	F4	F4
F5	F5	F5
F6	F6	F6
F7	F7	F7
F8	F8	F8
F9	F9	F9
F10	F10	F10
F11	F11	F11
F12	F12	F12

Indicators Light Function

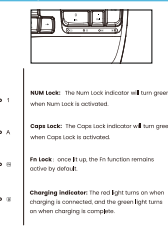

NUM Lock: The Num Lock indicator will turn green when Num Lock is activated.

Caps Lock: The Caps Lock indicator will turn green when Caps Lock is activated.

Fn Lock: once it up, the fn function remains active by default.

Charging Indicator: the red light turns on when charging is connected, and the green light turns on when charging is complete.

Product specifications and parameters

Keyboard:	
Length:	441 mm
Width:	242 mm
Height:	21 mm
Keyboard Weight:	185g
Button switch life:	10 million times
Voltage:	5 V

FAQ

- Q1: What should I do if the keyboard gets delayed or stuck?**
- A1:**
1. Please check if there are no 2.4 GHz devices (e.g., routers) nearby to interfere with the connection.
 2. Please check the keyboard has been fully charged.
 3. Please check there is no full metal case that may block the signal.
- Q2: What should I do if the keyboard and mouse cannot be charged?**
- A2:**
1. Please check whether the charging port is connected if disconnected, reconnect it.
 2. Try to replace the charging cable with a known working one.
 3. Try to change the USB port if the problem persists, please contact us.
- Q3: What should I do if the backlight stops working?**
- A3:**
1. Please charge for half an hour and then restart the USB receiver.
 2. Please try to restart the keyboard and mouse.

Customer service

Buying SABUTE, You Will get:

24-hour 7x24-hour Customer Service
No-charge Return Policy
No-charge Return Policy
Lifetime Customer Support

For FAQs and more information, please visit:

Phone: +86-20-8888-8888 (US), +86-20-8888-8888 (China)
Email: support@sabute.com, support@sabute.com (China)

sabute.com/pages/contact
support@sabute.com

CEC Statement

The device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) The device may not cause harmful interference, and
(2) the device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can receive radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.