

Product list




CPC CE

WARNING
Contains sharp-pointed parts.
Keep away from children.
Assemble only or under adult supervision.

WARNING
CHOKING HAZARD - Small parts. Not for children under 3 years.

Step-By-Step Tutorial

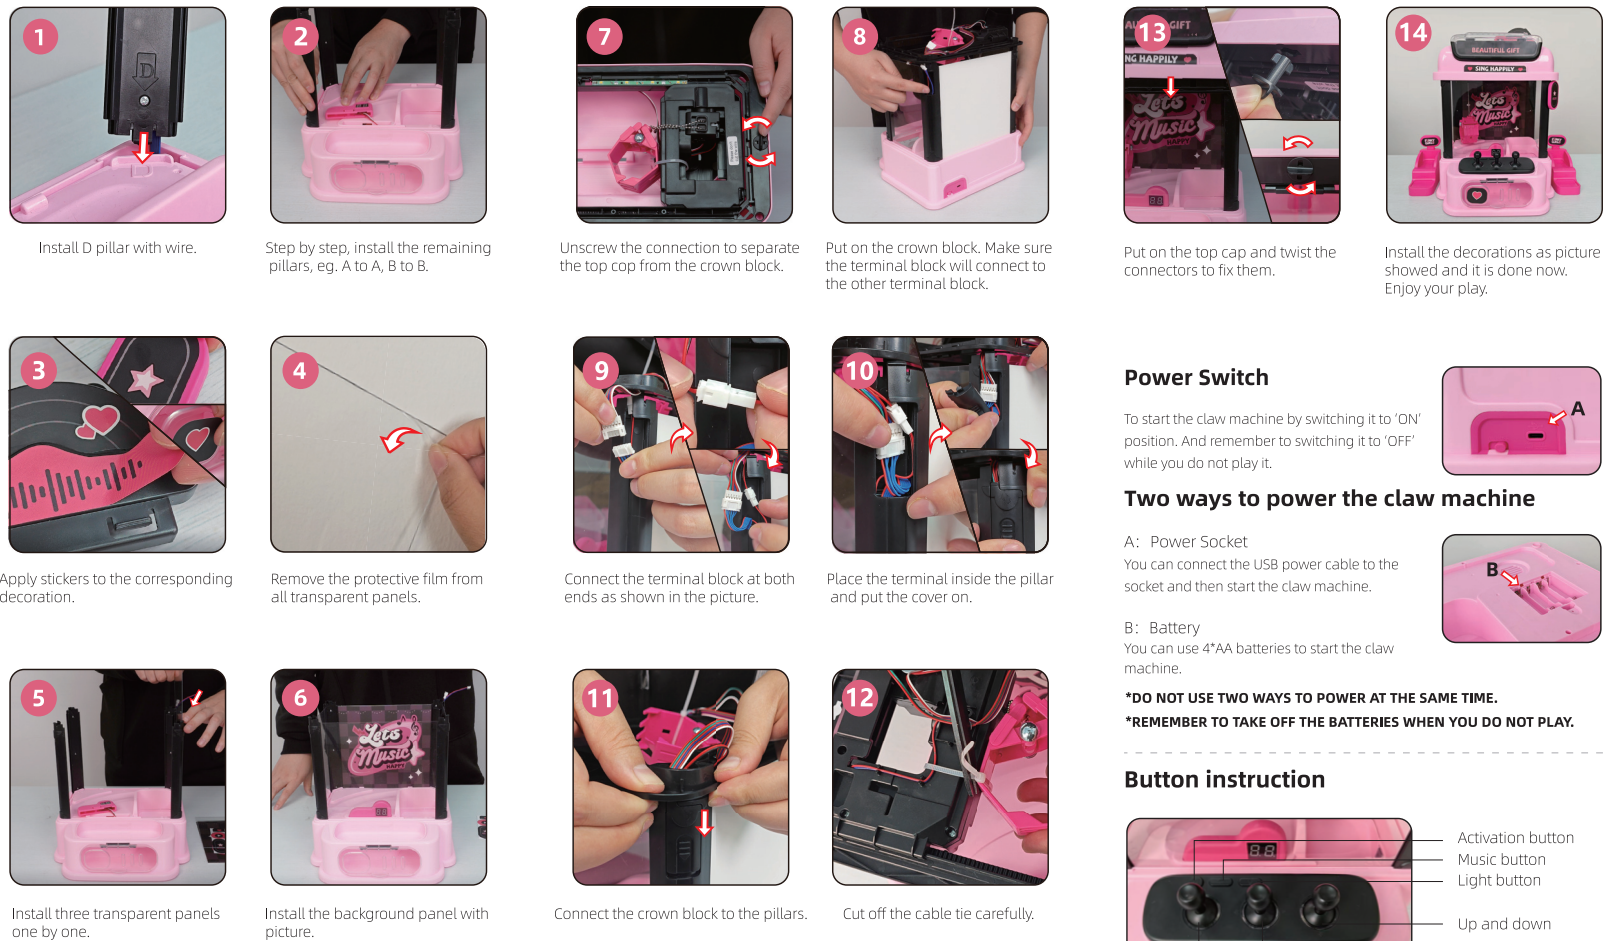

Power Switch

To start the claw machine by switching it to 'ON' position. And remember to switching it to 'OFF' while you do not play it.


Two ways to power the claw machine

A: Power Socket
You can connect the USB power cable to the socket and then start the claw machine.

B: Battery
You can use 4*AA batteries to start the claw machine.

***DO NOT USE TWO WAYS TO POWER AT THE SAME TIME.**
***REMEMBER TO TAKE OFF THE BATTERIES WHEN YOU DO NOT PLAY.**

Button instruction

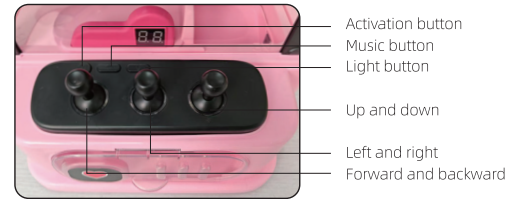

Q&A

Q: Why isn't my machine charging?
A: Our machines are not designed with charging function. You can use it with AA batteries or connect the usb power cable with the power.

Q: How can I avoid damaging the cable head?
A: Please directly pull off the cable head from the socket when you tightly pinch the cable head.

Q: What can I can do if the claw doesn't open?
A: You can manually open and shut for several times to activate.

Q: Why doesn't the claw work smoothly?
A: For the first time operation, you can move the claw back and forth for several times.

Q: What can I do if the claw stuck?
A: If the claw stuck, you can open the top cover to check the crown block. Due to long-term shipment, the crown block may be displaced. You can place it to the right position to solve the problem.

B: You can try to pull the claw for several times if the claw connection chain is stuck.

Q: Why doesn't the claw grab any prize?
A: Please make sure the prize is not too heavy to grab. Usually we suggest put prizes like candy, mini stuffed animals, and capsule.
B: Please reduce some prizes if it is too full. The claw cannot be lowered to the right position to grab the prize if there are plenty of prizes.

Q: Why doesn't the count-down work?
A: Please use brand new AA battery and re-start the claw machine.

Product name: Toy with Remote Control
Model: 3369

For the Remote Control:
After installing batteries, the remote will automatically connect to the claw machine. Press the Activation Button to start the game.
For the Claw Machine:
Power on the machine by installing batteries or connecting via USB. Then turn on the switch at the back of the machine to activate automatic pairing with the remote.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



USER MANUAL



If anything isn't perfect, you can refer to our website www.joyfoxhub.com for more information. Or you can email us via

✉ joyfoxservice@outlook.com