 


DIGITAL PIANO

DIGITAL PIANO-INSTRUCTION

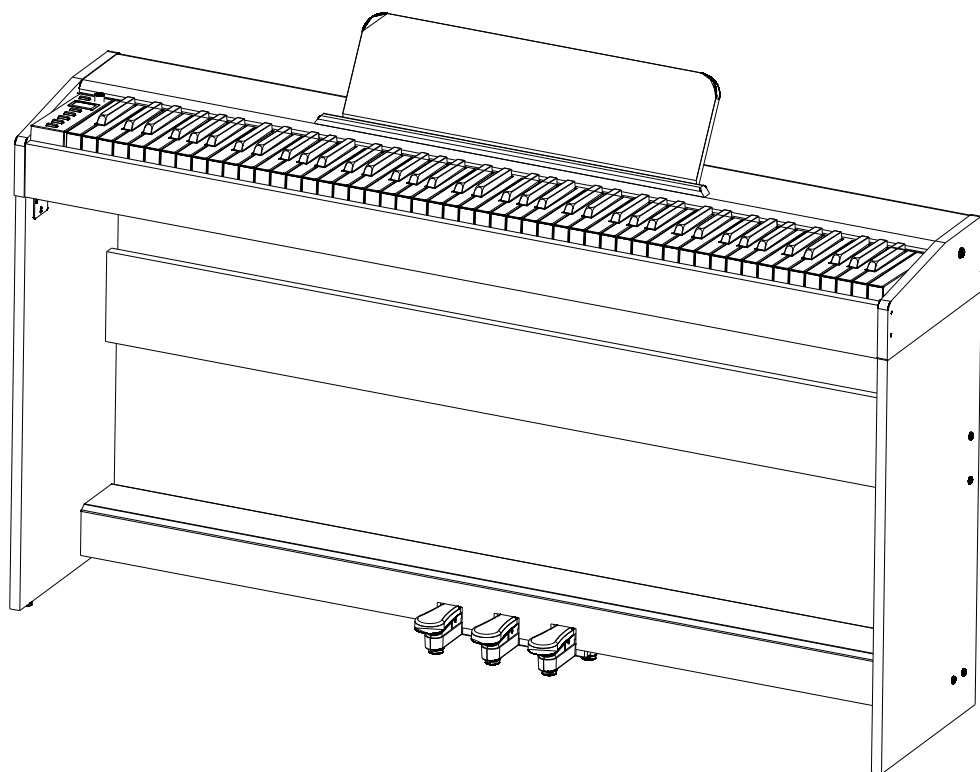

If there are any changes to this product
no further notice

Functions

Thank you for your purchase of our company's digital piano, the digital piano is elegant and sophisticated and it is the perfect combination of modern electronic technology.

◆Before using this instrument, you must read the instruction in detail.

Special reminder: This product is an electronic product. After electrified, the loudspeaker (two horns or one horn, earphone) has some current sound as a normal phenomenon. It is necessary to keep away from these devices, such as radio, routers, TV receivers, refrigerators, washing machines, etc.

✦ Using DREAM Sound source

Its core using the French top DREAM sound source digitized sampling, brings realistic hearing experience for your performance.

✦ 88 progressive hammer keys

88 progressive lever hammer keyboard, Give you the real touch of playing on a grand piano.




✦ Headphone socket

External headphone socket. It is easy to play without affecting others.

Picture of body socket

1.Piano Connection Interface Panel

 Socket Location

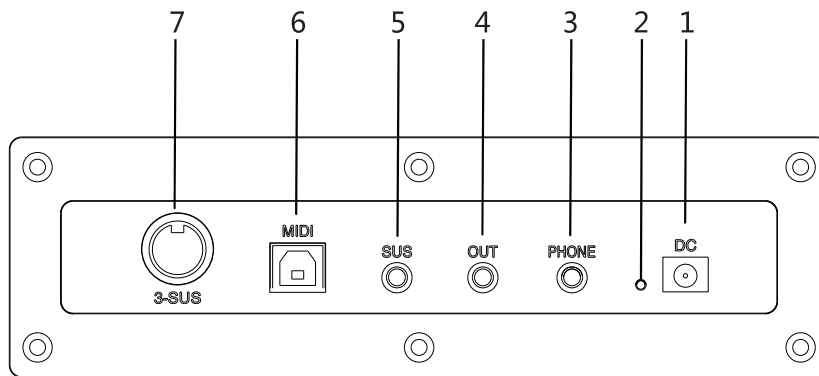

1.Operating Voltage:Input Voltage Range DC9V~12V。

2.Indicator Light: Press Power On,is lighting.

3.The headphone Jack : Connect the headphone will cut off the output of the speaker automatically, it won't affect others when playing .

4.Audio Input or Output : Input to play songs , Output to connect the Sound Equipment.

5.Sustain Pedal: this product has sustain sound pedal function, when using please according to the need to step on the pedal.

6.MIDI port : use data cable to connect computer, mobile phone or ipad to open corresponding software can use MiDI function,transmit and receive MiDI signal.

 
7.Three-pedal pedal: can be connected with the three-pedal function (grand piano) to meet the needs of the customers on different occasions to play

Body assembly




Ensure that all parts are complete during installation.
The owner and/or operator must read this installation contents before using the instrument.

1. Music Stand Installation

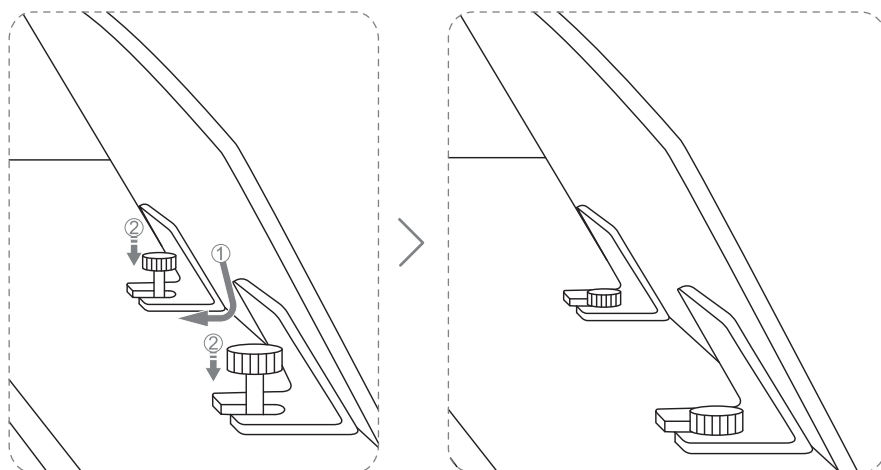

 2. Installation

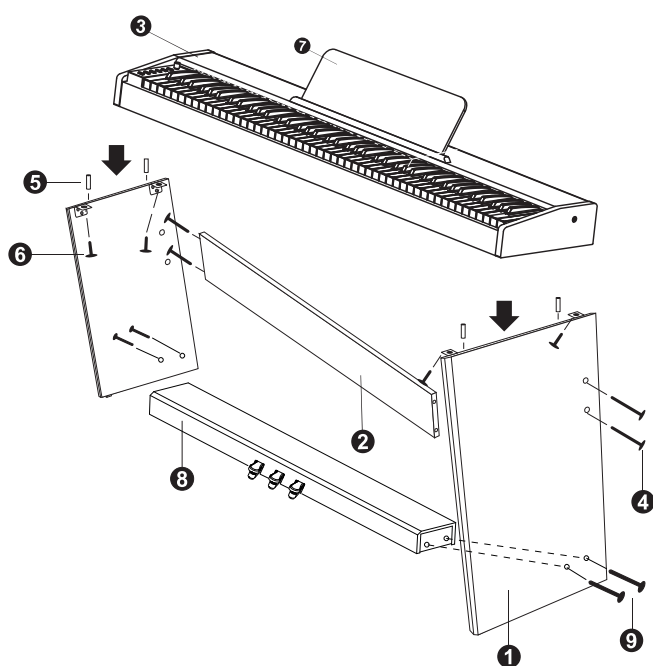

- ❶ Left and right supporting plate
- ❷ Fixed plate beam
- ❸ Body
- ❹ tip screw (M5×60 = 4 PCS)
- ❺ Log bolt (8×30 = 4 PCS)
- ❻ screw (M6×18 = 4 PCS)
- ❼ music stand
- ❽ Pedal
- ❾ round head screw (6×50=4PCS)

 
Operation Guide

1.Voice

This product has 238 kinds of timbre, which can be freely chosen by users;

▲Simple choice of timbre:

By default, the tone selection state is used when the device is powered on. You can directly press and hold "Function".Key + keyboard "E2 or F2" combination to achieve "- or +" switch, achieve the function of different timbre.

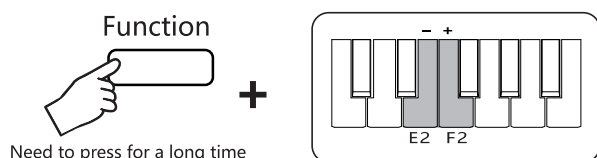


▲Quick choice of timbre:

1. Switch to the piano timbre function by pressing the "GRAND PIANO" key on the function panel;
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved.Quick selection of timbre between "000-237";

Take notice of:

 The combination of digital keys needs to meet the three-digit requirements, for example, if you want to choose the number 23 tone,You need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

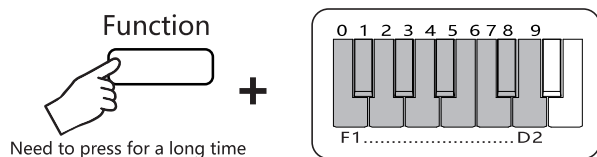

2.Rhythm selection and playback

This product has 200 rhythms and can be freely chosen by users;

 
▲Rhythm selection:

1. Switch to by long pressing the "Function" key + keyboard "C1" key combination toRhythm function;
2. By long pressing the "Function" key + keyboard "E2 or F2" combination,Realize the function of switching the rhythm up and down;
3. By long pressing the "function" key + keyboard "F1-D2" key combination, it can be achievedFast choice of rhythm between "000-199";

4. Realize the rhythm by long pressing the "function" key + keyboard "D3" key combination.Play and stop.

Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the 23rd rhythm,

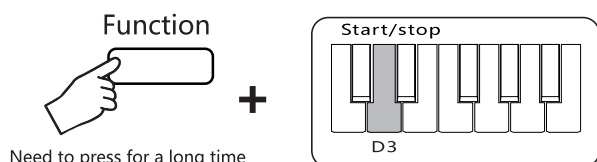

3. Selection of demonstration song

This product has 100 demonstration songs, which can be freely selected by users;

▲Selection of demonstration songs:

1. Switch to by long pressing the "Function" key + keyboard "E1" key combination toDemonstration song function;
2. By long pressing the "Function" key + keyboard "E2 or F2" combination,Realize the function of switching up and down the demonstration song;
3. By long pressing the "function" key + keyboard "F1-D2" key combination, it can be achieved quick selection of demonstration songs between "000-099";

Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the No. 23 demonstration song, you need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

4.Intro/end

 
▲Prelude means to press this button before the rhythm starts, and then start it. Accompaniment, a short prelude will be interrupted first. After the current play is played, the main play will be automatically;

▲The ending refers to pressing this button when you are ready to finish during the rhythm playback.A short attenuation ending will be played automatically, making it more natural at the end of the accompaniment.

1. Prelude: By long pressing the "function" key + keyboard "#D3" key + keyboard "C1" key + keyboard "F1-D2" key combination to achieve "000-199"Quickly select the rhythm + keyboard "D3" key to start the rhythm;


Note:

The combination of numeric keys needs to meet the three-digit requirements. For example, if you want to choose the 23rd rhythm,you need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

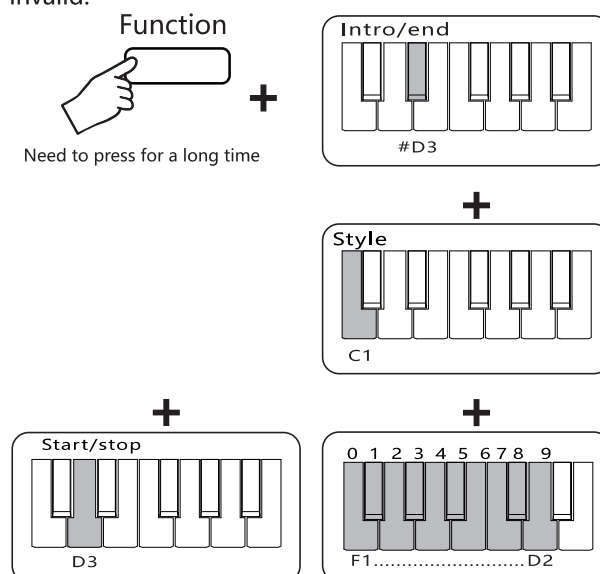


Operation Guide

 2. Ending: In rhythm playback, by long pressing the "Function" key + keyboard "D3" key combination, the rhythm will end very naturally;

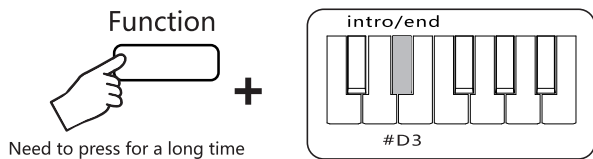


5.Chord

 This product has a comprehensive chord function, and single-finger and multi-finger can be used freely by users. Select (number of keys: 36); When the rhythm has been started, press and hold the "Function" key + keyboard "C3" key combination to turn on the chord function;

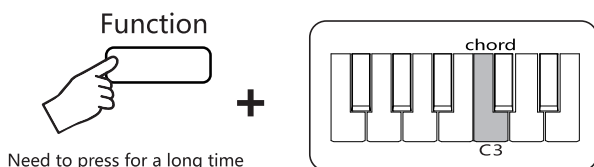


6.Sync

 1. Select the accompaniment that needs to be synchronized by long pressing the "Function" key + keyboard "#C3" key combination to achieve fast one-click playback preset rhythm;
2. If necessary, you can press the synchronous key combination in the chord state to enter start the standby state synchronously, play the chords and the accompaniment will play automatically;
3. Cancel the synchronization and press the "Start/Stop" key combination.

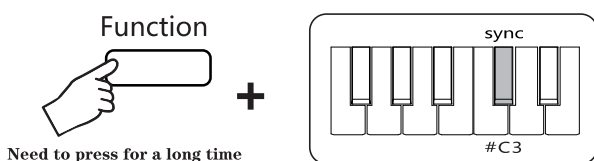


7.Style Volume

 1. Select the accompaniment you need by long pressing the "Function" key + keyboard "B2" key + Keyboard "E2 or F2" key combination; you can lower or increase the accompaniment volume.

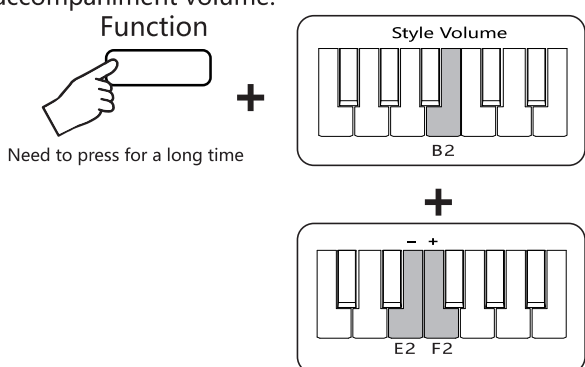


8.Style Tempo (20-280)

 Select the accompaniment you need by long pressing the "Function" key + keyboard "A2" key + Keyboard "E2 or F2" key combination; can reduce or speed up the accompaniment.

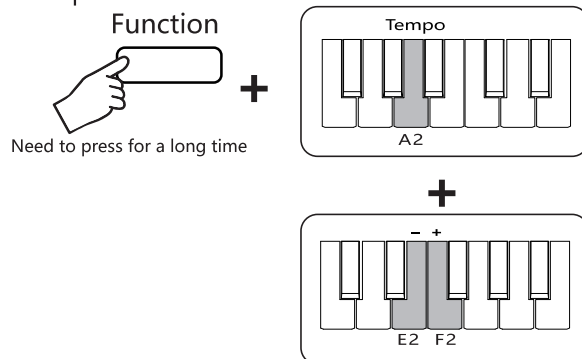


9.Metronome Tempo (20-280)

 Select the desired beat by long pressing the "Function" key + the keyboard "A2" key + Keyboard "E2 or F2" key combination; it can reduce or speed up the beat.

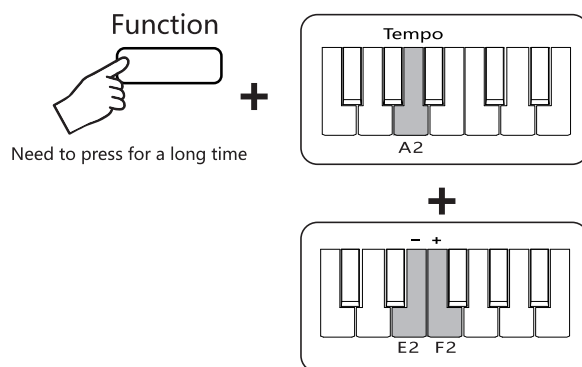

10.Demo Tempo (20-280)

 
Select the demonstration song you need by long pressing the "Function" key + the keyboard "A2" key + Keyboard "E2 or F2" key combination; can reduce or speed up the demonstration song.

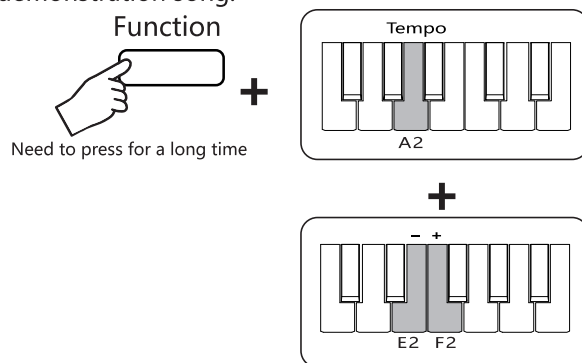

Operation Guide


11.Fill

 This product has two different styles of interludes, A and B, which can be used freely by users. Select; when the rhythm has been started, press the "Function" key + The keyboard "E3 or F3" key combination can insert a small size for the current rhythm. Variations;

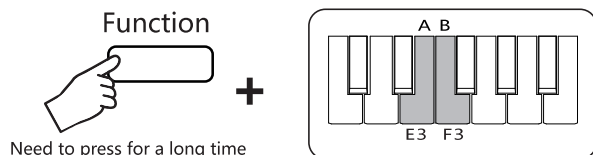


12.Brightness and darkness of tone

 1. Select the tone you need, by long pressing the "Function" key + keyboard "#C1 or D1" key combination, select the corresponding function key;
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved. Quick selection between "001-099";

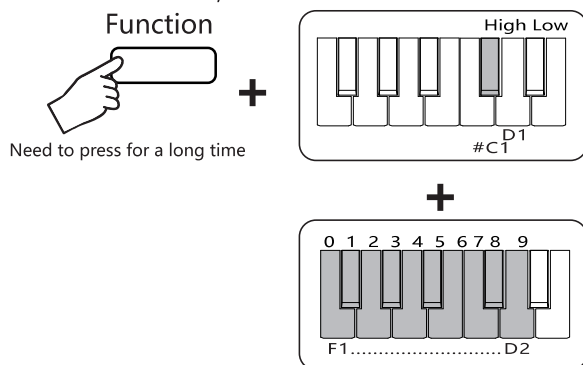

13.Dual

 1. Select the main tone you need by long pressing the "Function" key + keyboard "B3" key combination, turn on/off the dual tone function, and the default superimposed tone is string;
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved. Quick choice between "000-237";

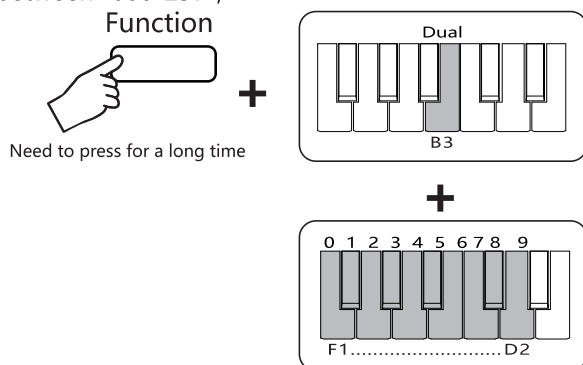


14.Split

1. Select the main tone you need by long pressing the "Function" key + keyboard "C4" key combination, turn on the keyboard segmentation function, and the default left keyboard tone is string music.
2. By long pressing the "Function" key + keyboard "F1-D2" key combination, it is achieved. Quick choice between "000-237";

Note:

 The combination of digital keys needs to meet the three-digit requirements, for example, if you want to choose the number 23 tone, You need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

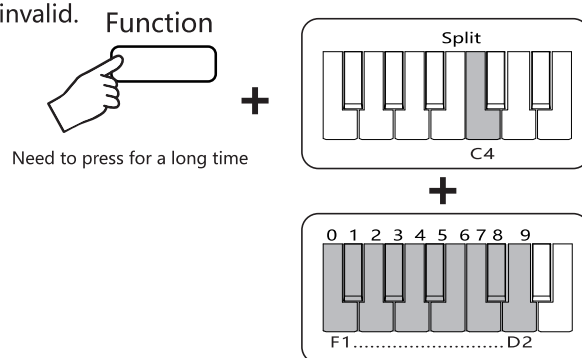


15.Metronome

1. Turn on/off the meme function by short pressing the "me" button of the function panel;
2. Switch by long pressing the "Function" key + keyboard "#F4-#A4" key combination 5 types of beats;
3. By long pressing the "function" key + keyboard "F1-D2" key combination, it can be achieved. Fast selection of speed between "020-280";


Note:

 The combination of numeric keys needs to meet the three-digit requirements, for example: if you want to choose 23 speed, you need to select the number key "0+2+3" key continuously to achieve it, otherwise it is invalid.

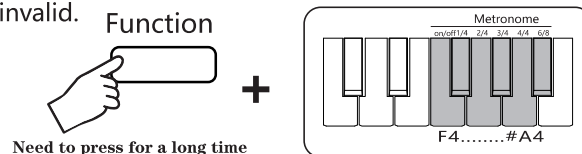

16.Touch Curve

 1. Turn off the force by long pressing the "Function" key + keyboard "C5" key combination. Function; or by long pressing the "Function" key + keyboard "#C5-#D5" key combination, Switch between the other three force types, which are "light, medium and heavy";
2. Factory default strength: medium.

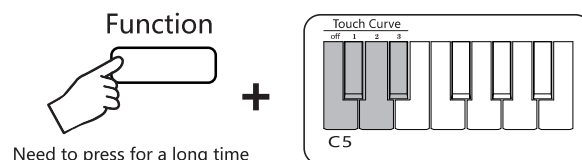


Operation Guide

17.Memory

There are three sets of storage/calls on this machine. Users can store timbre, rhythm and keyboard strength, which can be called with one click later. Omit tedious steps;


1. Preset the required timbre / rhythm / strength / transpose / reverb / chorus, etc., through Long press the "function" key + keyboard "F5" key combination to save;
2. Called by long pressing the "function" key + keyboard "#F5" key combination. It is the previously set parameters;

 ▲ After the rhythm is stored, you need to press and hold the "Function" key + keyboard "D3" after calling. Only when the key starts the rhythm can it be achieved.

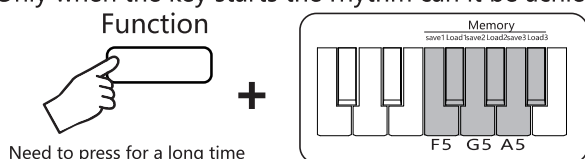


18.Transpose

 There are 12 transfers in this machine; Transpose by long pressing the "Function" key + keyboard "C6-B6" key combination.

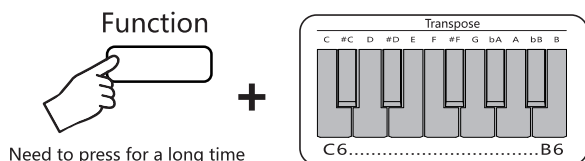


19.Reverb

 There are three kinds of reverberation effects in this machine; Select the appropriate one by long pressing the "Function" key + keyboard "#C7-E7" key combination. The reverberation effect.

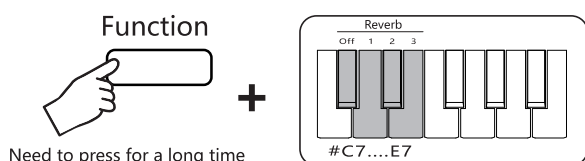

20.Chorus

 There are three kinds of chorus effects in this machine; Select the appropriate one by long pressing the "Function" key + keyboard "#F7-A7" key combination. The chorus effect.

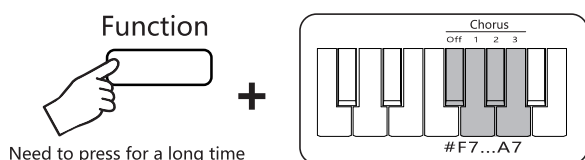

21.Record/Play

1. By short pressing the "RECORDER" key of the function panel, the recording begins. The name can be turned on/off as needed;
2. Stop recording by short pressing the "RECORDER" key of the function panel;
3. Play the recording by short pressing the "REC.PLAY" key in the function panel.

Product Care

Conscientiously do a good job in the maintenance and protection of this product. It plays an important role in prolonging the service life and reducing faults.

1.Avoid heat, dampness, or direct sunlight.

The product should not be exposed excessively to the direct sunlight, placed near the air conditioner or extremely hot places.

2.No use near TV or radio.

This product may cause video or audio interference to the reception of TV and radio. If this happens, it should be removed from the radio or TV products.

3.Don't use paint, diluent or similar chemicals to clean it.

Wet a soft towel with weak solution and detergent and wring it out until it dries. Clean the product with this towel.

4.No shaking and collision.

The product should be moved carefully. Violent shake and collision are prohibited to avoid damaging the shell or internal electronic components.


Specifications

KEY:88	Intonation: ≤ 3 Cent
Range: A2~C5	Output power: $\geq 6\text{w} \times 2$
Style: vertical piano	Power source parameter: DC 12V 3A 50/60HZ

Precaution

Power Supply

 This product can be supplied by standard indoor wall socket, please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply, If you do not use it for a long time, please pull out the power cord and keep it properly.



Sign

In order to ensure that you are safe and correct use of this product, to prevent damage to the user and other people, and to the financial damage, the specification and the product marked with a series of safety signs. All kinds of signs and their meaning.

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a potential risk of death or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (left case is be careful electric shock)



The circular sign painting a slash said prohibited matters. The icon in the logo or next to the specific content of the ban. (left case is no disassemble)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (left case is the power plug must be pulled out of the socket)

Warning

Smoke, odor, overheating

When the product is smoking, emitting odors or overheating, it continues to be used to cause fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

1. turn off the power supply.
2. pull the plug from the power outlet.
3. contact your agency.

Power cord

● Improper use of power supply leads to danger of fire and electric shock. Must observe the following precautions.

● Special power lines specified for this product must be used.

● An AC power source with output voltage within the household rated voltage must be used.

● It is not allowed to overload the power socket and the power extension line.

● Improper handling of power lines, resulting in damage or rupture of the fire and the risk of electric shock. Must observe the following precautions.

● Do not place heavy objects on the power line or make them heated.

● Do not attempt to transform the power cord or bend it too much.

● Do not twist or pull the power cord.

● If the power cord or plug is damaged, replace the power cord of the same type.

● Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.

● Please use the power cord in the place where the water will not be spilled. Water has the risk of fire and electric shock.

● Never put a vase or any other container with water in this product. Water has the risk of fire and electric shock.

● Do not let the minor contact plug and power line or a connecting plate. Minor knowledge of useless electricity safety causes danger of electric shock.

Attention

● Improper use of power supply leads to danger of fire and electric shock. The following matters of attention must be observed.

● Do not place the power cord near the furnace or other heat sources.

● Unplug the power cord from the power outlet. Must grasp the plug body.

● Plug the power cord into the power socket.

● Before connecting or cutting off the power cord, make sure that the power is off.

● The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.

● At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.

Don't burn this product

Do not put this product into the fire, otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury.

Water and foreign matter

Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

1. turn off the power supply
2. if the power cord is used for power supply, it will be pulled off from the wall of the power outlet.
3. contact your dealer.

Dismantling and rebuilding

Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.

Drop or impact

This product is subject to the risk of fire and electric shock after falling or being subjected to a strong impact. The operation should be performed immediately following the above mentioned situation.

1. turn off the power supply.
2. if the power cord is used for power supply, it will be pulled off from the wall of the power outlet.
3. contact your dealer.

Plastic bag

Do not let any person put the plastic bag on the head or put in the mouth. Otherwise there is the risk of suffocation. The children's families should pay special attention to.

Keep the distance with the product and support.

Climb the body or its support is in danger of tipping or damage. The children's families should pay special attention to.

Display

You should avoid placing this product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall and cause the risk of injury.

Product movement

Before moving this product, you must first pull off the wall of the power outlet, the power cord plug and pull off all other cables and connecting wires. Otherwise there will be damage to the line, resulting in fire and electric shock hazard.

Clean

Before you clean this product, you must first remove the power cord from the wall outlet, otherwise there is a risk of fire and electric shock.

Interface

On the interface of this product can only be connected to the specified equipment and devices. The connection of non designated equipment or devices have the risk of fire and electric shock.

Location selection

Should avoid placing this product in the following places. Otherwise there will be a risk of fire and electric shock.

- The place with high temperature or dust.
- The kitchen or other places with oil fumes.
- A place where direct sunlight is irradiated. Or any other place where the product will produce high temperatures.

Volume

Do not play music for long periods of time. Special attention should be paid to the use of headphones. The volume is too high will damage your hearing.

Heavy objects

Do not place heavy objects on the product. Otherwise, the top of the product will be overloaded, causing the product to fall over or cause the object to fall.

The correct assembly of the support

Support incorrect assembly will make it overturned, causing the product drop. There is a risk of injury to personnel.

Therefore it is necessary to carry out the instructions in accordance with the instructions provided to ensure that the product is proper.

Tone List

	PIANO	044	STR TREM 1	088	NEW AGE
000	GRAND PIANO 1	045	STR PIZZ	089	WARM PAD
001	BRIGHT PIANO 1	046	HARP 1	090	POLY SYNTH
002	PIANO ELEC	047	TIMPANI 1	091	CHOIR PAD 1
003	HON KY-TON K		CON CERT	092	BOW GLASS 1
004	E PIANO1	048	STRINGS 1	093	METAL PAD 1
005	E PIANO2	049	STRINGS 2	094	HALO PAD 1
006	GRAND HARPSICHORD	050	STR SYN 1	095	SWEEP
007	CLAVI CHORD 1	051	STR SYN 2		SYNTH EFFECT
	GLOC K	052	CHOIR AAH S 1	096	RAIN FX
008	CELESTA	053	VOICE 00H S 1	097	SNDTRK FX
009	GLOC KENSPIEL 1	054	VOICE SYN	098	CRYSTAL FX
010	MUSIC BOX 1	055	ORCH HIT 1	099	ATMOSPH FX
011	VIBRAPHON E 1		BRASS	100	BRIGHT FX
012	MARIMBA 1	056	TRUMPT 1	101	GOB LIN FX
013	XYLOP HON E 1	057	TROM BON E 1	102	ECHO FX
014	TUBULR BELLS 1	058	TUBA 1	103	SCI-FIFX
015	DULCIMER 1	059	MUTE TPT 1		FOLK SOU ND
	ORGAN	060	FR HORN 1	104	SITAR 1
016	HAND ORGAN 1	061	BRASS SECT 1	105	BANJO 1
017	PERCHY ORGAN 1	062	BRASS SYN 1	106	SHAM ISEN 1
018	ROCK ORGAN	063	BRASS SYN 2	107	KOTO 1
019	CHURCH ORGAN 1		PIPE	108	KALIMBA
020	REED ORGAN 1	064	SAX SOPRANO	109	BAGPIPE
021	ACCORDN 1	065	SAX ALTO 1	110	FIDDLE
022	HARMON ICA 1	066	SAX TENOR 1	111	SHANAI
023	TANGO ACCORDN 1	067	SAX BTON E 1		PERCUSSION
	GUITAR	068	OB OE 1	112	TINKLE BELL
024	GUITAR NYLON 1	069	ENG HORN 1	113	AGOG O
025	GUITAR STEEL 1	070	BASSON 1	114	STEEL DRM
026	GUITAR JAZZ 1	071	CLARINET 1	115	WOOD BLK
027	GUITAR CLEAN 1		WOOD PIPE	116	TAIKO DRM
028	GUITAR MUTED 1	072	PICCOLO 1	117	MLDY TOM
029	GUITAR OVRDRV	073	FLUTE 1	118	SYNTH DRM
030	GUITAR DISTRT 1	074	RECORDER 1	119	REVRS CYM
031	GUITAR HRMNX	075	PAN FLUTE		EFFECT
	BASS	076	BOTTLE BLOW N	120	GTR NOISE
032	ACOU STIC BASS 1	077	SHAKHACHI	121	BREATH 1
033	FINGER BASS 1	078	WHISTLE 1	122	SEASHORE
034	ELECT BASS 1	079	OCARINA	123	BIRD TWEET 1
035	FRETLS BASS		SYNTH PIPE	124	TELEPHON E
036	SLAP BASS 1	080	SQR WAVE	125	HELICOPTER
037	SLAP BASS 2	081	SAW TOOT H	126	APPLAU SE
038	SYN BASS 1	082	CALLIOP E	127	GUNSHOT 1
039	SYN BASS 2	083	CHIFF	128	GRAND PIANO2
	STRING	084	CHARANG	129	GRAND PIANO3
040	VIOLIN 1	085	VOICE	130	GRAND PIANO4
041	VIOLA 1	086	FIFTHS	131	GRAND PIANO /W 1
042	CELLO 1	087	BASS LEAD	132	GRAND PIANO /W 2
043	CON TRABASS 1		SYNTH VOICE	133	GRAND PIANO /W 3

Tone List

134	BRIGHTNESS PIANO 1	184	DARK HON KY -TON K 1	234	HARD CLAVI
135	BRIGHTNESS PIANO 2	185	DARK HON KY -TON K 2	235	DISTR T CLAVI
136	BRIGHTNESS PIANO 3	186	HON KY -TON K /W 1	236	BRIGHT CELESTA
137	GRAND PIANO DARK 1	187	HON KY -TON K /W 2	237	SHORT CELESTA
138	GRAND PIANO DARK 2	188	HON KY -TON K /W 3		
139	GRAND PIANO DARK 3	189	HON KY -TON K /W 4		
140	VELOC ITY CROSS PIANO 1	190	SHORT HON KY -TON K 1		
141	VELOC ITY CROSS PIANO 2	191	SHORT HON KY -TON K 2		
142	SOFT GRAND PIANO 1	192	DEEP HON KY -TON K		
143	SOFT GRAND PIANO 2	193	DETUNED HON KY -TON K		
144	SOFT GRAND PIANO 3	194	SWEET HON KY -TON K		
145	LAYER GRAND PIANO 1	195	E PIANO 1/W		
146	LAYER GRAND PIANO 2	196	E PIANO 2/W		
147	GRAND PIANO PAD 1	197	E PIANO 3/W		
148	GRAND PIANO PAD 2	198	E PIANO 4/W		
149	STEREO BRIGHT PIANO	199	E PIANO 5/W		
150	BRIGHT PIANO 2	200	E PIANO 6/W		
151	BRIGHT PIANO 3	201	SOFT E. PIANO 1		
152	BRIGHT PIANO 4	202	SOFT E. PIANO 2		
153	BRIGHT PIANO 5	203	SOFT E. PIANO 3		
154	BRIGHT PIANO /W 1	204	SOFT E. PIANO 4		
155	BRIGHT PIANO /W 2	205	HARD E. PIANO 1		
156	SOFT BRIGHT PIANO 1	206	HARD E. PIANO 2		
157	SOFT BRIGHT PIANO 2	207	SHORT E. PIANO 1		
158	DEEP BRIGHT PIANO	208	SHORT E. PIANO 2		
159	VELOC ITY CROSS BRIGHT PIANO	209	BRIGHTNESS E. P 1		
160	DETUNED E. PIANO 1	210	BRIGHTNESS E. P 2		
161	DETUNED E. PIANO 2	211	DISTR T E. P 1		
162	DETUNED E. PIANO 3	212	DISTR T E. P 2		
163	BRIGHT E. PIANO 1	213	HARPSICHORD 1		
164	BRIGHT E. PIANO 2	214	HARPSICHORD 2		
165	BRIGHT E. PIANO 3	215	SOFT HARPSICHORD 1		
166	BRIGHT E. PIANO 4	216	SOFT HARPSICHORD 2		
167	E. PIANO /W 1	217	BRIGHT HARPSICHORD 1		
168	E. PIANO /W 2	218	BRIGHT HARPSICHORD 2		
169	E. PIANO /W 3	219	DARK HARPSICHORD 1		
170	E. PIANO /W 4	220	DARK HARPSICHORD 2		
171	DARK E. PIANO 1	221	HARD HARPSICHORD 1		
172	DARK E. PIANO 2	222	HARD HARPSICHORD 2		
173	DARK E. PIANO 3	223	SWEET HARPSICHORD		
174	DARK E. PIANO 4	224	LAYER HARPSICHORD 1		
175	DEEP E. PIANO	225	LAYER HARPSICHORD 2		
176	DETUNED E. PIANO	226	DISTR T HARPSICHORD		
177	SWEET E. PIANO	227	CLAVI CHORD 2		
178	NYLON E. PIANO	228	CLAVI CHORD 3		
179	LAYER E. PIANO 1	229	CLAVI /W		
180	LAYER E. PIANO 2	230	BRIGHT CLAVI		
181	SOFT HON KY -TON K 1	231	DARK CLAVI		
182	SOFT HON KY -TON K 2	232	PERCHY CLAVI		
183	VELOC ITY CROSS HON KY -TON K	233	SOFT CLAVI		

Rhythm List

8 BEAT	000	8 Beat 1	RHYTHM&BLUES	050	Rap
	001	8 Beat 2		051	GospelSl
	002	8 Beat 3		052	Blues
	003	8 Beat 4		053	Slow Blues
	004	8 Beat Heat		054	Foxtrot
	005	8 Beat Pop 1		055	Disco Tropic
	006	8 Beat Pop 2		056	Disco Hands
BALLAD	007	Ballad 1	Disco	057	Two Step
	008	Ballad 2		058	Polk Pop
	009	Guitar Ballad		059	Waltz 1
	010	Organ Ballad		060	Waltz Pop 1
	011	Bluse Ballad		061	Waltz Pop 2
	012	Epic Ballad	W OR LD MUSIC	062	Rai
	013	Rock Ballad		063	Twist 1
	014	Slow Ballad		064	Twist 2
	015	Pop Ballad		065	Miami Pop
	016	ElectroPop Ballad		066	Motown
16 BEAT	017	Polk Ballad		067	Reggae
	018	16 Beat 1		068	Swing Reggae
	019	16 Beat 2		069	Mambo
	020	16 Beat 3		070	Beguine
	021	16 Beat 4		071	Musette
	022	16 Beat Funk	DANCE	072	House
	023	16 Beat Pop		073	Slow Fox
LATIN	024	16 Beat Ballad		074	Vienna Waltz
	025	Bossa Nova 1		075	Salsa
	026	Guitar Bossa		076	Disco
	027	Pop Bossa		077	Hip Hop Pop
	028	Tango		078	Analog Pop
	029	Cha Cha		079	Club Dance
	030	Rhumba	JAZZ&SW ING	080	Boogie
COU NTRY	031	TEX TEX		081	Funky Pop
	032	Country		082	Jazz Rock
	033	Country Rock		083	Swing 1
	034	Country Shuffle		084	Dixieland
	035	Country Swing		085	Jazz Samba
	036	Country Ballad	TRADITIONAL	086	March
	037	Country Waltz		087	US. March
ROC K R&B	038	50' s Rock		088	Samba
	039	Heavy Metal		089	Polka
	040	Rock 1		090	Polka Ober
	041	Rock 2		091	Tarantella
	042	Soft Rock		092	Slow Waltz
	043	Slow Rock		093	Ober Waltz
	044	Hard Rock	ROLL	094	Roll 1
	045	Rock & Roll 1		095	Roll 2
	046	Rock & Roll 2		096	Roll 3
RHYTHM&BLUES	047	Chicago Blues		097	Roll 4
	048	Fast Gospel		098	Roll 5
	049	Groove Soul		099	Roll 6

Rhythm List

8 BEAT	100	8 Beat 1	RHYTHM&BLUES	150	Rap
	101	8 Beat 2		151	GospelSl
	102	8 Beat 3		152	Blues
	103	8 Beat 4		153	Slow Blues
	104	8 Beat Heat		154	Foxtrot
	105	8 Beat Pop 1	Disco	155	Disco Tropic
	106	8 Beat Pop 2		156	Disco Hands
BALLAD	107	Ballad 1	W OR LD MUSIC	157	Two Step
	108	Ballad 2		158	Polk Pop
	109	Guitar Ballad		159	Waltz 1
	110	Organ Ballad		160	Waltz Pop 1
	111	Bluse Ballad		161	Waltz Pop 2
	112	Epic Ballad		162	Rai
	113	Rock Ballad		163	Twist 1
	114	Slow Ballad		164	Twist 2
	115	Pop Ballad		165	Miami Pop
	116	ElectroPop Ballad		166	Motown
16 BEAT	117	Polk Ballad	DANCE	167	Reggae
	118	16 Beat 1		168	Swing Reggae
	119	16 Beat 2		169	Mambo
	120	16 Beat 3		170	Beguine
	121	16 Beat 4		171	Musette
	122	16 Beat Funk		172	House
	123	16 Beat Pop		173	Slow Fox
	124	16 Beat Ballad		174	Vienna Waltz
LATIN	125	Bossa Nova 1		175	Salsa
	126	Guitar Bossa		176	Disco
	127	Pop Bossa		177	Hip Hop Pop
	128	Tango		178	Analog Pop
	129	Cha Cha		179	Club Dance
	130	Rhumba	JAZZ&SW ING	180	Boogie
	131	TEX TEX		181	Funky Pop
COU NTRY	132	Country		182	Jazz Rock
	133	Country Rock		183	Swing 1
	134	Country Shuffle		184	Dixieland
	135	Country Swing		185	Jazz Samba
	136	Country Ballad	TRADITIONAL	186	March
	137	Country Waltz	ROLL	187	US. March
ROC K R&B	138	50' s Rock		188	Samba
	139	Heavy Metal		189	Polka
	140	Rock 1		190	Polka Ober
	141	Rock 2		191	Tarantella
	142	Soft Rock		192	Slow Waltz
	143	Slow Rock		193	Ober Waltz
	144	Hard Rock		194	Roll1
	145	Rock & Roll1		195	Roll2
	146	Rock & Roll2		196	Roll3
RHYTHM&BLUES	147	Chicago Blues		197	Roll4
	148	Fast Gospel		198	Roll5
	149	Groove Soul		199	Roll6

Demo List

000	MinutWlz	050	SwaniRiv
001	DJ Dance	051	France
002	Fountian	052	Danube
003	SpanGirl	053	Hungary
004	SonataPn	054	Spacema n
005	SuperSng	055	Patriot
006	LittlBee	056	Cuckoo
007	HorseRac	057	SingKite
008	Nocturne	058	TongChil
009	TheSpain	059	DoReMi
010	BusyTran	060	We Happy
011	Mexico	061	LittlBee
012	MozartPn	062	Russia
013	Minuet	063	Plaster
014	Nifuma	064	Foison
015	Disco	065	JingleBe
016	FolkSong	066	PaperBoy
017	GirlSea	067	Swallow
018	LittStar	068	New Year
019	KindeG tn	069	Edelweis
020	Wahaha	070	MoonRivr
021	Duck&Cik	071	Beyer 10
022	Humo rous	072	Beyer 20
023	Joy Song	073	Beyer 30
024	GoingHom	074	Beyer 40
025	Dove	075	Beyer 50
026	Auldlang	076	Beyer 60
027	Moonligh	077	Beyer 70
028	HapyBirh	078	Beyer 71
029	PraiseSng	079	Beyer 72
030	Dolly	080	Beyer 75
031	Market	081	Beyer 76
032	Family	082	Beyer 77
033	A cradle	083	Beyer 78
034	At Home	084	Beyer 79
035	Seasons	085	Beyer 80
036	YearsAgo	086	Beyer 90
037	Pigeons	087	Beyer 98
038	InnerVic	088	Beyer 99
039	Violin	089	Beyer 26
040	Swan	090	Beyer 27
041	Musettes	091	Beyer 28
042	GypsyRnd	092	Beyer 29
043	Serenade	093	Beyer 31
044	Polka	094	Beyer 106
045	SoilPull	095	Beyer 48
046	Trout	096	Beyer 52
047	Send -off	097	Beyer 107
048	March	098	Beyer 18
049	ForElise	099	Beyer 21

Auto Accompaniment Chord List

■ Smart Chord

C	Cm	C7	Cm7
C#	C#m	C#7	C#m7
D	Dm	D7	Dm7
D#	D#m	D#7	D#m7
E	Em	E7	Em7
F	Fm	F7	Fm7
F#	F#m	F#7	F#m7
G	Gm	G7	Gm7
G#	G#m	G#7	G#m7
A	Am	A7	Am7
A#	A#m	A#7	A#m7
B	Bm	B7	Bm7

Auto Accompaniment Chord List

■ Multi-Finger Chord

C	Cm	C7	Cm7	Cdim7	CM7	Cm7-5	Cdim
C#/(D ^b)	C#/(D ^b)m	C#/(D ^b)7	C#/(D ^b)m7	C#/(D ^b)dim7	C#/(D ^b)M7	C#/(D ^b)m7-5	C#/(D ^b)dim
D	Dm	D7	Dm7	Ddim7	DM7	Dm7-5	Ddim
(D#)/E ^b	(D#)/E ^b m	(D#)/E ^b 7	(D#)/E ^b m7		(D#)/E ^b M7	(D#)/E ^b m7-5	(D#)/E ^b dim
E	Em	E7	Em7		EM7	Em7-5	Edim
F	Fm	F7	Fm7		FM7	Fm7-5	Fdim
F#/(G ^b)	F#/(G ^b)m	F#/(G ^b)7	F#/(G ^b)m7		F#/(G ^b)M7	F#/(G ^b)m7-5	F#/(G ^b)dim
G	Gm	G7	Gm7		GM7	Gm7-5	Gdim
(G#)/A ^b	(G#)/A ^b m	(G#)/A ^b 7	(G#)/A ^b m7		(G#)/A ^b M7	(G#)/A ^b m7-5	(G#)/A ^b dim
A	Am	A7	Am7		AM7	Am7-5	Adim
(A#)/B ^b	(A#)/B ^b m	(A#)/B ^b 7	(A#)/B ^b m7		(A#)/B ^b M7	(A#)/B ^b m7-5	(A#)/B ^b dim
B	Bm	B7	Bm7		BM7	Bm7-5	Bdim



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or shop where you bought this product.