

Heated Insoles Manual

Cover



HEATED INSOLES

法语
德语

User Guide

Activate Your Warranty

register.ororo.com

Supporting Customer Happiness

☎+1(702)751-7639

support@ororowear.com

QR Code



SCAN THE QR CODE TO
VIEW ON YOUR PHONE OR TABLET

MEET YOUR NEW INSOLES (图片用黑白线稿)



① Charging Port

② Indicator Light

③ Heating Level Indicators

④ Power Button

⑤ Heating Zone

***Remote Control Effective Range: >5 meters.**

IMPORTANT NOTES (图片用黑白线稿)

Before use, remove the original insoles from your shoes to ensure sufficient space.
Compare the size to your original insoles and trim the heated insoles to fit if necessary.



Forepart: 6mm

Heelpart: 20mm

OPERATING INSTRUCTIONS

TURN ON & PAIRING : While powered off, press and hold the insole power button without releasing (approx. 5 seconds) until the insole's LED indicators begin flashing Red, Green, Blue alternately. This enters Pairing Mode. Then short press any button on the remote control to automatically complete pairing.

ADJUST HEATING:

Preheat Mode (Red LED Pulses) : Press and hold the power button on the remote or insole for 1.5~3 seconds.

High Heat Mode (Red LED Solid) : Press and hold the High button on the remote to power on, or short press the mode button after power on to cycle modes.

Medium Heat Mode (White LED Solid) : Press and hold the Medium button on the remote to power on, or short press the mode button after power on to cycle modes.

Low Heat Mode (Blue LED Solid) : Press and hold the Low button on the remote to power on, or short press the mode button after power on to cycle modes.

TURN OFF: press and hold the button for 1.5~3 seconds to turn off.

Haptic Feedback: A brief vibration indicates successful turn off.

HEATING LEVEL INDICATORS



SOLID RED
HIGH



SOLID WHITE
MEDIUM



SOLID BLUE
LOW

The heating level can be adjusted by a short press of the mode button, accompanied by a vibration alert. To indicate the heat setting has changed, the indicator will cycle through solid red, white and blue illumination with each press

BATTERY LEVEL INDICATORS WHEN CHARGING



CERTIFICATIONS & WARNINGS



WARNINGS

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2BQZA-RO-1

⚠ WARNING	
• INGESTION HAZARD: This product contains a button cell or coin battery. • DEATH or serious injury can occur if ingested. • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours. • KEEP new and used batteries OUT OF REACH of CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

CLEANING INSTRUCTIONS

WARNING :

Avoid immersion in water or soaking. Do not reuse wet or soaked insoles.

Recommended Cleaning: Wipe the Insoles only with a damp cloth or soft brush.

DO NOT machine wash.

DO NOT dry clean.

DO NOT tumble dry.

SAFETY INSTRUCTIONS & WARNINGS



Read all safety warnings and instructions below. They apply to all ororo heated accessories, including but not limited to heated gloves, heated mittens, heated hand warmers and heated gloves. Failure to follow the warnings and instructions may result in electric shock, fire, serious injury and/or product damage.

SAFE PRACTICES

- **DO NOT** use it when wet. This includes excessive sweat. If the inner lining becomes wet, allow the product to dry completely before wearing. A pair of wet, heated socks or heated insoles increases the risk of electric shock.

- Check connection cable and connectors regularly for signs of fatigue.
- To reduce the risk of the product powering on unintentionally, disconnect the battery from the power cable, and remove the battery pack from the socks before storing or washing.
- Use the product only as stated in this manual, taking into account the environment in which the product will be worn. Use of the product for operations other than specified herein may result in injury to the user or product damage. That use may also void the warranty for the product.
- If you have a medical condition, device, or take medication that may affect your sensitivity to heat, consult your physician before wearing.
- DISCONTINUE USING IMMEDIATELY at any sense of discomfort. Power off the product immediately if any discomfort occurs while using. Temperatures high enough to cause burns could occur regardless of the heat setting.
- If the product malfunctions or does not operate properly, stop using it immediately.
- Clean this product only in accordance with the instructions specified on the product's washing label, and in the Cleaning Instructions section of this manual.
- Make sure the inner pocket containing the battery is completely zippered closed at all times.

THINGS TO AVOID

- This product is NOT intended for:
 - An infant or young child.
 - An incapacitated or immobile person.
 - A person with diabetes.
 - A person who is paralyzed or has skin that is sensitive to temperature changes.
 - Anyone with heat-sensitivity medical issues (e.g. poor blood circulation).
 - Anyone who cannot clearly comprehend the instruction manual and/or operate controls.
- DO NOT use the product if the power button is malfunctioning.
- DO NOT use the product while sleeping, or when there is the potential to fall asleep while using.
- DO NOT use the product under the influence of drugs or alcohol, as this can decrease skin sensitivity, and/or impair the ability to recognize the sensation of a burn.
- DO NOT use the product on open wounds.
- DO NOT use the product continuously for a long period of time. Excessive heat levels over prolonged periods of time can lead to burns.
- DO NOT allow the heating elements to make contact with bare skin.
- Wait until your hands are warm before increasing the heat setting. Cold hands reduce the skin's sensation to heat and therefore increase the risk of burns.

PRODUCT CARE

- DO NOT allow the cord to get tangled, pinched or damaged in the battery pocket. Fire could result.

- DO NOT attach pins or any other object(s) to the product. Electrical wiring damage could result.
- DO NOT dry-clean.
- DO NOT use bleach when hand-washing. Harsh cleaning solvents may damage, or lessen the effectiveness of, the insulated heating elements.

BATTERY SAFETY INSTRUCTIONS



Rechargeable lithium-ion batteries are potentially hazardous and can present a serious fire hazard if damaged, defective, or used improperly. Before using the battery and charger, read all of the safety instructions below.

SAFE PRACTICES

- Use only the original ororo battery, charger, and charging cord that came with your heated socks.
- Fully charge the battery before first use. Three light-emitting diodes (LEDs) will be illuminated solid orange when fully charged. If any of the LEDs is flashing orange, the battery is still charging. When the battery is disconnected from a power source, check the charge level by pressing the battery-status indicator button.
- When the product is being stored, fully charge the battery at least once every six months.
- Charge the battery in an environment that falls within the recommended temperature range of 32 to 104°F (0 to 40°C).
- Use the battery only in a climate that falls within the recommended temperature range of 14 to 86°F (-10 to 30°C).
- Keep the battery away from moisture. Store the battery pack in an environment where the relative humidity is 60±15 percent.

THINGS TO AVOID

- DO NOT use generic or incompatible battery chargers. Otherwise, it may cause the battery to malfunction, shorten the lifespan of the battery, or cause a fire. ororo is not responsible for personal safety or product damage when chargers, or other accessories, that were not issued with your product purchase are used.
- DO NOT charge or use the battery in explosive atmospheres (e.g. in the presence of flammable liquids, gasses, or dust). Inserting or removing the battery from the charger may ignite the dust or fumes.
- DO NOT force the charger into the battery pack.
- DO NOT disassemble, drop or break open the battery pack or charger.
- DO NOT modify the battery pack in any way to fit into a non-compatible charger. This could cause the battery pack to rupture and may result in serious personal injury.

- DO NOT splash or immerse the battery in water or other liquids.
- DO NOT expose the battery to excessive heat or cold, can damage the battery, reduce charging capacity, and shorten lifespan. Charging the battery at a temperature below freezing risks an explosion and may cause serious injury.
- DO NOT store or use the battery pack in locations where the temperature may reach, or exceed 104F(40°C).
- DO NOT store or leave the product unattended with a battery connected.
- DO NOT store the battery pack along with any other metal objects.
- DO NOT dispose of used batteries in household trash or by burning.
- DO NOT incinerate the battery pack, even if it is severely damaged or completely worn out. Lithium-ion battery packs can explode in a fire and emit toxic fumes when burned.

FIRE HAZARDS

- When transporting individual battery packs, make sure that the battery ports are protected and well insulated from materials that could come into contact with them and cause a short circuit.
- DO NOT attempt to open the battery pack for any reason.
- DO NOT insert it into the charger, if the battery pack case is cracked or damaged.
- DO NOT crush, drop, or damage the battery pack.
- DO NOT use a battery pack or charger that has received a sharp blow, has been dropped, run over, or damaged in any way (e.g. pierced with a nail, hit with a hammer, stepped on, run over by a vehicle tire, etc.).
- DO NOT store or carry the battery pack so that metal objects can contact exposed battery terminals (e.g. in aprons, pockets, tool boxes, product kit boxes, drawers, along with loose nails, screws, keys, etc.).
- DO NOT place the battery pack in or on heating devices (e.g. microwave ovens, stoves, or radiators). The battery pack may explode if overheated.

BURN HAZARDS

- If battery acid contacts bare skin, wash it off immediately with soap and water.
- If battery acid gets into the eyes, splash eyes thoroughly with water for at least 10 minutes. Immediately seek medical attention or call your local poison control center.
- DO NOT contact any battery acid if leaking from a damaged battery pack.
- DO NOT expose the battery to a spark or flame; liquid may be flammable.

WARRANTY

IMPORTANT: PLEASE RETAIN PROOF OF PURCHASE

- ororo's limited warranty applies to all BRAND NEW items sold by ororo.com and other authorized distributors.
- ONE(1)YEAR limited warranty covers any defects and malfunctions of this product from the date of purchase.

- This warranty is non-transferable and proof of original purchase from us or authorized distributors is required for warranty service.
- Damage to the parts resulting from accidental fire, flood, misuse, unauthorized service, or negligence as outlined herein will void the warranty. Warranty does not cover commercial use.
- The warranty is limited to the repair or replacement of the defective product at the manufacturer's sole discretion. The manufacturer shall not be liable for any incidental or consequential damages, whether direct or indirect.
- If warranty service should be necessary, please contact our customer service for instructions. Once a warranty claim is filed and approved, you may then return the product with proper packaging and paid postage along with the proof of original purchase and warranty claim number issued by us. Any product or parts, upon examination, are found to be defective, will be replaced with the same or a similar product during the warranty period.