

TROUBLESHOOTING	
No power	Plug the included USB power cable into the USB-C port, and connect the other end of the cable to any compatible 5V 1 Amp USB adapter charger or wall outlet. Try using a different USB cable.
Music is not playing over Bluetooth®	Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device. When the battery is low and attempting to listen to your audio while also using the wireless charging function, it can affect the audio quality or cause it to stop. Please charge your Karaoke Microphone immediately to recharge the battery completely before using it again.
Bluetooth® device will not reconnect with the microphone	Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap "MERKURY KM106" and select "Forget." Now follow the steps to pair your device again.

RECONNECT BLUETOOTH®
- You only need to pair your Bluetooth® device with the microphone once. - With your previously paired device's Bluetooth® turned on and in range, power on the microphone. - The microphone will automatically reconnect to the last Bluetooth® device it was connected to. - If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device and select "MERKURY KM106" from the list of paired Bluetooth® devices and press "forget this device" and then proceed to follow the instructions on how to pair the microphone to a Bluetooth® enabled device.

SAFETY INFORMATION
Read the following recommendations before using this product: - Please use the USB power cable provided with the product. - This product is not waterproof, so do not immerse in water. - DO NOT use intensive chemical products or detergent to clean the product. - DO NOT attempt to disassemble the product as it may get damaged and void the warranty. - DO NOT scratch the surface with sharp objects.


FCC NOTICE
This device complies with Part 15 of the FCC Rules. Operation is subject to the two following conditions: - This device may not cause harmful interference. - This device must accept any interference received, including interference that may cause undesired operation.

SPECIFICATIONS	
Bluetooth® Version: V5.4 Operating Distance: Up to 33ft (10m) Speaker Output: 5W Bluetooth® Frequency: 2402-2480MHz Sensitivity: 80db-115db Playtime: Up to 3 hours <i>depending on volume and light usage</i> Battery Type: Lithium-Ion Battery Capacity: 3000mah Charging Voltage: DC5V Charging Time: Up to 3.5 hours Charging Port: USB Type-C	Wireless Charging Compatible with: iPhone® 7/8plus iPhone® X/XS iPhone® XR iPhone® XS Max iPhone® 11 /PRO/PRO MAX iPhone® 12/PRO/PRO MAX iPhone® 13/PRO/PRO MAX iPhone® 14/PRO/PRO MAX iPhone® 15/PRO/PRO MAX/Ultra Samsung Galaxy S® 6 Series and later Google Pixel™ Series Most Modern Android Phones with Wireless Charging Capabilities

INCLUDES
1× Bluetooth® Karaoke Microphone, 1× User Manual, 1× Type-C Charging Cable. *Mobile Device Not Included

TECHNICAL SUPPORT
Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product. You can contact our technical support representatives and they will assist you with any questions you might have.

For assistance operating your product, please consult the User's Manual first, then feel free to contact Merkury Innovations technical support:
Merkury Innovations 45 Broadway, 3rd Floor New York, New York 10006 www.merkuryinnovations.com E-mail: support@merkuryinnovations.com © 2025 Merkury Innovations LLC To explore our full selection of products, visit us at: www.merkuryinnovations.com The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. iPhone, Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. All other trademarks and trade names are those of their respective owners. The illustrated product and specifications may differ slightly from those supplied. Made in China.

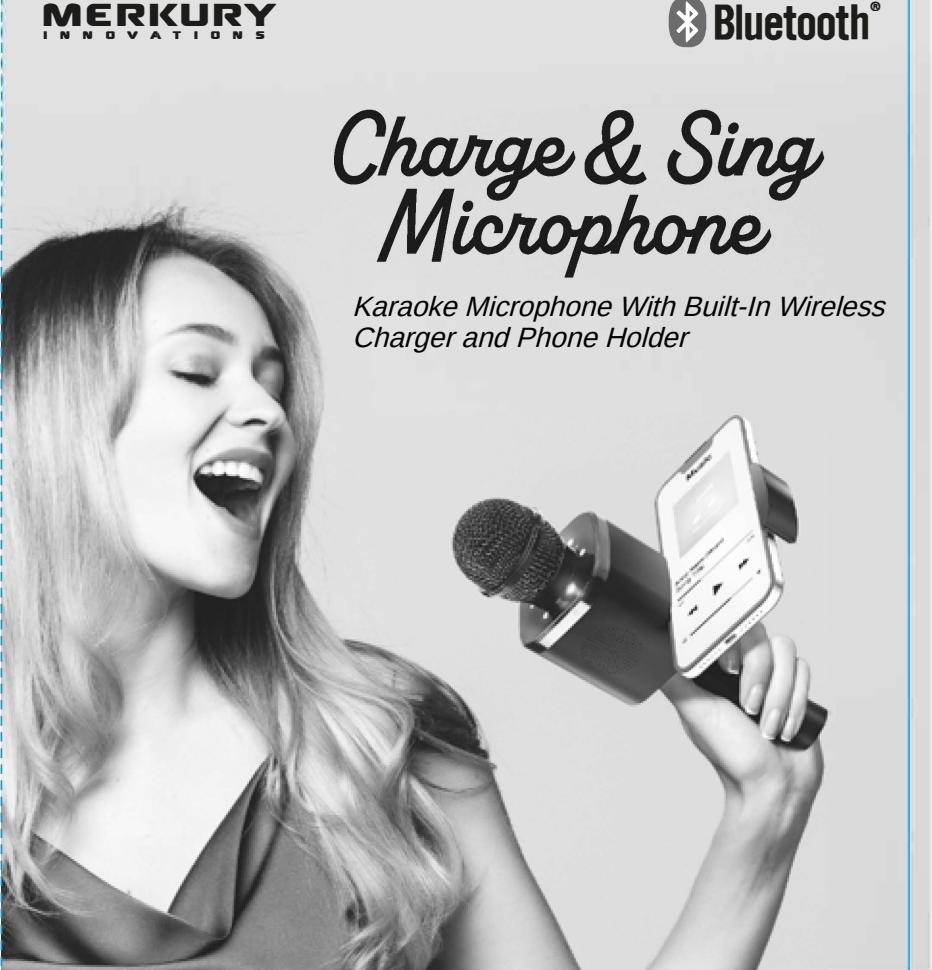

USER MANUAL MI-KM106
* IMPORTANT: Please read before using this product

If you have any questions or problems email: support@merkuryinnovations.com

www.merkuryinnovations.com

PRODUCT INTRODUCTION
1. Microphone Head 2. On-Board Controls Panel 3. Handle 4. LED Lights Panel 5. Speaker 6. Phone Holder with Wireless Charging 7. Microphone Inputs

ON-BOARD CONTROLS & INPUTS
ON-BOARD CONTROLS: 1. Bluetooth® Indicator Light 2. Volume Mode "VOL" button 3. Wireless Charging Indicator Light 4. Mode Function "M" button: -Wireless Charging 5. Power "⏻" button: -On/Off Microphone 6. Control "—" button: -Decrease Volume (in Volume Mode) -Next Track (in Play Mode) 7. RGB LED Lights settings "✳️" button 8. Accompany Mode "ECH" button 9. Play/Pause "⏮" button 10. Control "+" button: -Increase Volume (in Volume Mode) -Previous Track (in Play Mode) 11. Switch to funny voice effects MICROPHONE INPUTS: (Bottom of Mics Handle) 12. AUX Audio Input Port 13. USB-C Charging Port 14. USB-A Drive Input Port 15. Micro-SD Card Slot

CHARGING
- Plug the USB type C charging cable into the USB-C port on the bottom of the microphone handle and connect the other end of the cable into any compatible 5V 1 Amp USB charger or USB AC wall adapter. Do Not Use a 2 Amp or greater USB Charger on this device to avoid damaging the battery or the product. - When charging, the small LED indicator will glow red. When fully charged, the LED indicator will turn off. - Use the USB charging cable to plug into the charging port at the bottom of the microphone to charge. NOTE: It is recommended to fully charge devices before initial use. *Charging time may vary slightly based on individual usage.

POWER ON/OFF
- Press and hold the power "⏻" button to turn the microphone on/off. - Microphone automatically starts in Bluetooth® pairing mode and will connect with previously connected Bluetooth® devices if in range.
PAIR & CONNECT WITH A NEW DEVICE
- Make sure the microphone is turned off and your device's Bluetooth® setting is enabled. - Press and hold the power button to turn microphone on; after a few seconds it will automatically enter pairing mode and the LED light will flash. - On your Bluetooth® enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature, and search for new devices. - Wait a few seconds and select "MERKURY KM106" the microphone will emit a tone when successfully paired. NOTE: If your device's Bluetooth® version is below version 2.1, you may need to enter the password "0000." AUX-IN: The microphone will switch to wired mode automatically once an AUX cable is inserted into the AUX-IN port. NOTE: Insert a Micro-SD card or USB-A flash drive for direct music playback.
USING THE KARAOKE MICROPHONE
- Connect your device to the microphone via Bluetooth® (see "Pair & Connect with a New Device"). - Open your favorite music app and press the "⏮" button to play/pause music. - Control the music, track and volume from your device, or control them from the on-board controls on the microphone. - All audio, including music, games, videos, and notifications will be played through the speaker. - In Play Mode: Press "+" for previous track / press "-" for next track. - In Volume Mode: Press "+" to increase volume / press "-" to decrease volume. - Press and hold the "M" button to activate wireless charging function, LED indicator will turn red, you can use the wireless charging feature. After 30 seconds of inactivity, the LED indicator light will turn off, and the wireless charging function will turn off. NOTE: When charging the microphone, the wireless charging function will automatically turn on and you can start charging your mobile device immediately. - Press "VOL" button twice for volume mode, press "VOL" button twice for Play Mode. - Press "REC" button to switch to funny voice effect. - Press "ECH" button to enable/disable echo (accompany mode). - Press "✳️" button to turn on light and rotate between the five LED Light Modes. Press and hold the button to turn OFF the light without cycling through the modes.
KARAOKE APP SUPPORT
- This Product supports many apps found in Apple and Android App store. - Try out some of these popular apps: Smule, The Voice: On Stage, Karaoke Sing and Record, Yokee: Sing Like A Star!, and StarMaker. - The microphone also supports using Youtube for your karaoke music and lyrical needs. - Just search for karaoke songs and press play.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.