

Doorbell Surveillance Camera User Manual






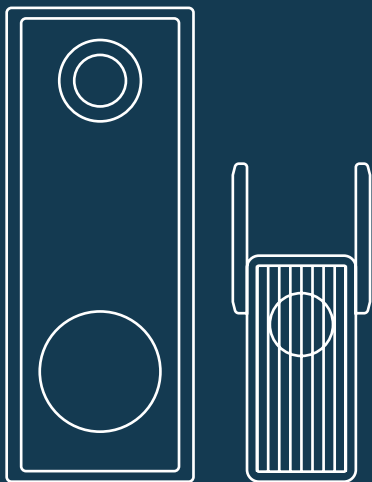


Table of Contents What's

Included	2
Before you Begin	3
Pairing the Video Doorbell and Surveillance Camera	4
Mounting Your Video Doorbell	7
Surveillance Camera and Doorbell LED Indicator Guides	13
Notices and Compliance	15

What's Included

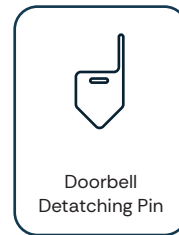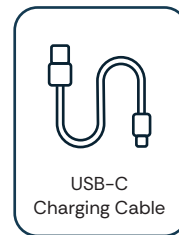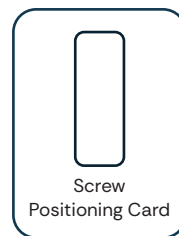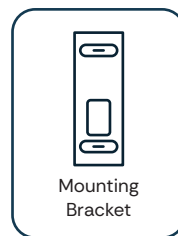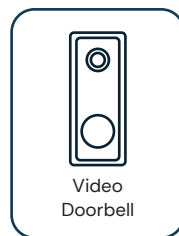


Before you Begin

1. Charge Your Camera

Use the included USB-C cable to charge your camera. The charging port is located under the silicone flap on the bottom of the camera.

The LED indicator will slowly pulse red while charging. When charged, the LED indicator will turn off.

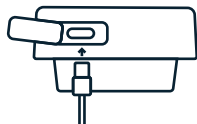

2. Download the App

Scan the QR code on the back of the box to find and download the app.

3. Connect Your Phone to Your Wi-Fi Network

Make sure your phone is fully updated and connected to your home's 2.4 or 5 GHz Wi-Fi network.


4. Insert Your MicroSD Card Into the Chime

For increased video storage, a microSD card up to 128GB (not included) may be inserted.

Pairing the Video Doorbell and Chime

1. Connect the Adapter to the Chime


Insert the included plug-in adapter into the Surveillance Camera. Twist it clockwise until it locks in place

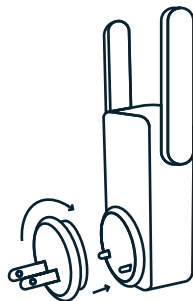

2. Open the App and Tap "Add Camera"

When prompted, allow app permissions (e.g., bluetooth, camera, microphone).

3. Scan the QR Code on the Back of the Chime

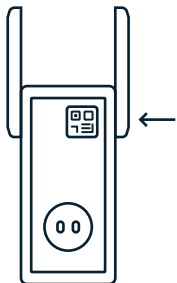

4. Plug In the Surveillance Camera.

Wait for up to a minute for surveillance camera to announce, "Welcome to your new camera."

5. Power On the Doorbell and Check That It's Connected to the Surveillance Camera

Press the "Sync button" on the back of the Doorbell for 3 seconds until the camera announces "Camera on". Once on, press the doorbell button to check that it surveillance camera both on the doorbell and on the surveillance camera box.

If it doesn't surveillance camera on the surveillance camera box, press the button located on the top of the surveillance camera box five (5) times until you hear a beep, then press the sync button twice (2) on the doorbell camera.

6. Enter Your Wi-Fi Network Info

Open the app and follow the onscreen prompts to enter your Wi-Fi network name and password. Once your surveillance camera has paired, it will announce, "Pairing successful." Once the chime has paired, your video doorbell will also automatically be paired.

Mounting Your Video Doorbell

Your video doorbell can be powered via the rechargeable battery, or by connecting to your existing doorbell wiring.

Use this method if you do not have existing wiring or choose not to use it. The internal battery lasts 4–6 months, depending on usage.

Required Tools:

- Phillips Screwdriver
- Drill with 1/4" (6.35 mm) bit
(for hard surfaces like brick or concrete)

Before Mounting

- Make sure the doorbell and surveillance camera are within 20 feet (6 meters) of each other during setup for optimal performance.

- Choose a spot with a clear, unobstructed view. Avoid plants, trim, or decorations that block the camera's field of view. Also avoid direct sunlight. **Recommended Mounting Height:** 4 feet (48 inches or 1.2 meters) above the ground.
- Assess the Wi-Fi signal by temporarily placing your phone in the desired mounting location and ensuring the signal is strong enough.
- Use the camera's live video feed in the app to confirm the best height and angle.
- Use the provided 15° wedge to angle the camera sideways if needed for better side-angle visibility.

To Install with Existing Doorbell Wiring

This method uses your home's existing doorbell power source.

1. Test Your Current Doorbell

Test your existing doorbell by ringing it to ensure it's working properly.

If it doesn't ring: The wiring may be defective. You will need to use the **Battery Powered Only** option or consult an electrician to fix the wires.

2. Turn Off the Power to Your Breaker

Locate the circuit breaker that supplies power to your existing doorbell and **turn it OFF**. This prevents electrical shock.

3. Remove the Old Doorbell

Carefully detach the old doorbell unit.

Gently pull the two wires out of the wall/frame. Straighten the ends of the wires if necessary.




4. Install the Mounting Bracket

- a. Hold the mounting bracket (and the 15° wedge, if using) against the wall at the desired location (approx. 4 feet from the ground).
- b. Use a pencil or marker (or the provided adhesive template) to mark the positions of the two screw holes.
- c. If mounting on a hard surface (brick, stucco, concrete), use a 1/4" (6.35 mm) masonry drill bit to drill holes in the marked positions. Insert the provided wall anchors and tap gently with a hammer.
- d. Use the included screws to attach the mounting bracket to the wall anchors (or directly into the wall if mounting to wood). Tighten until firmly attached.

5. Connect Doorbell Wires

Connect the ends of the doorbell wires to the two terminal screws on the back of the new video doorbell. Do not allow the wires to touch each other. Use the provided wire nuts, extension wires, or electrical tape, as needed.

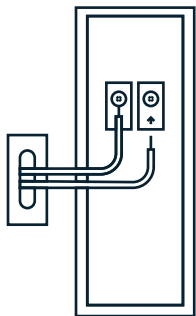

6. Mount the Doorbell

Align the bottom of the video doorbell camera with the bottom of the mounting bracket. Push the top of the doorbell into the bracket until you hear it click into place.

7. Select Your Surveillance Camera Type (In the App)

In the camera settings within the app, navigate to the chime settings and select your existing surveillance camera type:

- **Mechanical:** For traditional chimes (with moving parts).
- **Digital:** For electronic chimes.
- **None:** The existing chime will not ring, but the included wireless chime will ring.

To Install with Battery Power Only

Use this method if you do not have existing wiring or choose not to use it. The internal battery lasts 4–6 months, depending on usage.

1. Install the Mounting Bracket

Refer to step 4 of the previous section for mounting instructions. [Page 9]

2. Mount the Doorbell

Align the bottom of the video doorbell camera with the bottom of the mounting bracket. Push the top of the doorbell into the bracket until you hear it click into place.

Surveillance Camera and Doorbell LED Indicator Guides

Surveillance Camera LED Guide

NO	LED Status	Surveillance Camera Status
1	Solid Blue	Online and Communicating with the Doorbell Camera
2	Solid Red	Booting Up
3	Fast Blinking Red	Surveillance Camera is Offline
4	Alternating Red and Blue	Surveillance Camera Firmware is Updating
5	Fast Blinking Blue	Surveillance Camera is Disconnected from the Doorbell Camera
6	Fast Blinking Purple	Network Setup/Pairing with the Doorbell Camera

Doorbell Camera LED guide

NO	LED Status	Doorbell Status
1	Fast Blinking Blue	Pairing Mode
2	Slow Pulsing Blue	Motion Detected by Doorbell Camera
3	Solid Blue	Live Streaming
4	Slow Pulsing Red	Doorbell Camera is Charging
5	Slow Blinking Blue	Doorbell Camera Firmware is Updating
6	Fast Blinking Red	Doorbell Camera is Offline

Doorbell Camera Operation guide

Operation	How-To
Power On	Press and hold the SYNC button for 3 seconds
Power Off	Press and hold the SYNC button for 5 seconds
Restart	Press and hold the SYNC button for 10 seconds

Notices and Compliance

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ① This device may not cause harmful interference and
- ② this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician to help.

Caution: changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment. To satisfy FCC/IC RF exposure safety requirements, a separation distance of 20 cm or more should be maintained between this device and person's body (excluding extremities: hands, wrists, feet and ankles).

Environmental Guidelines

- Surveillance Camera operating temp: -10°C to 45°C
- Doorbell operating temp: -20°C to 50°C
- Charging temperature: 0°C to 45°C

Battery Safety Warnings

- Do not use incorrect battery types.
- Do not expose to fire or high heat.
- Do not crush or puncture the battery.
- Avoid extremely low or high pressures.

Recycling Instructions

Do not dispose of the product with household waste. Recycle through appropriate facilities.

Welcome to a safer home!