

AI time Wizard GPT robot for kids Instruction manual



- 1**
- Device keys - Function definition**
- ▲ a.Short press - In the direction
b.Press and hold - Micro Chat
 - ▼ a.Short press - direction down
b.Long press - Voice assistant
 - a.Short press - To the right
b.Long press - Volume +
 - ← a.Short press - To the left
b.Long press - Volume -
 - OK a.Tap - Confirm, Play, Pause
b.Press and hold - Turn off the alarm
 - ↶ a.Back
b.Long press - to return to the home page
- Charging port C
- Toggle switch
- TF card slot

2

Rouse

The wake-up call for the voice assistant is "Hello Timi"

Everybody's talking

"Hello Timi"

 
"Wake me up at 8:00 every morning"

"Count down five minutes for me"


"Turn on the alarm clock"

"Start timing"

"Check how many alarms I have"

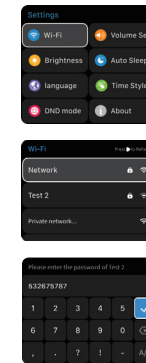


- 3**
- How do I network my devices**
- Start by opening [Settings] - [Wi-Fi] on your device.
- Once in the network list, select a Wi-Fi and press the OK key to connect
- The password must be entered using the arrow key and the OK key.
- Attention:**
- (1) If you cannot find the WiFi name, check whether the router hides the WiFi.
- (2) The product does not support 5G WiFi connection, and the 5G related network name will not be displayed on the WiFi list.
- For iPhone 12 and later models, turn on the "Maximum Compatibility" option on the hotspot when connecting to the network.
- Path: Mobile - [Settings] - [Personal hotspot] - [Maximum compatibility]

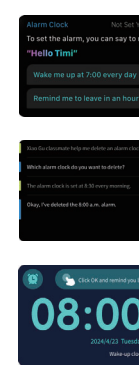 


- 4**
- My alarm clock**
- Set alarm**
- Method 1: On the device, you can only add on alarm by voice control. For example:
- "Hello Timi, set an alarm clock for 8:00 tomorrow morning"
- Method 2: Binding with the mobile phone, you can add on alarm clock in the small program on the mobile phone.
- Deleting an alarm**
- Method 1: Use voice to delete the alarm clock, example: "Hello Timi, delete the alarm clock at 8:00 tomorrow morning"
- Method 2: After entering the alarm list on the device, press the left button to delete the alarm.
- Method 3: Delete via the parent applet
- Edit alarm clock**
- Method 1: Modify by voice.
- Example: "Hello Timi, tomorrow morning the alarm clock at 8:00 will be changed to 9:00."
- Method 2: Modify through the parent program
- Alarm response**
- When the alarm time is reached, the device will automatically ring/now/press the OK button for snooze mode. It will ring again in five minutes; Hold down the OK key to disable the alarm.



 - 5**
- Tomato alarm clock**
- Set tomato alarm**
- Mode 1: The default Tomato clock time is 25 minutes. Can pass the device the direction, Down key, Select the usual tomato time;
- Mode 2: Set a custom tomato time through the parent applet.
- Tomato bell open**
- After setting the tomato time, Press OK. Just start, During the operation of the Tomato-bell, the default background music can also be used. / row keys Control the OK key. Turn off the background music on the left, press the OK button to pause the Tomato-clock, and press the button on the right to stop the Tomato-clock. Before stopping the Tomato-clock, there will be a confirmation pop-up window requiring the user to confirm;
- End Tomato clock**
- At the end of the Tomato clock, there will be a short 5-minute break.(Default short rest duration, can be set in the applet) After 4 rounds, or get a long rest.

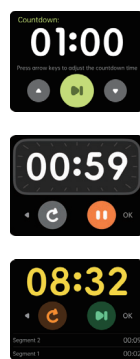

- 6**
- Countdown:**
- Set countdown time**
- Model: The default value is 1 minute. You can adjust the countdown time by pressing the up and down keys. The unit of each adjustment is 1 minute.
- Press the OK key to start.
- Mode 2: voice-controlled, Give an example: "Hello Timi, count down three minutes."
- End countdown**
- Double click back Countdown can exit.
- 7**
- Second watch**
- After entering the application, press the "OK" key to start timing.
- Pause: After starting the timing, press OK again to pause the timing.
- reset: After suspending the timing, press the left button to reset the timing directly.
- section: When the time is being timed, press the left key to record the current time, which is convenient for segmented recording.

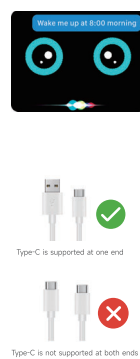 

- 8**
- Voice assistant**
- Wake mode**
- Model: Press and hold the voice button on your device
- Mode 2: - wakeward "Hello Timi" "Wake up immediately"
- Mode 5: Press OK from the voice assistant icon on the home screen
- After waking up, you can speak the command to the device.
- Give an example:
- "Set my alarm for 9:00 tomorrow morning."
 - "Full volume"
 - "Brightness set to minimum"
 - "Turn on XX function"
 - "Time me."
 - "..."
- Charging precautions**
- Avoid charging the battery for a long time, which may damage the battery
 - Do not use the wrong charger, as shown in the following figure, avoid using the charger with Type-C at both ends.

Warranty description

Thank you for your support and use of this product, in accordance with the national quality supervision and inspection of the "three guaranteed" service relevant responsibility provisions to provide you with a one-year quality guarantee service commitment.

These Terms and conditions apply to consumers who purchase the product from the Company or its approved distributors.

Return, replacement and free maintenance services shall be handled with a valid product invoice and a valid three-package certificate.

Product Statement and precautions

- Please read the contents of this manual carefully to ensure that you can use this product correctly and safely.
 - Some functions of this product can only be used normally when the network is in good condition.
 - Please do not disassemble this product and accessories without permission. The company will not be responsible for any loss caused by this.
 - This product does not deliver the power adapter, if you need to buy, please buy the CCC certification and meet the requirements of the 5V1A power adapter;
 - Do not expose the device to high temperature or around heating equipment, such as sunshine, heaters, microwave ovens, ovens, water heaters, etc.
- ¹ The company reserves the right to improve the product, product specifications and design are subject to change without prior notice!

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction