

Remote Control

Instruction Manual



RY12J

Ningbo Weishi Electrical Technology Co., Ltd.

PRECAUTIONS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

USER INSTRUCTION



-  Child lock
-  Standby function
-  Heat setting function
-  Increase function
-  Decrease function
-  Timer setting (increase)
-  Timer setting (decrease)
-  Off-display function

INSTALLATION / REPLACEMENT OF BATTERIES

Due to transportation safety reasons, batteries are not included in the packaging. Please prepare 2 pieces of 1.5V AAA batteries by yourself.

1. Flip the back of the remote control, hold and slide down the back cover of the remote control.
2. Insert 2 AAA batteries following the indications of the polarity symbols (+ and -) inside the battery compartment.

NOTES:

1. Use manganese or alkaline batteries of type "AAA". Do not use rechargeable batteries.
2. If not in use for a long time, please remove the batteries to prevent battery leakage from damaging your remote control.
3. Do not allow water or liquid to enter the remote control.
4. Do not dispose of batteries in fire, batteries may explode or leak.
5. Do not mix old and new batteries.
6. Dispose of the used batteries at appropriate recycling points or in accordance with local regulations.

Ningbo Weishi Electrical Technology Co.,Ltd.
Building No.1, No. 86-88, Weishanbei Road, West Industry Area,
Guanhaiwei Town, Cixi Zhejiang, China, 315315

MADE IN CHINA