

PROFESSIONAL WIRELESS TRANSCIVER SYSTEM
Ein professionellen drahtlosen transceiver



Instruction manual
beschreibung

Main technical parameters

This product adopts high integrated chip design, ID code matching authentication

Frequency range: 560.000-590.000MHz

Adjustable channel: 16 frequency adjustable points

Channel interval: 0.5-2.5MHz

Modulation mode: Digital modulation

Frequency stability: ± 3 PPM

Frequency response: 40Hz-20KHz

 
Working range: 50-80M

Operating voltage: Built-in 3.7V, 1000mAh lithium battery

This product uses converters and can be used on equipment such as speakers, power amplifiers, mixer or guitars.

1

【 Transmitter Instructions 】

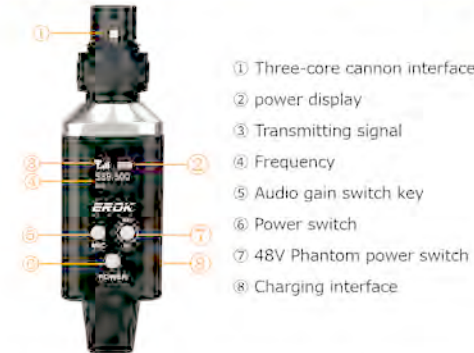

- A. Turn on key, long press 1 second to turn on, long press 1 second to turn off
- B. Double click the switch key to enter frequency modulation, continue to double click and then switch to the next frequency point, and save automatically after 3 seconds of rest.
- C. Press and hold the 48V button for 3 seconds to switch to 48V phantom power supply.
- D. Press and hold the MIC button for 3 seconds to switch to LINE mode.

This machine has been paired with the authentication code before leaving the factory. If the frequency is confused in the process of sale or use, as long as the transmitter receiver is re-matched, it can continue to use.

2

 
【 Receiver Instructions 】




1. Three-pin XLR interface
2. Battery indicator: when the three battery power lights are on, the battery is fully charged; When the battery power is blinking, it indicates that the battery is low and the battery power is only 10%. It needs to be charged.
3. Charging interface
4. On the key, long press 1 second to start, long press 1 second to shut down

3

【 Quick start 】

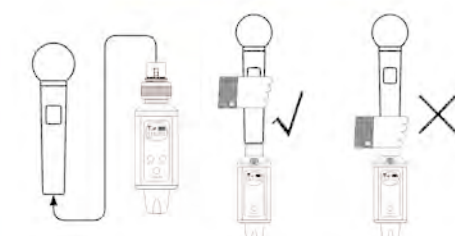

 1. Plug the Transmitter into the XLR dynamic microphone and battery-powered condenser microphones.

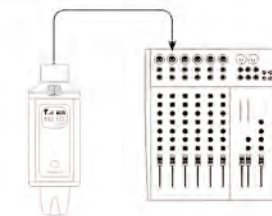

2. Plug the Receiver into the Mixer.

4

FCC Warning Statement

★Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Wichtigste technische parameter:

Das produkt wird mit hilfe eines komplexen chips entworfen und ist mit identifizierungscode versehen

Frequenzen: 5.1319 bis 1317 uhr

Gangway kann gestimmt werden: 16 frequenzen sind verstellbar

Abstand: 0,5 bis 2,5 grad

Nach art der digitalen modulation

Frequenz konstant: eine wand über einer million

Aufnahme einer frequenz: 40frequenz und 20KHz

Umfang: 50 bis 80M

Elektronenvolt: mit 3,7 V und 1000mAh lithium batterien

Das produkt setzt einen transponder ein, der auf lautsprecher, tonträger, mix-geräte Oder gitarren ausgelegt ist

5

【 Sender status zur status 】



- A. Eine taste zum start. Eine für die lang. Eine für die lang
- B. Doppelklick zur frequenz, doppelklick zur nächsten frequenz, wird automatisch nach drei sekunden pause gespeichert
- C. Wir haben den taste 48V für 3 sekunden gedrückt und auf vision gestoßen.
- D. Versuch es an allen mikros anzustecken und auf "LINE" zu wechseln.

Vor der demonstration wurde die maschine mit dem authentifizierungscode versehen Wird eine frequenz beim verkauf Oder bei der nutzung verwechselt, kann sie fortgesetzt werden, solange der sendeempfänger wieder mit der übereinstimmung verbunden ist.

6

 
【 Anweisung für empfang 】




1. Es ist ein kippschuss xlr-r-terminal
2. batterien aus: drei batterien strom anweisungen licht, batterien wohl aufgeladen; Wenn der strom der batterie flackert, ist er zu schwach. Dies gilt nur für 10%. Es muss aufgeladen werden.
3. Warten sie bitte.
4. K: an thanksgiving, einen sekunden zum start, einen sekunden zum ausfahren

7

【 Schnellstart. 】

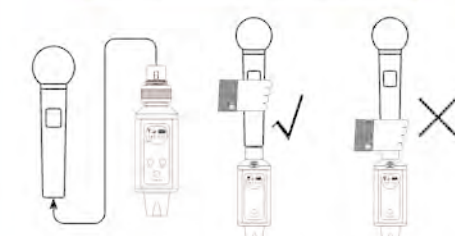

 1. Steck den sender in ein xinfarrot-mikro und ein batterieelektrisches mikrofon.

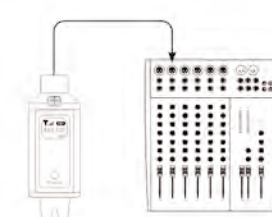

2. Statt den empfänger in den mixer zu stecken,

8