

User Manual (Model C502A Device) - English Extraction

Product Name: Kids AI Phone

Product Model: C502A

1. Parameters

- ✧ Screen: 2.8 inch
- ✧ Charge method: USB
- ✧ Resolution: 240*320
- ✧ Photos Format: Standard Baseline JPEG
- ✧ Video Resolution: 320*240
- ✧ Video Format: AVI(Motion JPEG)
- ✧ Battery: 600mAh rechargeable Li-ion battery
- ✧ Memory: 2M+128Mb+512MB(Or 1G, 4G, 8G Optional)

2. OPERATION

2.1 Video Recording and Viewing

Tap the video button on the screen to begin video recording. Tap to stop and save the video recording. Tap to view video gallery. To delete a file, tap "Options--Delete/Delete all files". Tap to shift upward-facing and forward-facing camera.

2.2 Video Player

Tap the video player shown firstly. Tap the arrow icons to see the previous or next video. To delete a file, tap Option to delete. Tap the video gallery to view video players. The latest file will be shown first.

3. Getting Started and Switching Off

Long press the Home Button on the right side of the device to turn the phone on.

Return back to the Clock Faces interface, and long press the Home Button to turn the phone off.

4. Key Press Instructions

'M' briefly on the main page to enter the menu page, and return to the previous level from other function pages

“V+” and “V-“adjust the volume

Click to enter the AI Photo Recognition feature page.

5. Main Function

- Ai Photo Recognition ● Online Story ● Walkie-talkie
- Magnifier ● Tools(Alarm/Stop-watch/Timer)
- Flashlight ● Audio Books ● 8 Games ● Settings

• Lock Screen • 5 wallpapers • Three Cameras • Photo Gallery •
Video Recorder • Video Player • Music Player • Voice Recorder •
Calculator • Calendar • Time • 16 Languages

6. Function Details

6.1 Walkie-talkie



Two devices need to open the intercom page simultaneously. One device holds down the intercom button on the display to speak, and the other device can receive it. The transmission distance in an open area is 100 meters.

6.2 Music Player



To upload music to the phone, use the Type-C USB cable to connect your phone to a computer/laptop. Copy any MP3 music files to the phone folder "My Music". Select the Music Player icon from the main menu, then press play icon from the main menu, then press play.

6.3 Ai Photo Recognition



Click on the icon to enter the character selection page, select a character, then enter the photo-taking page, click the take photo button displayed on the screen, and the system will automatically recognize the object being photographed. (connect to the network via mobile phone Bluetooth.)



6.4 Magnifier

Click on the magnifying glass function, enter the magnification page, manually adjust the distance to present the clearest magnified view; there is a flashlight button in the top right corner, each press increases the brightness by one level



6.5 Online Story

Click on the online story icon, select a story, and click the play button. (Connect to the network via mobile phone Bluetooth)



6.6 Camera

Press to take a photo. Tap to view the photos. Tap to swap between the two cameras (upward-facing and forward-facing). Tap to shift to sticker camera.

6.7 Photo Gallery



Click on the photo library to browse the captured photos. The latest files will be displayed first, and you can swipe the list to select and view images.

6.8 Voice Recorder



Tap to start voice recording. Tap to save the recording. Tap to play the last recording. Tap to delete the recording. Use the arrows to select previous or next recording.

6.9 Video Recorder



Click to enter the recording page, then click the start button to begin recording.

6.10 Calculator



Use the calculator app for basic mathematical calculations. Don't use this to cheat on tests, though, or you'll never learn how to work out the answers yourself.

6.11 Settings

In settings, you can adjust the following items: #Language, Time and date • Ringtone volume, LCD backlight • Wallpaper, Memory.

6.12 Calendar

Use the calendar to view the date. If the date shown is incorrect, please go to the Settings menu to reset the date and time information. (12 months)

6.13 Flashlight

Swipe on the menu and tap flashlight icon to toggle on/off. The flashlight will remain on during other activities until you return to the flashlight menu to turn it off.

6.14 Time Tools



6.14.1 Alarm

To change the alarm setting, select the Alarm icon from the time tools. Tap the clock icon on screen to change the alarm time. Tap the on/off icon on screen to turn on/off the alarm. Four alarms can be set. Tap the music icon on screen to choose the alarm music.



6.14.2 Stopwatch

Tap the play icon to start the stopwatch. While the stopwatch is running, tap to pause the timer, tap again to resume. Tap to stop the timer and reset the stopwatch to zero. Use this activity to set a countdown timer.

6.14.2 Timer

Tap the play icon to start the timer. While the timer is running, tap to pause the countdown, then tap again to resume. Tap to stop the countdown and reset the timer.

6.15 Audio Books


There are 10 interesting stories, tap to listen to it.

6.16 Games

There are 8 built-in games on the smartphone. Swipe the screen to see the game icons, then tap one to play.

7. Internet Connection

Open the phone settings, 1. Turn on Bluetooth;

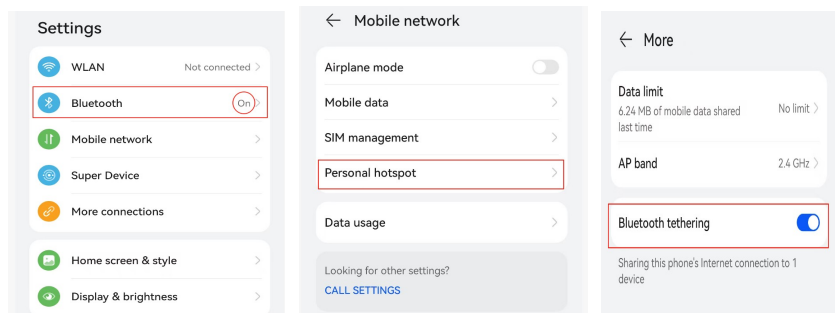

2. tap on Mobile network, then turn on Personal hotspot, click More, and enable the Bluetooth tethering button; 3. Search for Bluetooth devices, click on them after finding, and confirm pairing.

8. WARNING

- CHOKING HAZARD: Small Part-Not For Children Under 3 Years

9. Others

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.