

Relaxation Galaxy Projector



User
Manual



pococo

Make Your Room a Relaxing Sanctuary

Contents

 
 
 
English	1-17
French	18-34
German	35-51
Italiano	52-68
Japanese	69-85
Spanish	86-102

Please Check Before Use


- Check if the device is damaged in any way
- Check if the projection discs are intact
- Check if the power adapter is functioning properly

*If any of the above issues are found, do not use the product and contact customer service for a replacement.
Note: Children should use this product only under adult supervision.

Package Contents

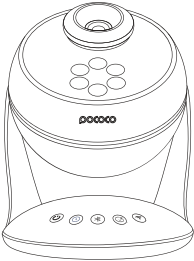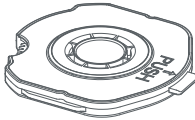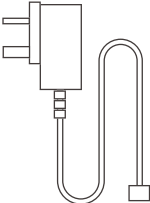1	2	3	4	5
				
Galaxy Projector × 1	Projection disc × 6	Power adapter (5V/3A) × 1	Quick start guide × 1	User manual × 1

 Product Overview

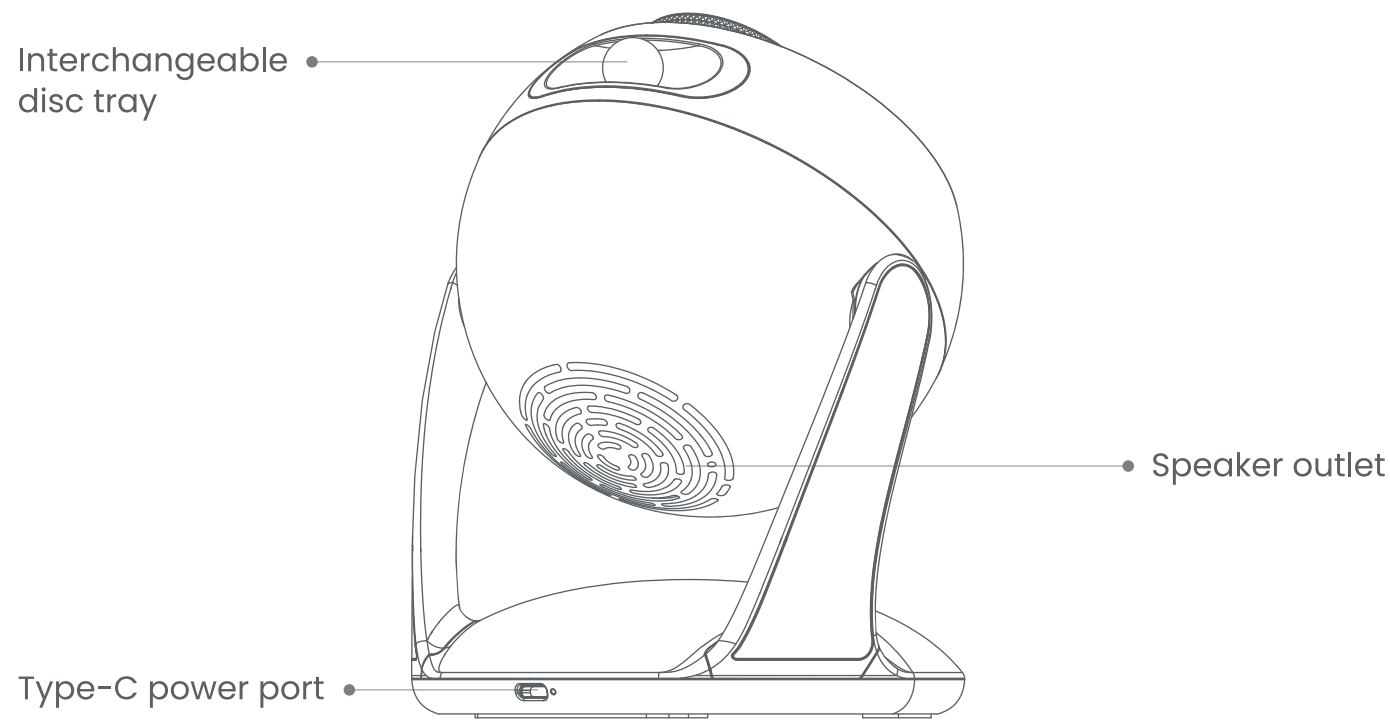

Operation Guide

1. Usage Environment

This product is intended for use in dark indoor environments. Please minimize ambient light for the best projection results.

 
For an optimal viewing experience:

- Project onto a flat, open, and blank wall or a projection screen.
- Keep the projection distance within 2-2.5m.


2. Power Supply

Connect the projector to the included 5V/3A power adapter.

When powered on, the indicator light will remain steady white.

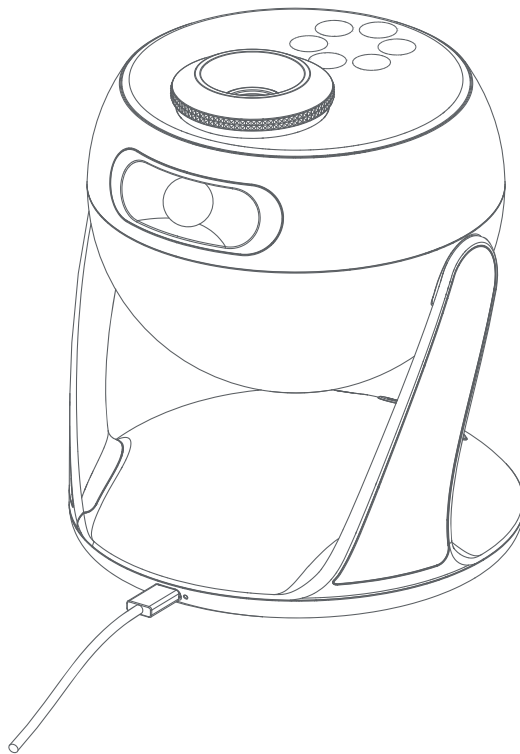

 3. Product Functions and Buttons

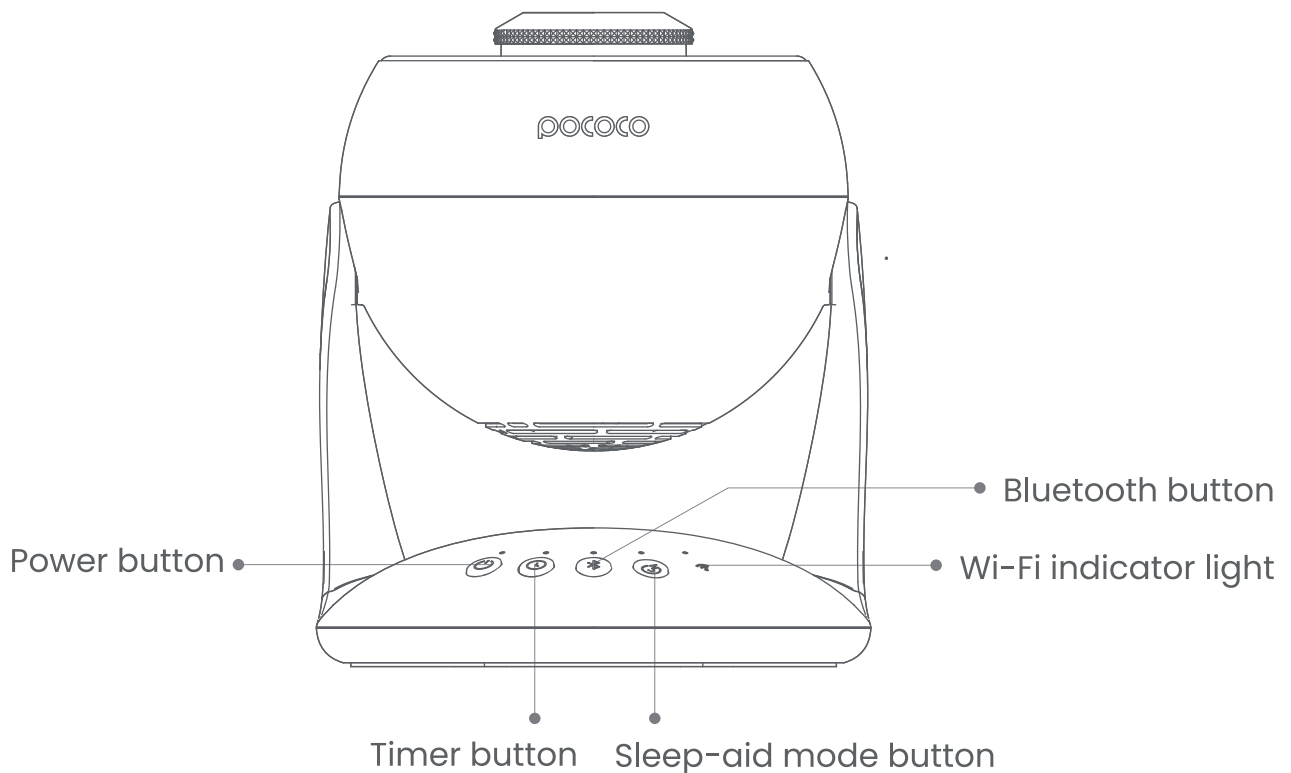

(1) Button Control Functions

① Power Button

Once powered on, press and hold for 1.5 seconds to turn on the device. The projector will then start automatically with its default settings including maximum brightness, random meteor effect, Wi-Fi setup, and image rotation at Level 1.

② Timer Button

Short-press to set a 15-minute timer. The indicator light will blink slowly.
Short-press again to set a 30-minute timer. The indicator light will blink rapidly.
Short-press again to set a 60-minute timer. The indicator light will stay on.
Short-press again to turn off the timer function. the indicator light will turn off.

Note: 1. After turning on, the product will automatically shut down after 2 hours by default.
2. For other timer durations, use the app to adjust the settings.

③ Bluetooth button

Short-press to activate Bluetooth. the indicator light will flash. When connected successfully, a sound prompt will be heard and the indicator will stay on.

Short-press again to turn off Bluetooth. A shutdown prompt sound will be heard, and the indicator will turn off.

Note: 1. Bluetooth device name: "Relaxation Galaxy Projector"
2. If not connected within 5 minutes after activation, Bluetooth will turn off automatically (press the Bluetooth button again to reconnect).

④ Sleep-aid mode button

Short-press to activate sleep-aid mode. By default, level 2 will start (10 minutes of light projection + 20 minutes of audio playback).

Short-press again to turn off sleep-aid mode.

The indicator stays on while sleep-aid mode is active, and turns off when deactivated.

Note: You can customize the sleep duration and select other levels in the app.

⑤ Wi-Fi Function

Connect to a 2.4GHz Wi-Fi network (5GHz is not supported).

After powering on, the device automatically enters Wi-Fi setup mode. During the setup process, the indicator light flashes. When setup is successful, the indicator remains steadily lit.

While the device is on, press and hold the Bluetooth button for 3 seconds to reset Wi-Fi setup.

Note: If multiple timers are set, the sleep-aid mode timer will take priority over all others.
If sleep-aid mode is not active, the projector will shut down according to the shortest active timer.

(2) App Control Functions (Tuya/Smart Life)

- Power on/off
- Sleep-aid mode settings
- Meteor effect settings
- Breathe mode settings
- Rotation speed adjustment
- Brightness adjustment
- Bluetooth music playback
- White noise playback
- Volume control
- Timer shutdown settings
- Wake-up settings
- Meditation settings

(3) Voice Control Functions

Tuya App version

 
Supports integration with Alexa and Google Assistant for voice control.

Supported commands: power on/off, brightness adjustment.

4. Disc Installation and Removal


(1) Installation

Place the disc with the front side (marked with ↑ PUSH) facing up. Align it with the direction indicated by the arrow on the projection tray and gently push it in. When you hear a "click" sound, the disc is properly installed. Then, insert the entire projection tray back into its original position in the Galaxy Projector.

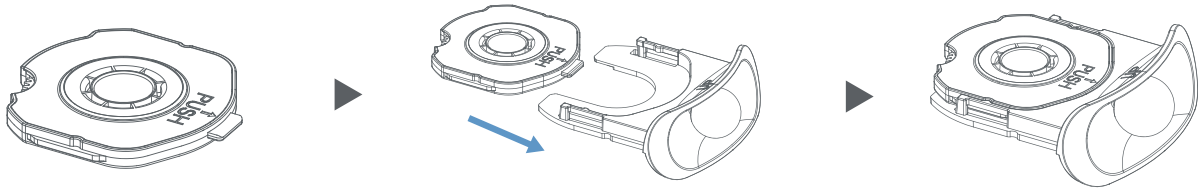


(2) Removal

 Remove the projection tray from the Galaxy Projector, then simply pull out the disc to complete the removal.

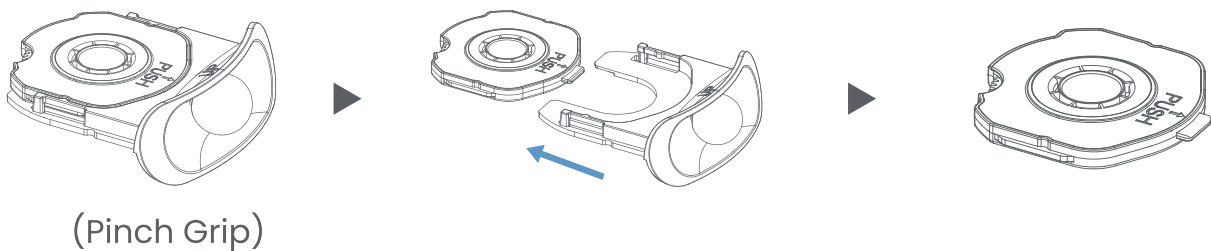

(3) Projection Angle Adjustment

 Manually adjust the upper spherical part of the projector (as shown in the diagram). The projection angle can be adjusted between 0° and 90° to suit your needs.

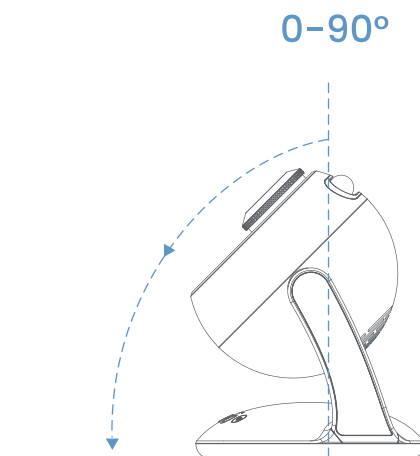


(4) Focusing

Manually rotate the focus wheel clockwise or counterclockwise to change the lens focus until the image becomes clear.

(Note: Due to the projection angle, some discs may appear sharp in the center but slightly blurred at the edges. This is normal.)

 Focus Wheel

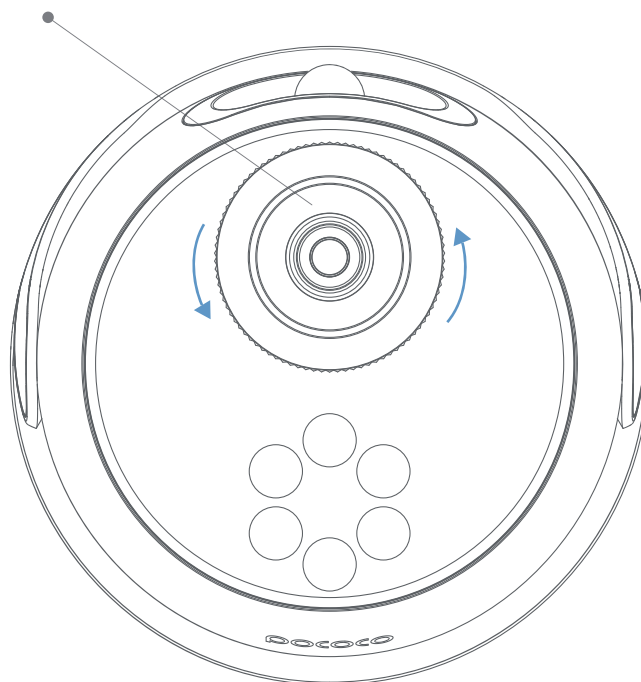


5. Connect Your Device to the App

(1) Download and Install Tuya App

For Android devices: search for "Tuya"  or "SmartLife"  in the Google Play and install it.

 For iOS devices: search for "Tuya"  or "SmartLife"  in the App Store and install it.

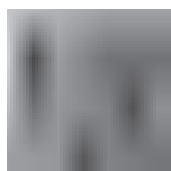

Tuya

(2) Complete Registration and Login

Note: When using the Tuya app for the first time and planning to connect with third-party smart speakers, do not select "one-click login". Instead, choose to register and log in, and make sure to remember your account and password, as logging in with a password is required for linking to third-party platforms.

(3) Prepare for Network Setup

After powering on, the device automatically starts Wi-Fi setup. If the indicator flashes slowly, network setup has failed. Press and hold the Bluetooth button for 3 seconds to reset the Wi-Fi setup.

(4) Network Setup Steps

1. Connect your phone (with the app installed) to a 2.4GHz Wi-Fi network (5GHz is not supported for now), and enable Bluetooth on your phone.
2. Open the Tuya app and complete registration and login.
3. Tap "Home" → tap the "+" icon in the top right corner → "Add Device."
4. When the icon  appears, tap the "Add" button. During the process, follow the prompts to enter the Wi-Fi password, tap "Next", and wait a few seconds for the device to be added successfully.

Note: Some routers with the "dual-band integration" feature enabled may cause connection issues. If you encounter difficulties, try disabling this function in your router settings and reconnect to the Wi-Fi network whose name usually includes "2.4G".

(5) Reconnecting to the Network

While the device is on, press and hold the Bluetooth button for 3 seconds to reconnect. Then repeat the steps in section (4) to re-establish the connection.

6. Pairing with the Bluetooth Speaker:

- (1) Turn on Bluetooth on your mobile phone.
- (2) Turn on the Galaxy Projector, then short-press the Bluetooth button to activate Bluetooth pairing mode. The indicator light will flash rapidly, indicating it is ready to pair.
- (3) On your phone's Bluetooth device list, select "Relaxation Galaxy Projector" and tap to connect.
- (4) Upon successful connection, a sound prompt will play from the Galaxy Projector and the indicator light will remain steadily lit.
- (5) If the connection fails, try turning Bluetooth off and then on again on your phone, or restart the Galaxy Projector and retry.

Safety Precautions

- Please use the original power adapter (5V/3A).
- The device should be used and stored within the recommended temperature and humidity ranges to ensure product lifespan.
- The lens is an optical component. Do not touch or wipe the lens surface directly with your hands.
- Do not place the device on surfaces inclined more than 6°.
- Keep away from open flames, water sources, and other extreme environments.
- Do not disassemble or modify the internal components of the device at will.
- Do not use the device when it is malfunctioning or damaged.
- Do not look directly into the light source.
- Do not swallow any parts.

Frequently Asked Questions (FAQs)

1. Product Connection and Use

Q: What should I do if the Galaxy Projector is not found in the Tuya app?

A: Please follow the steps below to try again:

1. Make sure your phone is connected to the internet, Bluetooth is enabled, and you are within 10 meters of the projector.
2. When the device is powered on and the power indicator is steady on, press and hold the Bluetooth button for 3 seconds to reset the Wi-Fi setup. The Wi-Fi indicator should blink rapidly to indicate Wi-Fi setup mode.
3. Open the app, tap the "+" icon in the top right corner to add a device, and wait for it to be discovered.

Q: The projector is found, but tapping it in the app doesn't bring up the Wi-Fi setup window.

A: Restart the Galaxy projector, close the app from the phone's background, reopen it, and search for the device again.

Q: The app can't find any available Wi-Fi networks.

A: Please check the following:

1. The projector only supports 2.4GHz Wi-Fi and cannot connect to 5GHz networks.
 2. Some routers have the "dual-band integration" feature enabled. It is recommended to log into your router settings and disable this function, then use a Wi-Fi name that clearly indicates "2.4G". After this, restart the app and ensure your phone is connected to the 2.4GHz network.
-

Q: My phone can't connect to the projector via Bluetooth.

A: Please try the following steps:

1. To use the projector as a Bluetooth speaker, the device's Bluetooth must be turned on and connected to the phone.
 2. Short-press the Bluetooth button to activate it. The indicator will flash quickly, indicating it is ready to pair.
 3. Once connected, a sound will play, and the indicator will remain steady on.
 4. If the connection fails, try turning Bluetooth off and then on again, or restart the device and try once more.
-

Q: How do I turn off the meteor mode?

A: Meteor mode is on by default after powering on. Open the app, go to the settings menu, find the meteor effect option, and select to turn it off or adjust its mode.

Q: Why can't I see any meteors?

- A: 1. Meteor mode is enabled by default, and meteors appear randomly every 20 seconds. Please be patient.
2. Some projection discs (e.g., "Full Moon Love Poem") have bright central elements that may obscure meteor visibility. Try using another projection disc to see if the meteors become more visible.
-

Q: Can I use the Galaxy Projector without the app?

- A: Yes. The projector can be operated via physical buttons for all basic functions. Installing the app unlocks more personalized features and a richer user experience.

2. Core Function Issues

Q: Why is the projector not lighting up?

- A: Please follow these steps to check:
1. Make sure the projector is properly connected to the power adapter.
 2. While powered, press and hold the power button for about 1.5 seconds to turn it on.
 3. After a successful startup, the projector will automatically start projection, meteor effects, Wi-Fi setup, and image rotation.
- If the device still doesn't light up, check if the adapter is working, ensure all plugs are properly connected, or try a different power outlet and turn the device on again.
-

Q: The projected image is blurry or unclear. What should I do?

- A: Please follow these steps:
1. Gently wipe the lens and projection disc with a clean, soft cloth. Avoid touching

the transparent part of the projection disc directly.

2. Slightly rotate the focus wheel left or right until the image becomes clear.

Note: Some discs are intentionally designed to have a hazy or dreamy effect.

Tip: The optimal projection distance is 2.5 meters, and the projection surface should be flat.

If the issue persists after trying the above, please take a photo and contact customer support for further assistance.

Q: Why isn't the projection rotating?

A: Please troubleshoot using the following steps:

1. The default rotation mode is low speed. Wait about 30 seconds and observe whether the image changes.
 2. Try pressing the rotation button again to switch to a faster speed or pause mode and check for a response.
 3. In a quiet environment, bring the projector close to your ear. If you hear a faint "electric current" or soft rotation sound, the motor is working normally.
 4. If there is no sound or movement at all, check if the projector is in still mode, or try restarting the device and then enabling the rotation again.
-

Q: Why does the device shut off automatically after 2 hours, even when plugged in?

A: For safety reasons, the projector is equipped with an automatic shutdown feature after 2 hours of continuous use. This protects the device and extends its lifespan.

3. Hardware Operation and Maintenance

Q: There is no response after a long press or short press of a button?

A: Please follow these troubleshooting steps:

1. Each button has specific short-press/long-press functions. Please refer to the user manual or the operation guide in the app for correct use.
2. A low battery may cause no response. Please charge the device for at least 10 minutes before trying again.
3. If still no response, press and hold the power button to restart the device and restore normal functions.

If there is still no response, please contact customer support for further diagnosis and assistance.

Q: Why won't the focus wheel turn?

A: Please try the following:

1. Slowly rotate the focus wheel in the direction indicated by the manual. Do not force or twist it violently in the opposite direction.
 2. Use a blower or a small soft brush to gently clean the gaps around the focus wheel, avoid using sharp objects to prevent damage to the mechanism.
 3. If stuck or unusual noises occur, stop immediately to avoid further damage.
- If the problem persists, please contact customer support for professional inspection and repair.
-

Q: How to clean the lens if it's dirty or has fingerprints?

A: Please follow these cleaning instructions:

1. Avoid touching the lens surface directly with your hands to prevent fingerprints and oil stains.
2. Light dust usually does not noticeably affect projection and does not require frequent cleaning. If dust accumulates, use a blower to gently remove it.
3. If wiping is necessary, use a clean, lint-free cloth lightly dampened with lens cleaning fluid or isopropyl alcohol, and wipe gently in one direction.
4. Do not rub vigorously or back and forth to avoid scratching the lens surface with fine particles.

Q: How to clean the projection discs if dirty or with fingerprints?

A: Cleaning precautions for discs:

1. Avoid touching the surface directly with your hands to prevent fingerprints and oil stains.
 2. Light dust generally does not affect projection quality and does not need frequent cleaning. If dusty, use a blower to gently remove dust. Do not rub hard.
 3. If wiping is necessary, use a clean, lint-free cloth and wipe gently in one direction, avoiding back-and-forth friction.
-

Q: What if the device won't charge?

A: Please follow these steps:

1. Use only the original 5V/3A adapter included with the projector to ensure stable voltage and current.
2. When plugged in, the indicator light should show a steady white light, indicating a normal power supply.
3. If the indicator does not light or blinks, check if the plug is fully inserted and try a different outlet or charging cable.

If these steps do not work, the charging port may be loose, the battery discharged, or there may be a motherboard issue. Please contact customer support.

Q: The projection disc won't insert into the slot?

A: Please check the following:

1. Confirm the projection disc is oriented correctly and placed flat and stable.
2. Check if the slot has debris, such as dust, fragments, or hair, which could cause blockage. Use a small brush or blower to clean gently.
3. Do not force insertion. Excessive force may damage the projection disc or the slot mechanism.

Q: Why does the rotation motor make unusual noises or jams?

A: Try reinserting the projection disc properly. If the issue continues, contact customer support.

Technical Specifications

Parameter	Specification
product name	Relaxation Galaxy Projector
Model	PRZM01
Dimensions	144 x 144 x 170mm
Weight	620g
Material	ABS+PC
Optimal Distance	2-2.5m
Input	5V/3A
Power Consumption	≤8W
Recommended Operating Temperature	10°C~30°C
Recommended Operating Humidity	Humidity 30%~60%

Warranty ordinance

Warranty Service

This product comes with a 1-year limited warranty from the date of purchase. If the product malfunctions or is damaged due to a manufacturing defect under normal use, we'll provide a free repair or replacement.

Warranty terms

The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs or modifications.

To request warranty service, you must provide a valid proof of purchase (e.g., order confirmation or invoice).

Please refer to the "Customer Support" section below to get in touch with us.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co - located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Customer Support

If you run into any issues, we're happy to help with assistance and technical support.

You can reach us through the following channels:

(1) Email or website: We'll get back to you within 24 hours.

Email: support@pococo.com

Website: <https://pococo.com/pages/contact-us>

(2) Message us through your purchase platform: Whether you ordered from Amazon, our website, AliExpress, or elsewhere, please use the platform's "Contact Seller" or "Customer Service" feature. We'll reply within 24 hours.

 
À vérifier avant l'utilisation

- Vérifiez que l'appareil ne présente aucun dommage
- Vérifier si les disques de projection sont intacts
- Vérifier que l'adaptateur électrique fonctionne correctement


*Si vous constatez l'un des problèmes ci-dessus, veuillez ne pas utiliser le produit et contacter le service client pour obtenir un remplacement.

Remarque : Ce produit doit être utilisé par des enfants sous la surveillance d'un adulte.


Contenu du paquet

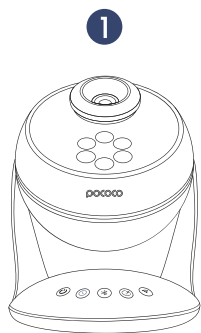

Projecteur
Galaxy × 1

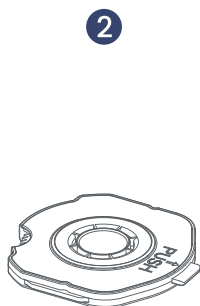 

Disque de
projection × 6

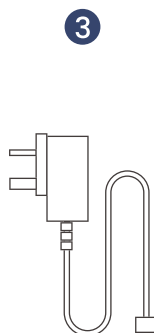 

Adaptateur électrique
(5V/3A) × 1

 


Guide de
démarrage rapide × 1



Manuel de l'
utilisateur × 1

Product Overview

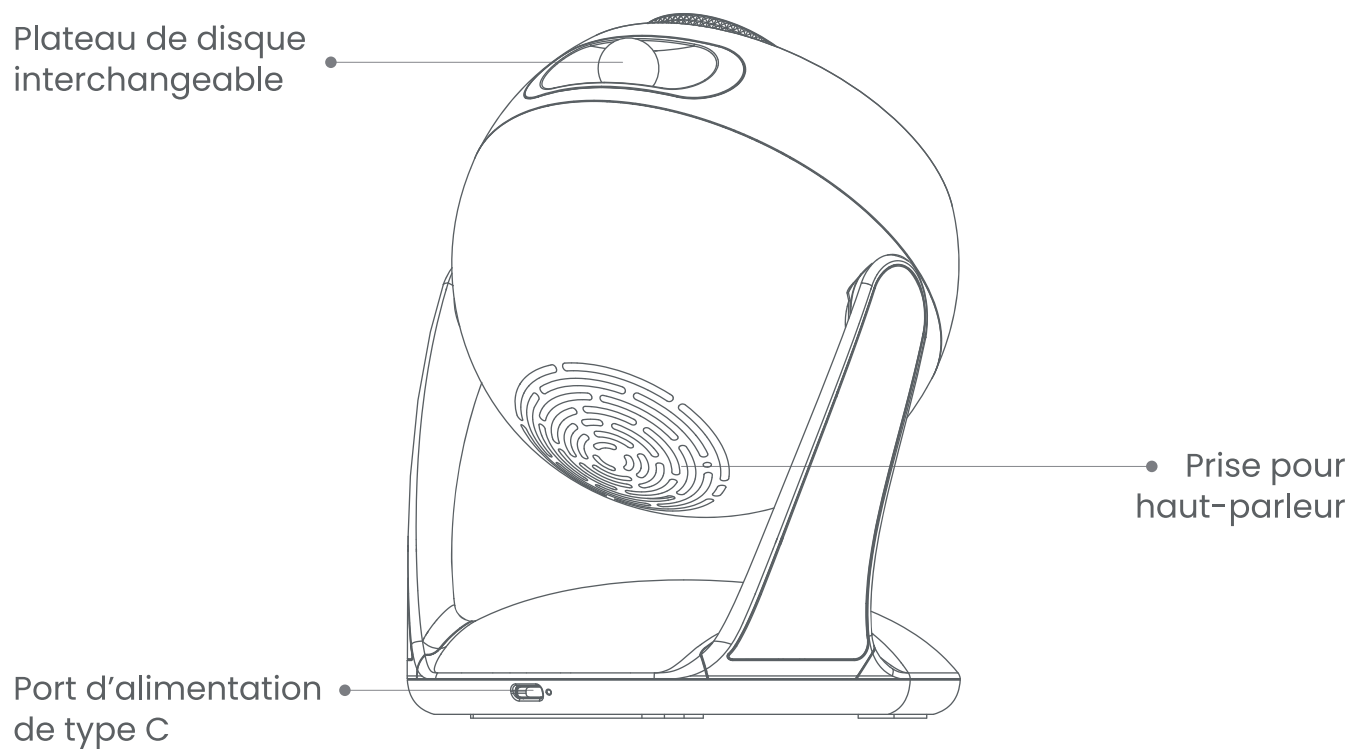

Mode d'emploi

1. Environnement d'utilisation

Ce produit a été conçu pour être utilisé dans des environnements intérieurs sombres. Veuillez réduire la lumière ambiante pour obtenir les meilleurs résultats de projection.

 
Pour un confort visuel optimal :

- Projeter sur un mur plat, ouvert et vierge ou sur un écran de projection.
- La distance de projection doit être comprise entre 2 et 2,5 m.


2. Alimentation électrique

Connectez le projecteur à l'adaptateur électrique 5V/3A fourni.

Lorsqu'il est sous tension, le voyant reste blanc fixe.

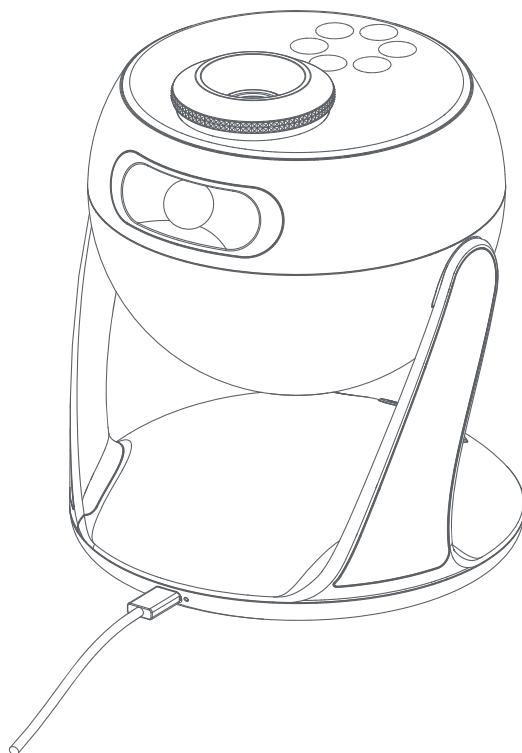

 3. Fonctions et boutons du produit

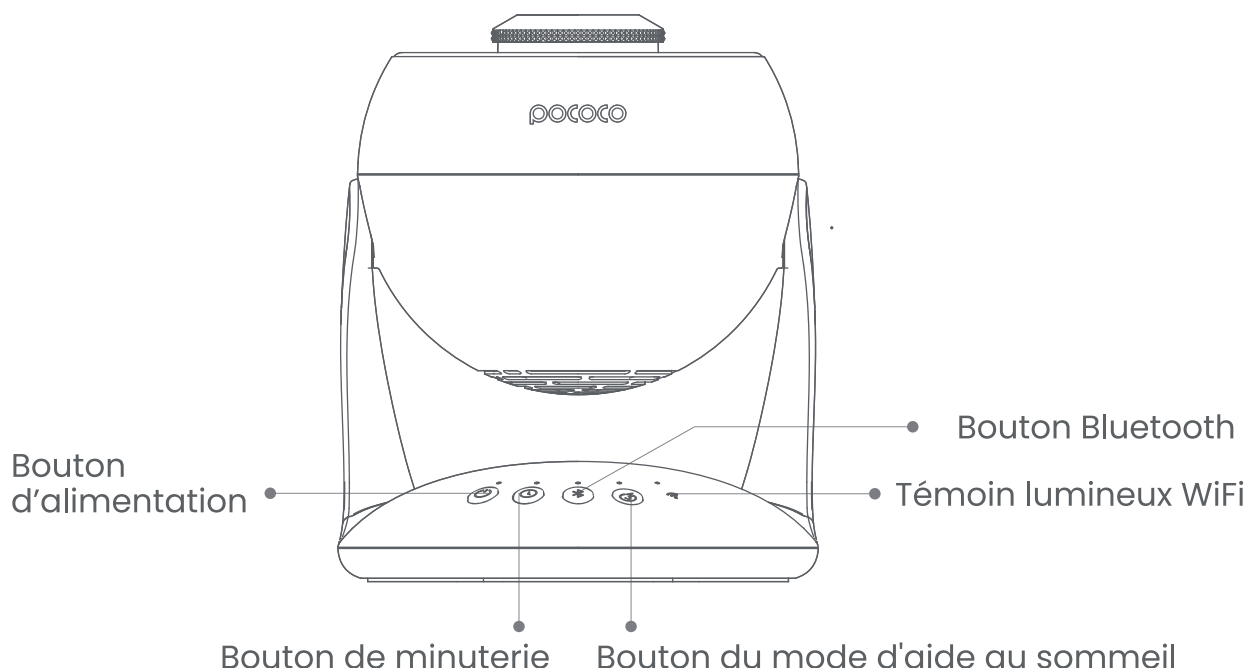

(1) Fonctions de contrôle des boutons

① Bouton d'alimentation

Une fois l'appareil sous tension, appuyez sur la touche et maintenez-la enfoncée pendant 1,5 seconde pour l'allumer. Le projecteur démarre alors automatiquement avec ses paramètres par défaut, notamment la luminosité maximale, l'effet météorologique aléatoire, la configuration WiFi et la rotation de l'image au niveau 1.

② Bouton de minuterie

Une pression courte permet de régler une minuterie de 15 minutes. Le voyant lumineux clignote lentement.

Une nouvelle pression courte permet de régler une minuterie de 30 minutes. Le voyant lumineux clignote rapidement.

Une nouvelle pression courte permet de régler une minuterie de 60 minutes. Le voyant reste allumé.

Appuyez à nouveau brièvement pour désactiver la fonction de minuterie ; le témoin lumineux s'éteint.

Remarque : 1. Après avoir été allumé, le produit s'éteindra automatiquement au bout de 2 heures selon le réglage par défaut.

2. Pour d'autres durées de minuterie, utilisez l'application pour ajuster les paramètres.

③ Bouton Bluetooth

Appuyez brièvement pour activer le Bluetooth, le témoin lumineux clignote. Une fois la connexion établie, un signal sonore retentira et le voyant restera allumé.

Appuyez à nouveau brièvement pour désactiver le Bluetooth. Un signal sonore d'arrêt retentira et le voyant s'éteindra.

Remarque : 1. Nom de l'appareil Bluetooth : « Relaxation Galaxy Projector »
2. Si la connexion n'est pas établie dans les 5 minutes suivant l'activation, le Bluetooth se désactive automatiquement (appuyez à nouveau sur le bouton Bluetooth pour vous reconnecter).

④ Bouton d'aide au sommeil

Une pression courte permet d'activer le mode d'aide au sommeil. Par défaut, le niveau 2 démarre (10 minutes de projection lumineuse + 20 minutes de lecture audio).

Une nouvelle pression courte permet de désactiver le mode d'aide au sommeil. L'indicateur reste allumé lorsque le mode aide au sommeil est actif et s'éteint lorsqu'il est désactivé.

Remarque : Vous pouvez personnaliser la durée du sommeil et sélectionner d'autres niveaux dans l'application.

⑤ Fonction WiFi

Connectez-vous à un réseau WiFi 2,4 GHz (le 5 GHz n'est pas pris en charge). Après la mise sous tension, l'appareil entre automatiquement en mode de configuration WiFi. Pendant le processus de configuration, le témoin lumineux clignote. Lorsque la configuration est réussie, l'indicateur reste allumé en permanence.

Lorsque l'appareil est allumé, appuyez sur le bouton Bluetooth et maintenez-le enfoncé pendant 3 secondes pour réinitialiser la configuration WiFi.

Remarque : Si plusieurs minuteries sont réglées, la minuterie du mode d'aide au sommeil est prioritaire sur toutes les autres.
Si le mode veille n'est pas actif, le projecteur s'éteint en fonction de la minuterie active la plus courte.

(2) Fonctions de contrôle des applications (Tuya Smart/Smart Life)

- | | |
|--|--|
| ○ Mise sous/hors tension | ○ Lecture de musique via Bluetooth |
| ○ Paramètres du mode veille | ○ Lecture de bruit blanc |
| ○ Paramètres de l'effet Meteor (météore) | ○ Contrôle du volume |
| ○ Paramètres du mode Breathe (respiration) | ○ Paramètres de mise hors tension avec minuterie |
| ○ Réglage de la vitesse de rotation | ○ Paramètres de réveil |
| ○ Réglage de la luminosité | ○ Paramètres de méditation |

(3) Fonctions de commande vocale

Application Tuya

Compatible avec Alexa et Google Assistant pour le contrôle vocal.

Commandes prises en charge : mise sous/hors tension, réglage de la luminosité.