



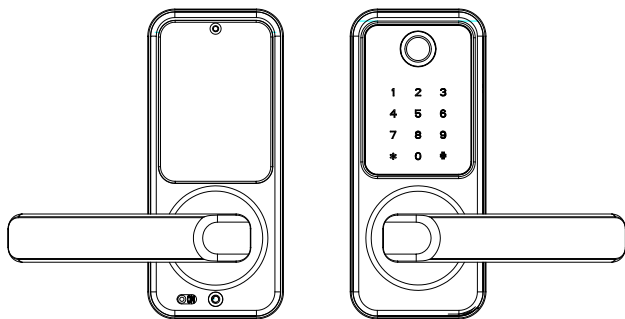

Installation & Operation Guide

This guide contains important information about your lock.
Please keep this guide

Overall

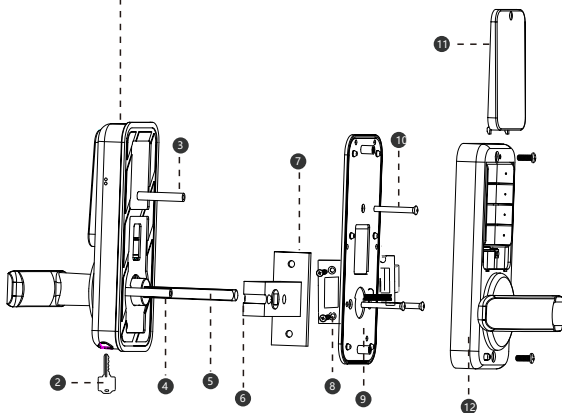

① Exterior Assembly

② Backup Key

③ Reinforcement screws

④ Thread sleeve

⑤ Square pole

⑥ Latch

⑦ Screw

⑧ Striking Plate

⑨ Mounting Plate

 
 
 
 
⑩ Screw

⑪ Battery Cover

⑫ Interior Assembly


Tips: Specifications are subject to change without prior notice

Parts List


Backup Key A 	Exterior Assembly B 	Latch C 	Screws for Latch/Striking Plate D 
Striking Plate E 	Mounting Plate F 	Screws for Mounting Plate and Exterior Assembly G 	Interior Assembly H 
Battery Cover I 	Screws for Interior Assembly J 	Square pole K 	Hole-Aligning Device L  (can use or not)

Ajustable Deadbolt Latch Set

1. TO CONVERT BACKSET FROM 2-3/8" (60mm) TO 2-3/4" (70mm)

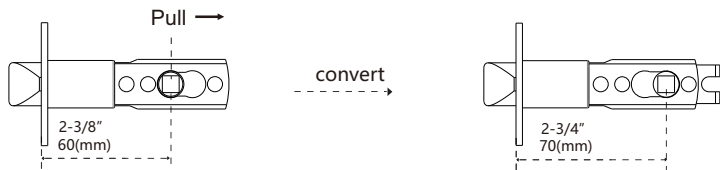


2. TO CONVERT BACKSET FROM 2-3/4" (70mm) TO 2-3/8" (60mm)

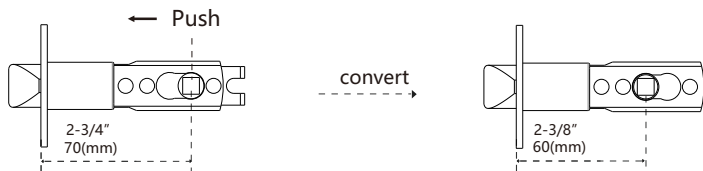


Installation Guide

1 PREPARE THE DOOR AND CHECK DIMENSIONS (with the TEMPLATE card)


A Measure to confirm the size of hole in the door frame. The wide is 1" (25mm), the length is 1-3/8" (35mm), the depth is 1" (25mm).

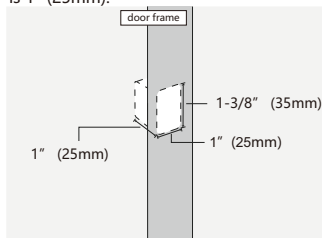


B Measure to confirm the thickness of door is 1-1/4" to 2" (30mm-50mm), the hole in the side of door is 1" (25mm).

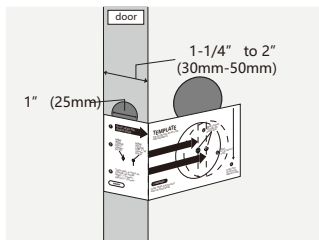

- C** Measure to confirm the backset is 2-3/8" or 2-3/4" (60mm or 70mm). And adjust the length of the latch accordingly.


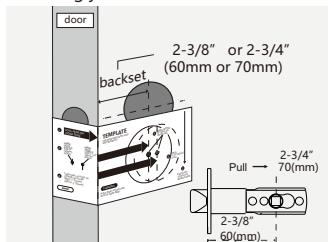


- D** Measure to confirm the size of hole in the door is 2-1/8" (54mm).

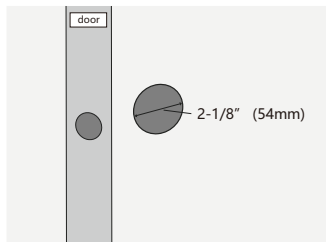


2 INSTALL THE LATCH AND STRIKING PLATE


- A** Install striking plate and hole-aligning device in the door frame with two screws (D) provided.
- B** Insert latch into hole in side of door with the word "UP" up, and screw latch into door with two screws (D) provided.

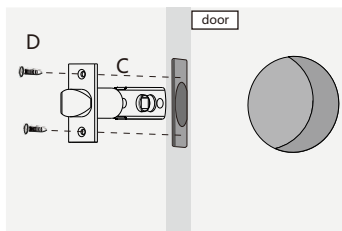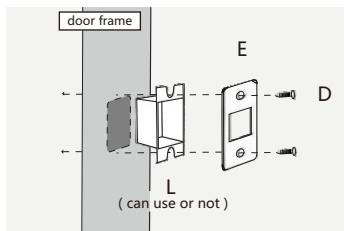


3 CHANGE HANDLE ORIENTATION

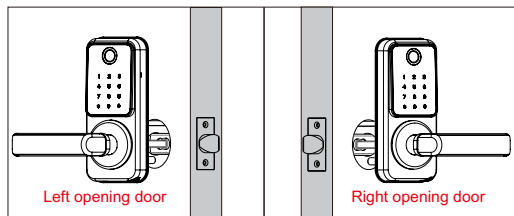

1. Please confirm the door opening direction before installing.

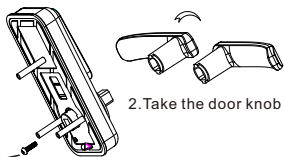

2. Take the door knob off.

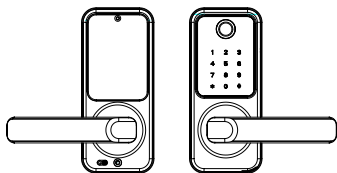

3. Remove the following screw, adjust the handle to the right direction according to the door, then reverse the screw in.

 


1. Loosen the screw.

4 INSTALL THE SCREW SLEEVE AND EXTERIOR ASSEMBLY


⚠ IMPORTANT: Please make sure the arrow on the Exterior Assembly is pointing up.

A Insert the screw sleeve into the stud and tighten it.

B Install the Exterior Assembly

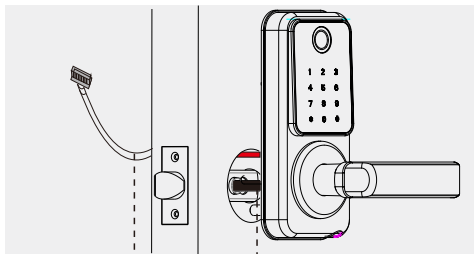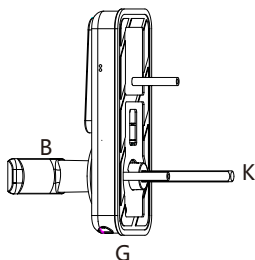

 Route the cable through the upper side of the latch.




Pass the square rod through the square hole of the latch. and push the keypad onto the door.


5 INSTALL THE INTERIOR ASSEMBLY AND BATTERY COVER

A Route cable through the mounting plate, and Tighten screws evenly.





B Connect cables to the interior Connect cables to the interior

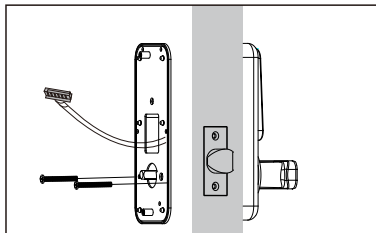


- C** Snap the interior assembly to the mounting plate and tighten the screws

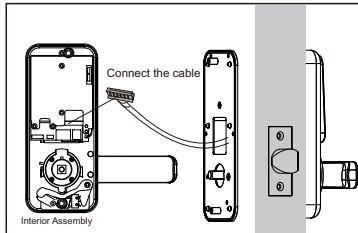


- B** Insert 4 AA batteries and close the cover

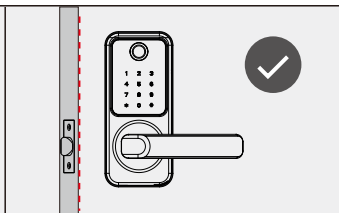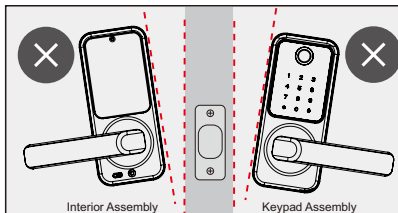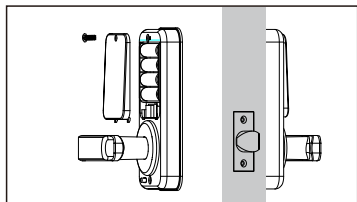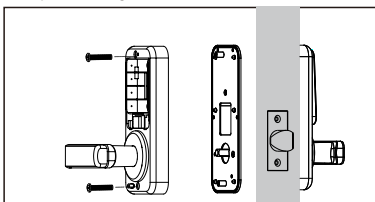


IMPORTANT NOTES FOR MECHANICAL KEY USING

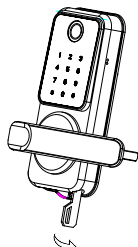

1. Turning the mechanical key to the right for emergency unlocking.

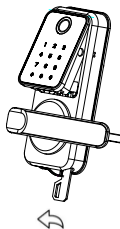

 2. Turning the mechanical key to the left opens the electronic module box.



3. To install the module box: First insert the top of the module box into the panel, then press the bottom firmly until you hear a click.

Definitions

1.MASTER INFO

The administrator's fingerprint, password, or IC card. Required for programming and feature settings. It can also be used to unlock.

2.USERS INFO

Fingerprints, passwords, and IC cards of non administrators. Can only be used for unlocking.

3.WRONG ENTRY LIMIT

If you enter incorrect unlock information for more than five consecutive times, the system displays the lock status. After the system is locked, operating the keyboard or swiping the card or entering the fingerprint again, even if the registered record is entered, the system will be prompted to lock and the lock time will be updated. The system is automatically unlocked 90 seconds after being locked.

4.THE "" KEY ()

To clear the key/back key, when entering the password, click to clear the previous input and press 3 consecutive times to clear the input Enter.

5.THE "#"KEY ()

Confirm key or enter menu function key, press it as the doorbell when there is no input when waking up before configuration networking, and press it after configuration networking to voice prompt "Requesting remote unlocking".

6.ANTI-PEEPING FUNCTION

User can prevent pin code exposure to strangers by entering random digits before and after the pin code.

291 316874 673
Random digits password Random digits

Programming Instructions

1.MASTER CODE (6 to 8digits)


The default Master Code is 123456. It is required that you change it to a code of your own before programming.

2.USER CODE (6 to 8 digits)


If the password is unlocked unsuccessfully, please reset the password according to [Quick Set Up-5.Add User info] carefully.

Parts Illustrations

Exterior Assembly

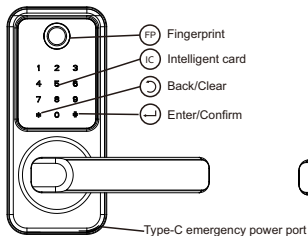

Interior Assembly

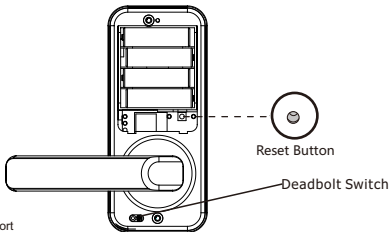

△ The default Master Code is 123456. It is required that you change it to a code of your own before programming.


Restore To Factory Default Settings

The default Master Code is 123456. It is required that you change it to a code of your own before programming.

1.Open and unlock the door.

2.Find a paper clip, put it into the hole at the bottom, long press for 5 seconds until the lock voice prompts "initialized successfully"

TEMPLATE

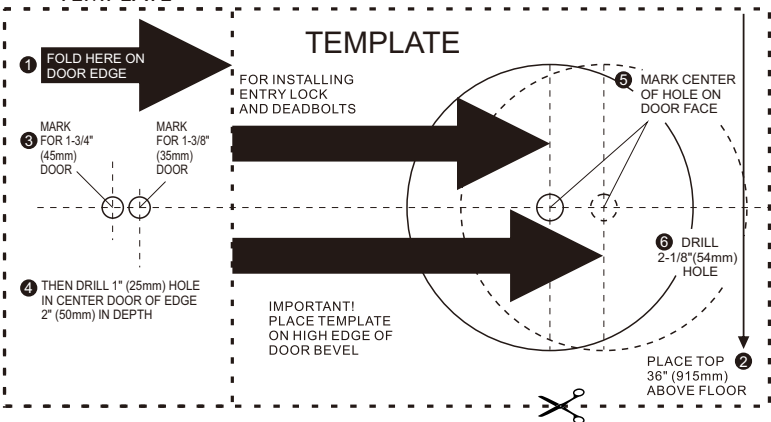



Quick Set Up

△ The default Master Code is 123456. It is required that you change it to a code of your own before programming.

1. When you enter the wrong button, you can press * clear it.

2. If you do not enter any buttons within 10 seconds, the system will exit the programming mode, and you can attempt programming procedure again.

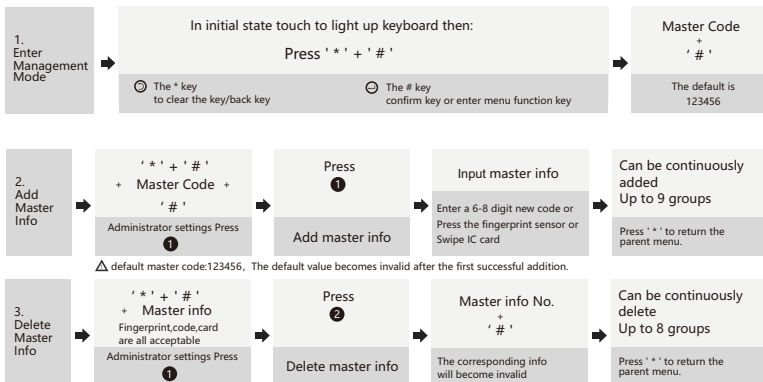

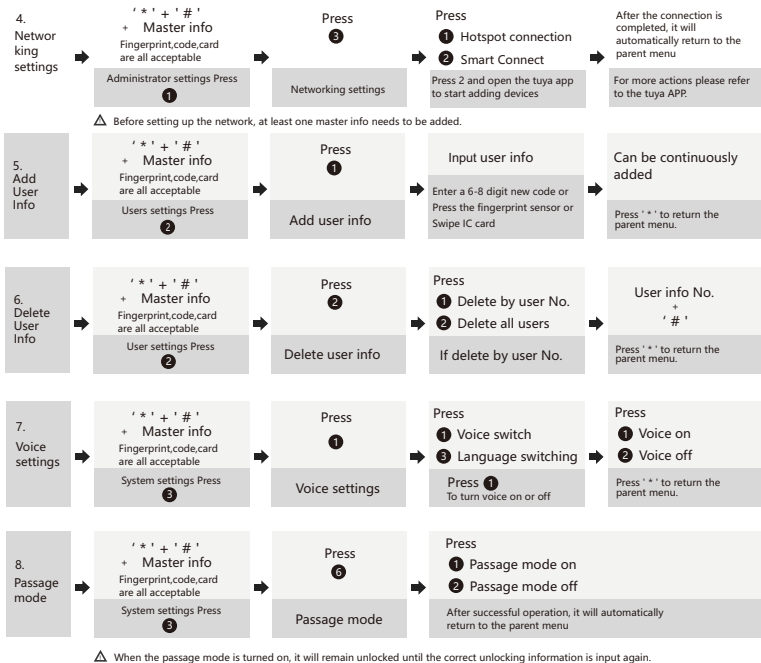

Advanced stting options


Powered by  Smart Home Platform

The lock supports TUYA Wi-Fi protocol,you can manage your lock by connecting TUYA APP.
Search "TUYA" in the app market or scan the code to get the APP:



How to connect the app


Download and install the TUYA APP, register and log in

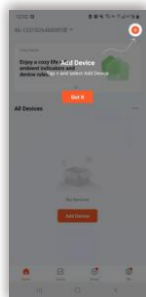

Step 1
Open TUYA
APP, click to
add device



Step 2
Choose
Camera &
Lock
-Lock(Wi-Fi)

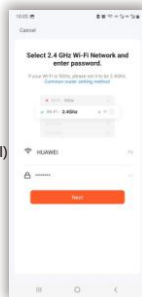

Step 3
Select 2.4
Ghz Wi-Fi
Network and
enter
password.
then Next



Step 4
Power on the
device
confirm that
the smart
lock works
normally.
[Quick Set
Up-
4.Networkin
g settings]
then Next



Step 5
Check the
status of
the
indicator
light and
Click on
the
flashing
icon



Step 6
You can edit
the device
name after
the device is
successfully
added.

Remotely unlock

You can remotely unlock the door for visitors through the network.



When your visitor
presses the # key
(doorbell key) on the
door lock, you will
receive a system push
message.




If you confirm allow,
the door lock will be
remotely opened.

Remote dynamic password

You can generate a remote dynamic password on TUYA APP and send it to visitors. Visitors can enter the password on the keyboard to unlock the lock without connecting to the network.



Click to generate remote dynamic password

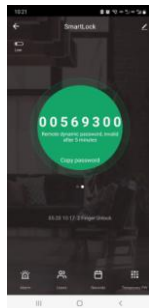


Copy password and send it to visitors.

⚠ The remote dynamic password will expire in 5 minutes. If necessary, please try again.

How to use the app

Download and install the TUYA APP, register and log in

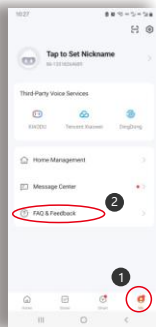


On the homepage, click "Me" and then click FAQ & feedback



Find the answer you need here, Even chatting with robots to obtain more useful information.

Introduction to some functions

You can manage almost the full functionality of your lock on your phone.

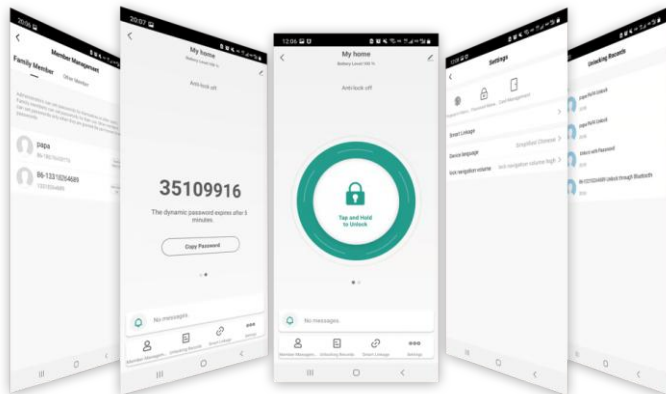

For more functions, please refer to the APP.

Factory Default Settings

Settings	Factory Default
Master Code	123456
Auto Lock	Enabled
Silent Mode	Disabled
Wrong Code Entry Limit	5 times
Shutdown Time	10 seconds
Passage Mode	Disabled

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC 's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.