

PNTS-WCS_Wireless Charging Station

User Manual

7.35 in

7.35 in

7.3 in

⚠ WARNING

Please disconnect the charger and turn your product off before cleaning. Warranty will be voided if you attempt to disassemble the product yourself. Placing the product in direct sunlight can cause premature aging. Avoid operating in dusty places or dirty environments. Avoid extreme heat or cold when using product (-10 °C to 40 °C). Avoid spilling liquid or inserting foreign objects into the device. The product must not be dropped or subjected to intentional impact. Disassembly, impact, sun exposure, fire, and compression can cause battery failure. If the battery is compromised please do not continue to use.

☰ WARRANTY

FCC Statement
This device complies with part 15 and part 18 of the FCC Rules. Operation is Subject To the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not explicitly approved by the party responsible for compliance could void the user's authority to operate this equipment.
Note: this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 and part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. During the operation of device a distance of 15 cm surrounding the device and 20 cm above the top surface of the device must be respected.

This device complies with Part 18 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
● Increase the separation between the equipment and any other radio device.
● Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

PEANUTS®

Snoopy's Doghouse

WIRELESS CHARGING DUO

USER MANUAL

www.Peanuts.com

©2025 Peanuts Worldwide LLC

PEANUTS™

WIRELESS CHARGING DUO




USER MANUAL

Thank you for choosing the Peanuts Wireless Charging Station featuring Snoopy's iconic doghouse. This fun and functional charger is designed to power up your phone and wireless earbuds while adding classic Peanuts charm to your desk or nightstand. Please read this manual carefully to ensure safe use and to get the most out of your new charging station.

Includes: Snoopy's Doghouse Wireless Charging Duo, USB-C Power Cable, User Manual

PRODUCT KEY

1. Removable Doghouse
2. Earbud Charging Area
3. MagSafe Smartphone Charging Stand
4. USB-C Power Input

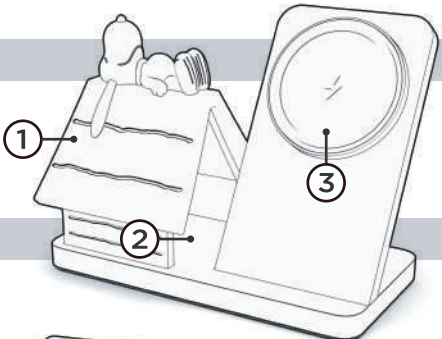


SPECIFICATIONS

Input : 5V/3A 9V/2A
Wireless Output : 15W/10W/7.5W/5W
TWS Wireless Output : 5W max
Transmission Distance : ≤6MM
USB-C Charging Cable : 3.28FT
MagSafe Compatible

POWER ON


Connect the included USB-C cable to the USB-C power input port (4) on the side of the charging station. Plug the other end (USB-C) into a suitable 5V wall adapter or powered USB port. Place your wireless charging enabled device on the corresponding pad to test successful power input.

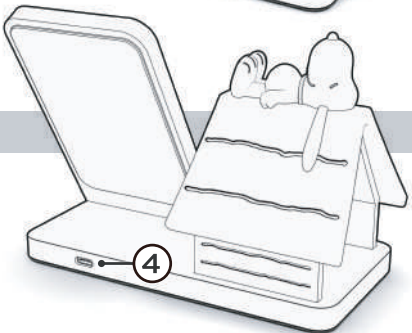

SMARTPHONE CHARGING


Once your wireless charging station is plugged in, simply place your smartphone or other wireless charging device onto the charging stand (3). Your device will automatically begin charging. If your device is MagSafe compatible, it will securely snap into place on the charging stand. Remove from charging pad when fully charged.

NOTE: This wireless charging station is compatible with most wireless charging and Qi-enabled devices.

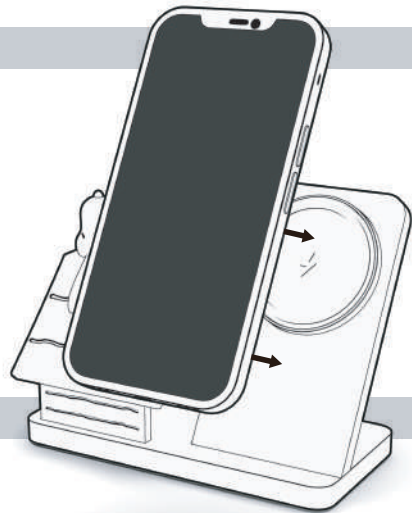

EARBUDS CHARGING

Once your wireless charging station is plugged in, simply place your wireless charging-compatible earbuds inside Snoopy's doghouse (1). You can do this by sliding them in from the side or by lifting and placing them under the doghouse. The charging indicator light on your earbuds will turn on to indicate successful charging. Remove your earbuds from the charging pad once they are fully charged.

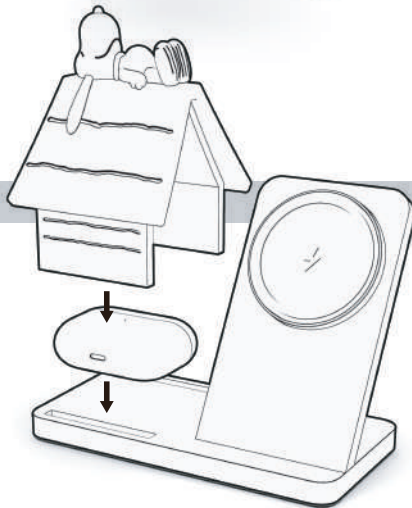

TROUBLESHOOTING

If your device isn't charging, try removing your phone case. While this wireless charger is case-friendly, very thick cases (over 0.25 inches thick) or cases made of metal can interfere with the charging process. Additionally, mounting plates, metal rings, or magnets attached to your phone or case may disrupt wireless charging. For best results, ensure there are no metal objects between your device and the charging pad.