

正面


Finder BW-M08 User Manual

The Apple® Find My® network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone®, iPad®, Mac®, or the Find Items app on Apple Watch®.

To use the Apple Find My app to locate this item, the latest version of iOS®, iPadOS®, or macOS® is recommended. The Find Items app on Apple Watch requires the latest version of watchOS®.

Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Product Overview

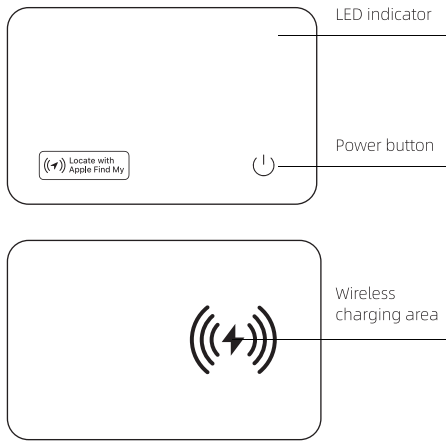

This Package Includes:

- Card Finder *1 pcs
- User Manual *1 pcs

Quick Instructions

1. Check For Updates

To use the Apple Find My app to locate your Card Finder, the latest version of iOS, iPad OS, or macOS is recommended.

2. Turn on Card Finder

Press and hold the button for 3 seconds, the Card Finder will beep and turn on. Double press the button, a chime will sound.

Note: To turn off, double-click the button first, then quickly press the button 5 times within 2 seconds, a long beep will sound.

3. Connect Card Finder

- Open the Apple Find My App.
- Tap “+” and then “Add Other Item”.
- Make sure your Card Finder is close to your phone. Wait until you see the device name then tap “Connect”.
- Choose a recognizable name and emoji for your Card Finder and tap “Continue”.
- Find My will ask for confirmation to add the Card Finder for your Apple ID – tap “Continue”.
- Tap “Finish” and the Card Finder will be set up and ready to be connected to whatever items you wish to locate, e.g., your wallet, luggage, etc.

Main Functions

1. Locate Your Item

- Find the Card Finder when it is Nearby. Tap “Play Sound” to make your Card Finder beep when it is nearby.
- Find your Card Finder’s last known location. Your Card Finder’s last known location will appear on the map as emoji you choose during set up, tap “Directions” to navigate to the last known location.

2. Find Item When Out of Range

- Enable the “Notify When Left Behind” toggle, you will receive a notification when you left your Card Finder behind and it is no longer in range of your device.
- Enable the “Notify when Found” toggle, when your Card Finder is seen by another Find My enabled device, you will receive a notification of its updated location. Note: “Notify When Found” can only be activated when your Card Finder is out of range.

3. When Your Item is Lost

- When Your Item Lost Under “Lost Mode”, tap the “Enable” tab, a detailed page showing the Lost Mode will pop up, tap “Continue”. You can enter your phone number or email address and tap “Next”. You may enter a message

that will be shared with the person that finds your item. Tap “Activate” to enable “Lost Mode”.

Note: When “Lost Mode” is enabled, “Notify When Found” is automatically enabled.
Note: When “Lost Mode” is enabled, your Card Finder is locked and cannot be paired to a new device.


4. Remove Card Finder

Ensure “Lost Mode” is disabled, tap “Remove Item” tab, a summary will open, tap “Remove” to confirm.

How to Charge the Card Finder?

1. Connect your wireless charger to power. Use the power adapter that came with your accessory or a power adapter recommended by the manufacturer.
 2. Place the Card Finder on your charger. For best performance, place the wireless charging area in the center of the charger or in the location recommended by manufacturer.
 3. The LED indicator in the card will be ON in red, indicating it is charging.
 4. After being fully charged, the LED indicator will turn off.
- Note:** just compatible without magnetic wireless charger, don't charge with magnetic wireless charger.

背面

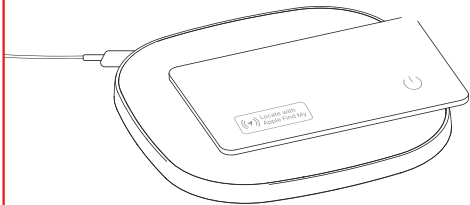

Unwanted Tracking Detection

If your iPhone detects that an unknown Card Finder is traveling with you, it will send you a notification. A sound will start playing so you will be able to find it. These alerts are only activated when an Card Finder is not connected to its owner’s phone, so your partner’s Card Finder will not trigger a sound if they are with you.

Button Function

1. Power ON

Press and hold the button for 3 seconds, the Card Finder will be turned on status.

2. Power OFF

When the Card Finder is on, press button 5 times in 2 second.The Card Finder will beep, then powered off.

3. Reset

First, remove the item from Find My app. After Card Finder is powered on, double-click the button. The Card Finder will beep. Long press the button for 5 seconds, Card Finder beep, continue to press 3 seconds untill Card Finder beeps again.Release the button to complete factory reset The Card Finder can now be paired.

4.Device status confirmation

Double-click the Card Finder button, then will beep, indicating that it is working. if it does not ring, Card Finder is off. Long press the buton for 3 seconds to turn it on.

Note: Two different types of beep might appear depending on the Card Finder state

- 1) A light music will sound if the Card Finder is unpaired and ready to get paired.
- 2) Short 3 beeps will sound if theCard Finder is already paired

5. The device enters the pairing state again

After removing the Card Finder in the app, it will beep, not turn off and will be in the pairing mode. if there is no re-pairing within 10 minutes, it will enter the sleep state. if need to pair, need to click button twice quick, then the Card Finder will beep, at this point, enters the pairing state and can be re-paired with Find My.

Important tips:

- When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended:
 1. Change the phone’s network, such as switching between **BT** and mobile. The first pairing may takes a long time, please wait patiently.
 2. Reset your item.
 3. Repair with Findmy APP.
- When “Lost Mode” is enable, DO NOT REMOVE ITEM in the APP. Your Card Finder will be locked and cannot be paired to a new device.
- The battery usage time varies depending on personal usage habits. Frequent use of the call function can accelerate battery consumption.

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.