

165X82MM



WARNING!

To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from infants and toddlers as this product contains small parts.

This product is not a toy! Use this light only as it is intended. Inspect before every use. Do not use if parts are damaged, loose or missing.

REGISTER YOUR PRODUCT, AND SAVE!

All warranty registrations will receive a 10% discount coupon code on a future LiteZAll online retail purchase.

REGISTER YOUR WARRANTY ONLINE:
WWW.LITEZALL.COM/WARRANTY

ONE YEAR WARRANTY

All LiteZAll products are guaranteed against all defects in workmanship and materials for one year from date of delivery. Original proof of purchase required.

MANUFACTURED FOR
KODIAK LIGHTING®
Comments or Questions
Toll Free 844-475-7344
Peru, Illinois 61354
www.kodiaklighting.com
©2025 Premier Products



THE KROSSFIRE™

SAVE THESE
SAFETY PRECAUTIONS!

INSTRUCTION BOOKLET
SKU # 29186



CHARGING FLASHLIGHT: This product is rechargeable. Please charge fully before first use to ensure optimal performance. Pull up the rubber port cover. Connect the full-sized USB plug of the included charging cable to a USB power source such as a power cube, computer or car adapter and the USB-C plug into the charging port. A red light on the power switch indicates charging is in progress. Charging is complete when the light is green. DO NOT OPERATE THE FLASHLIGHT WHILE IT IS CHARGING!

CHARGING REMOTE: Pull back the port cover on the remote. Connect the full-sized USB plug of the included charging cable to a USB power source such as a power cube, computer or car adapter and the USB-C plug into the charging port. A red light on the power switch indicates charging is in progress. Charging is complete when the light is green.

CHARGING A SMARTPHONE: Pull up the rubber port cover. Using your own USB-C to USB-C or USB-C to Lightning cable, connect the USB plug into the flashlight's USB charging port. Connect the other end to your device. A green power button indicates your phone is being charged.

NOTE: After charging a smartphone, the flashlight is not fully functional for 35 seconds or until the green power button turns off. **NOTE:** Charging a smartphone reduces the overall runtime of the flashlight. Replace the port cover when finished.

OPERATION FLASHLIGHT: Repeatedly pressing the power button cycles between high, low, strobe, and off. Focus the beam by pushing the flashlight head away from or toward you.

OPERATION REMOTE CONTROL: Pair the remote by long pressing the button on the base of the flashlight. The power button turns green indicating pairing is complete. Press the power button on the remote to select your desired light mode. Press and hold the long button on the remote to temporarily activate high brightness. Release to turn it off. Double press the power button on the remote to immediately activate strobe. Press either button on the remote to turn it off. **IMPORTANT:** Unpair the remote by long pressing the button on the base of the flashlight to reduce battery drain when not being used. The power button turns off indicating unpairing is complete.

INSTALLATION: Turn the thumbscrew counterclockwise and attach the flashlight to the desired position on the Picatinny rail of your weapon. Tighten the screw securely.

BATTERY REPLACEMENT: Unscrew the base of the flashlight to access the 20650 2600 mAh Li-Io battery. Insert the replacement and screw the base back on. **NOTE:** The battery in the remote is not replaceable.

CAUTION: Lithium batteries can explode or cause burns if shorted, overheated, disassembled, recharged or exposed to fire or high temperature (above 212°). If the flashlight is turned on while in a container or in clothing, the flashlight can overheat, damage the flashlight and/or cause surrounding material to ignite.

STORAGE: Remove the rechargeable battery from the flashlight if it will not be used for an extended period of time. To do so, unscrew the battery compartment cap at the bottom of the flashlight, remove the battery and screw the cap back on. To use the flashlight again, unscrew the battery compartment cap and insert the battery, positive (raised) end first. Screw the cap back on tightly.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation