 



FunLogy Soundbar

User Instruction

Model no.FLDH6

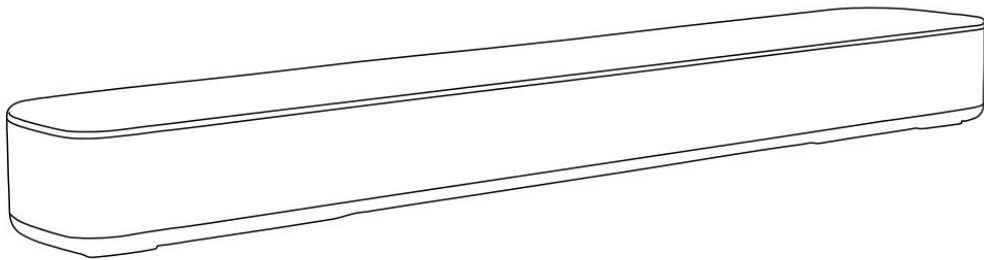

 
What is in the Box?

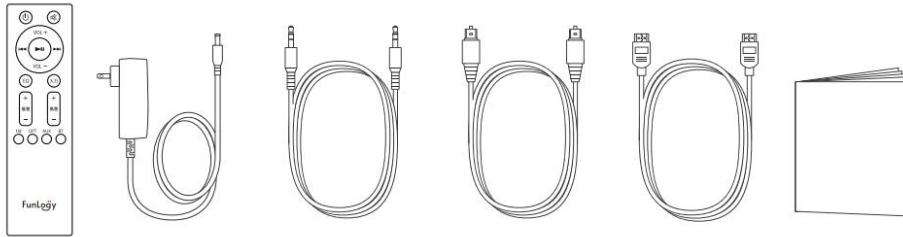



Remote controller Adaptor AUX cable Optical cable HDMI cable Manual

Product Connect interface

 Front Side

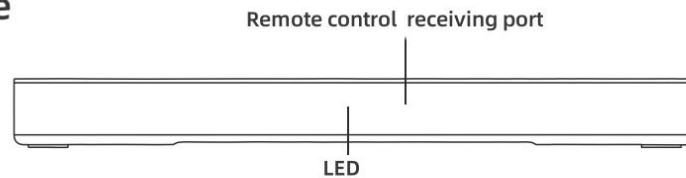


Back Side

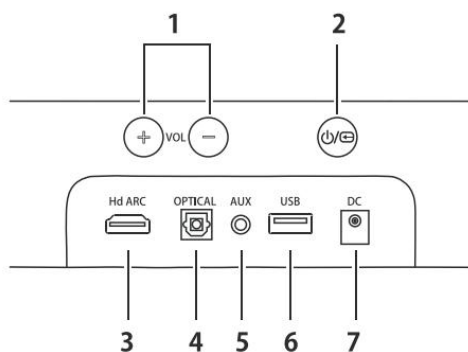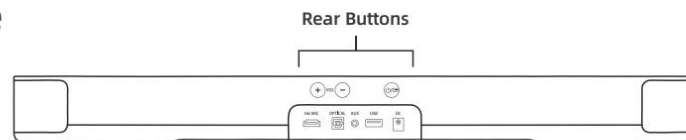  

- 1 -** Volume +/-; Next/Prev Song
 - +** : Volume up/Next Song
 - : Volume down/ Prev Song
- 2 -** Power / Mode switch
 - Short Press: Mode switch
 - Long Press: Power On/Off
- 3 -** Hd ARC
- 4 -** OPTICAL
- 5 -** AUX
- 6 -** USB
- 7 -** DC IN

 Know your remote controller

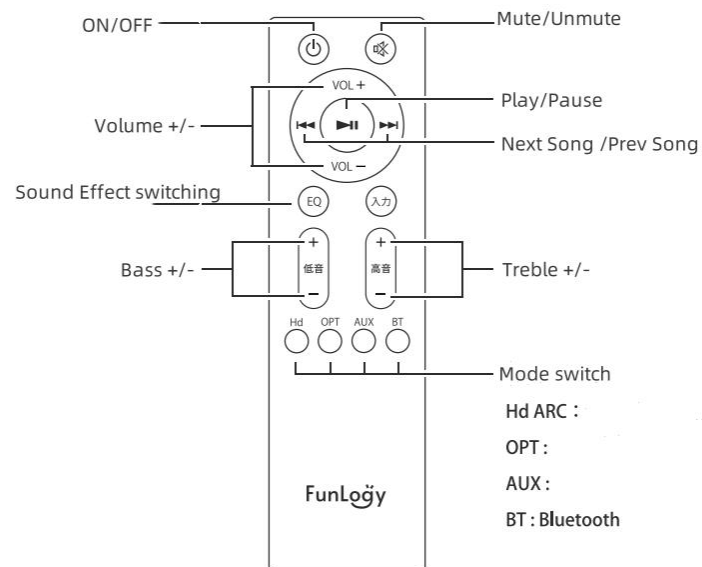

Product name: FunLoggy Soundbar

Product size:610*100*62mm

Bluetooth protocol :A2DP, AVRCP, HSP,HFP

Frequency response :55Hz-18KHz

Wireless distance :10M

Output power:100W

Power adaptor: DC18V-2.33A

Input Port: HDMI (ARC), OPT, 3.5mm AUX, USB(Upgrade only)

Power consumption: 30W

How to use the soundbar?

Turn on and off

After connecting the power adaptor, the soundbar will automatically start up and enter the standby state.

Long Press the button  on the soundbar , or short press the button “” on the remote control to turn on / off the system.

 
Mode Selection

Press the button “  ” on the remote control or “  ” button on the soundbar to scroll through the modes : Bluetooth, Optical, HDMI, Line in . When you scroll through the different modes , there will be a voice prompt " Bluetooth "," Optical "," HDMI "," Line in " and the LED indicator display the corresponding mode.

Bluetooth connection


1. Press the button “  ” switch to Bluetooth mode or press button “BT” on the remote
2. Turn on Bluetooth on the device.

And select "FunLogy Soundbar", When connection is successful , you will hear a prompt sound.

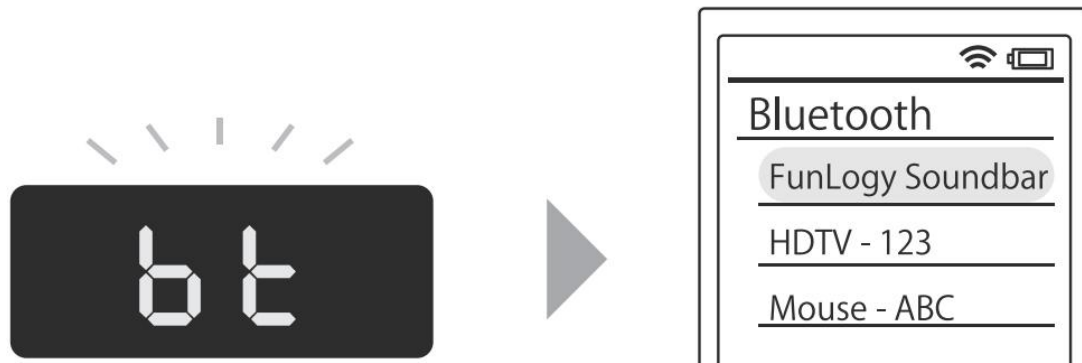

OPT connection

 1. Connect the optical cable to the optical port on the soundbar and the TV.
2. Press button “OPT” and select Optical mode, you will hear the voice prompt and the LED indicator display "Opt".
3. Turn your TV's audio output to “PCM”.

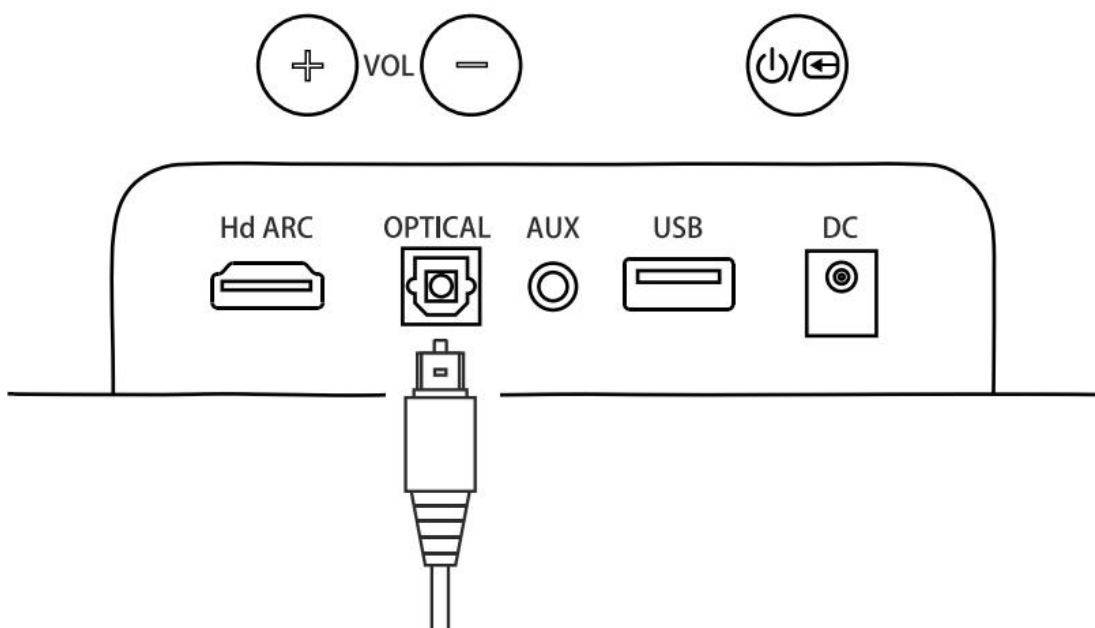


Use HDMI cable for connection

1. Connect HDMI cable to the HD ARC port on the soundbar and the TV.
2. Press “Hd” and select HDMI mode, you will hear the voice prompt and the LED indicator display " Hd ".
3. Turn your TV ' s audio output to " PCM ".

AUX connection

 1. Connect AUX cable to the AUX port on the soundbar and the TV.
2. Press “AUX” and select HDMI mode, you will hear the voice prompt and the LED indicator display " AUX ".

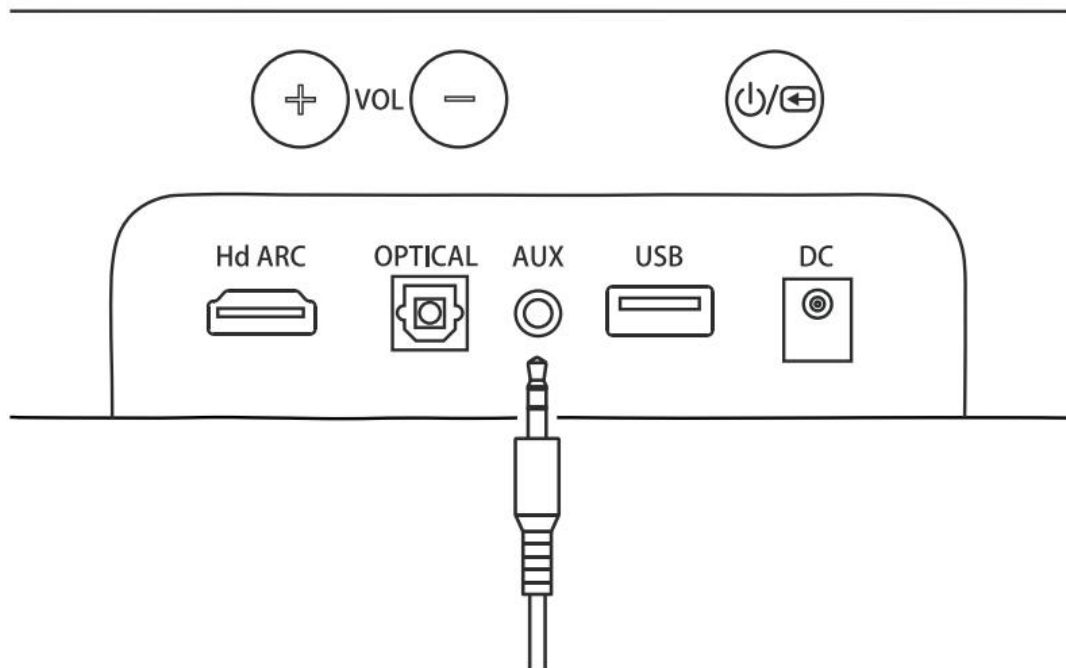

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.