 
 


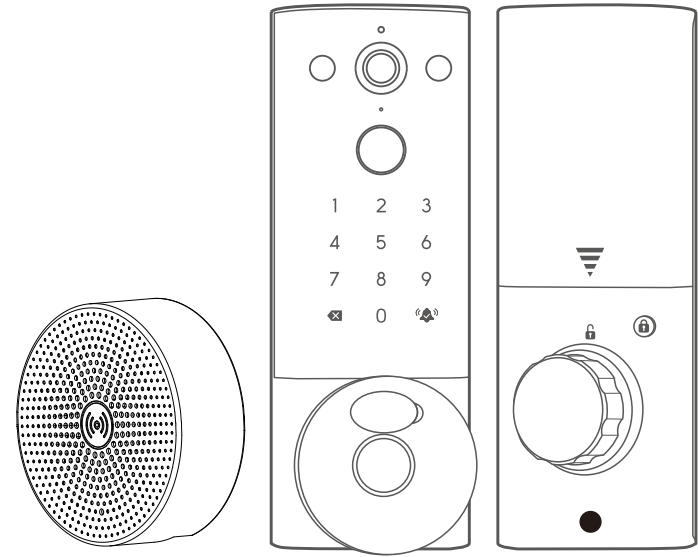

Video Smart Lock

QUICK START GUIDE

 
 
OVERVIEW

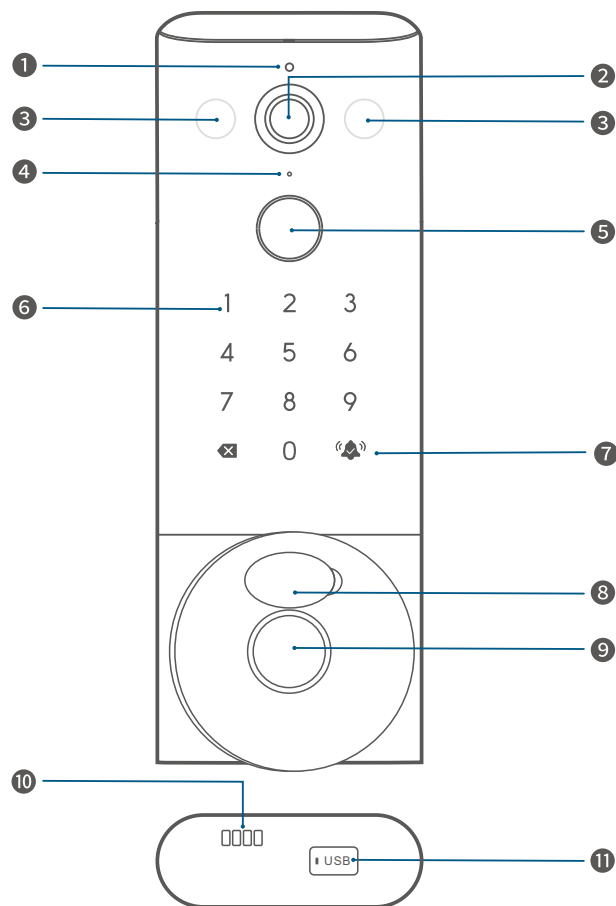

Security Video Smart Lock


- ① Microphone
- ② Camera Lens
- ③ IR LED
- ④ Ambient Light Sensor: Detects the amount of light.
- ⑤ Motion PIR Sensor
- ⑥ Keypad
- ⑦ **Status Light & Lock and Unlock Button:** Press and hold to lock the door.
 - Blue: Door unlocked.
 - Orange: Door locked.
 - Red: Abnormal status detected.**Doorbell Button:** The ring light automatically turns on when someone approaches the door.
- ⑧ Lock Cylinder
- ⑨  **Fingerprint Scanner:** Use to lock and unlock the door.
- ⑩  **Local Storage for Palm Vein Biometrics**
- ⑩ Speaker
- ⑪ **USB-C Port:** Charges the lock in emergency situations.

How To Open / Close Lock Cylinder Cover

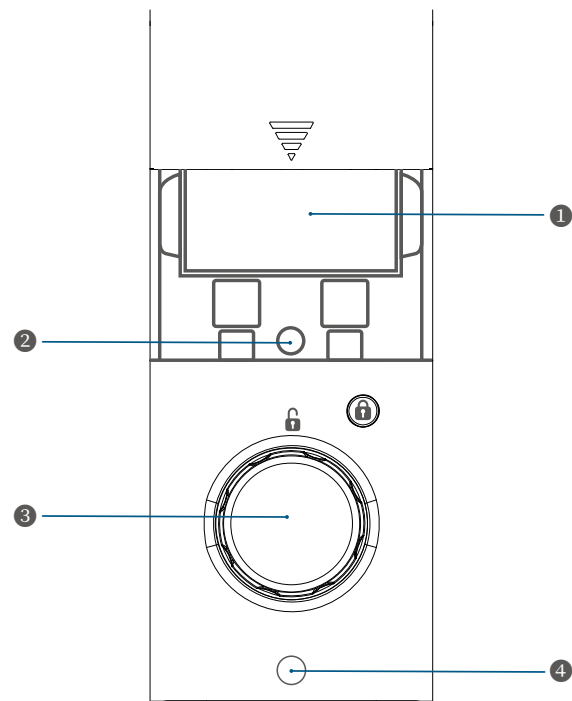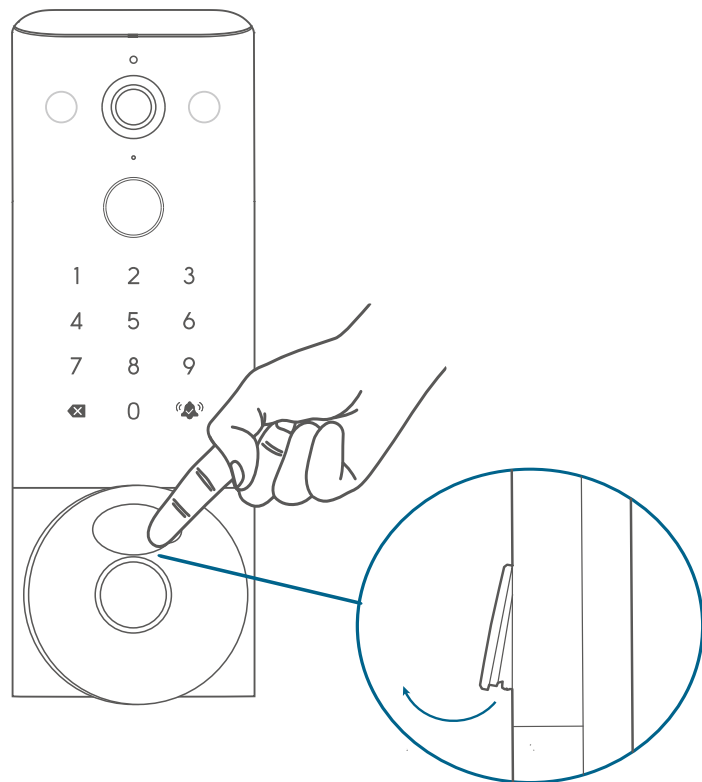


- ① Battery
- ② SYNC Button: Press and hold to pair with the doorbell chime.
- ③ Thumbturn
- ④ Screw Hole

 Wi-Fi Bridge & Doorbell Chime*

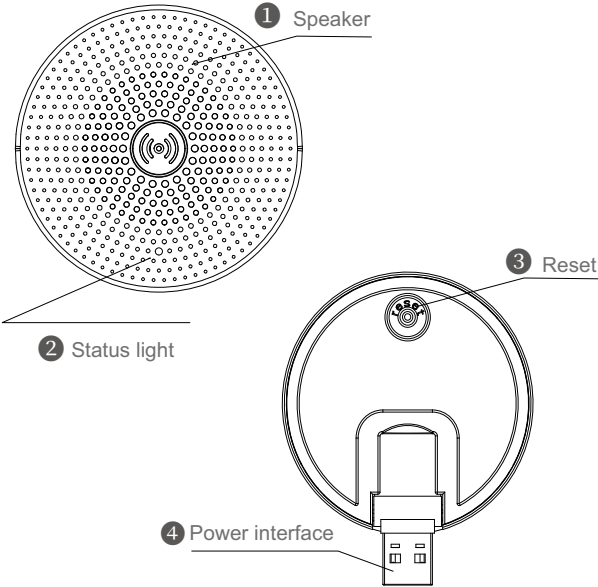

- 1 Speaker
- 2 Status light
- 3 Reset
- 4 Power interface


 
COMPATIBLE DOORS

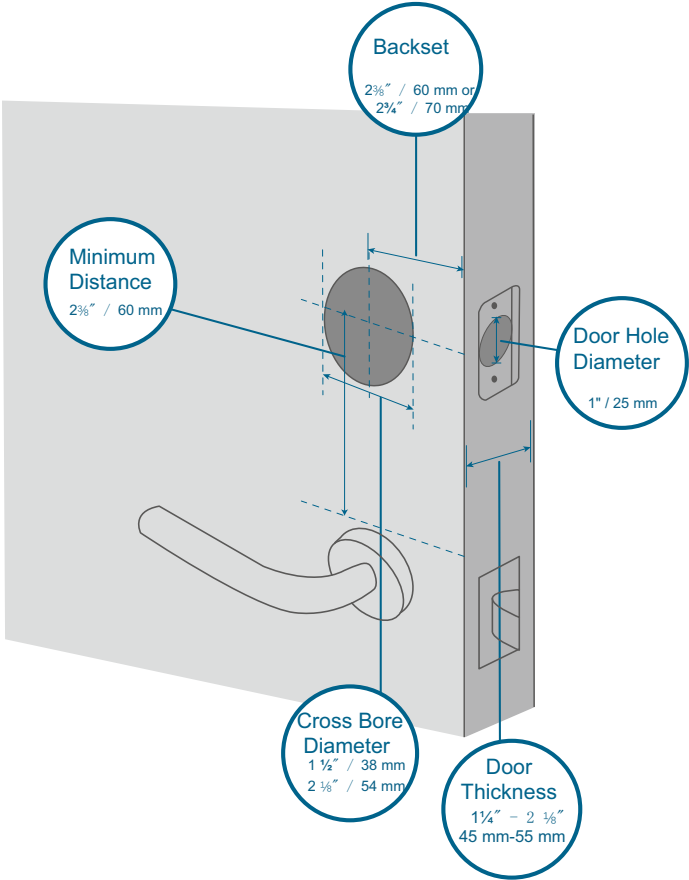



INSTALLING VIDEO SMART LOCK

What You Need

  
»Step 1. Deadbolt Installation Set

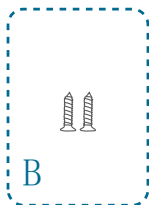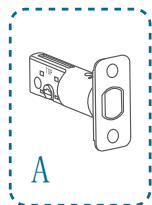







»Step 2. Strike Plate Installation Set

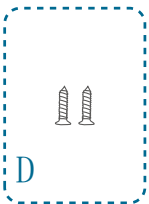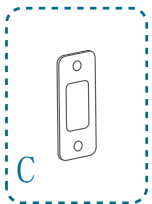  

»Step 3. Exterior Assembly


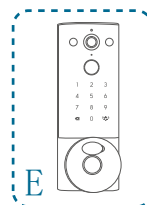 


      »Step 4. Interior Assembly Installation Set

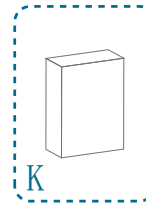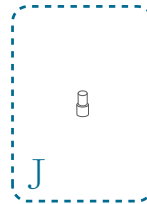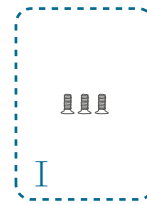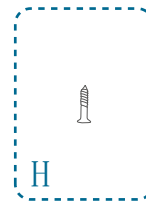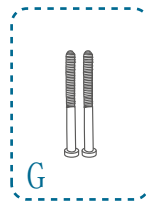
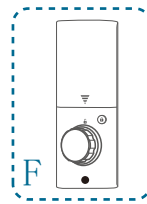


Step 1. Install Deadbolt

  
1. Check your door to see if the deadbolt requires adjustment.

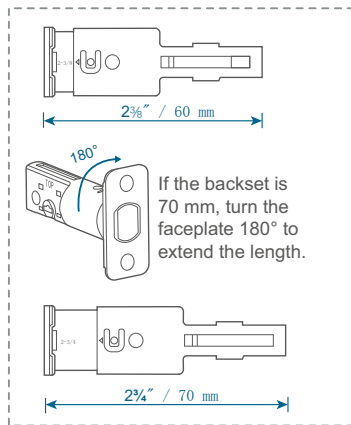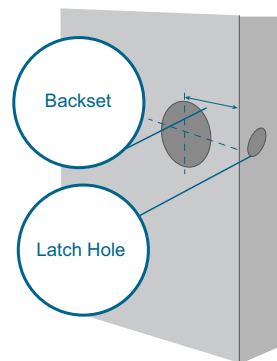

  
2. Insert and screw the deadbolt into the doorframe.

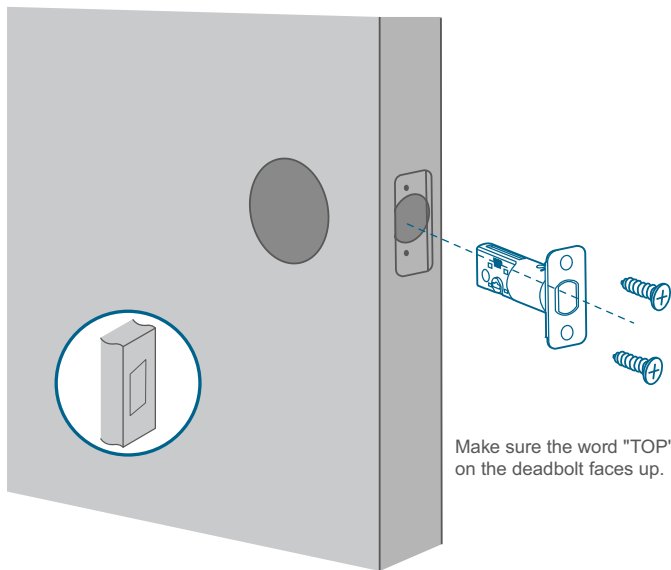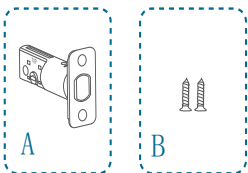

 Step 2. Install Strike Plate


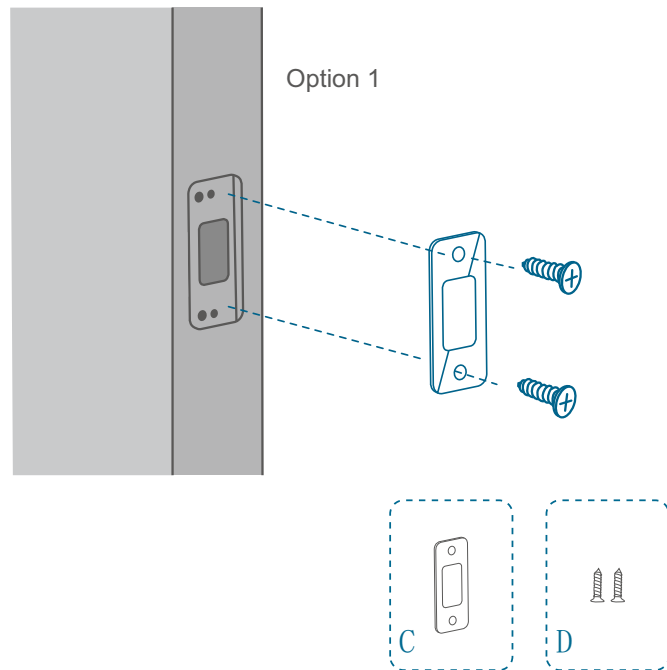


 Step 3. Install Exterior Assembly

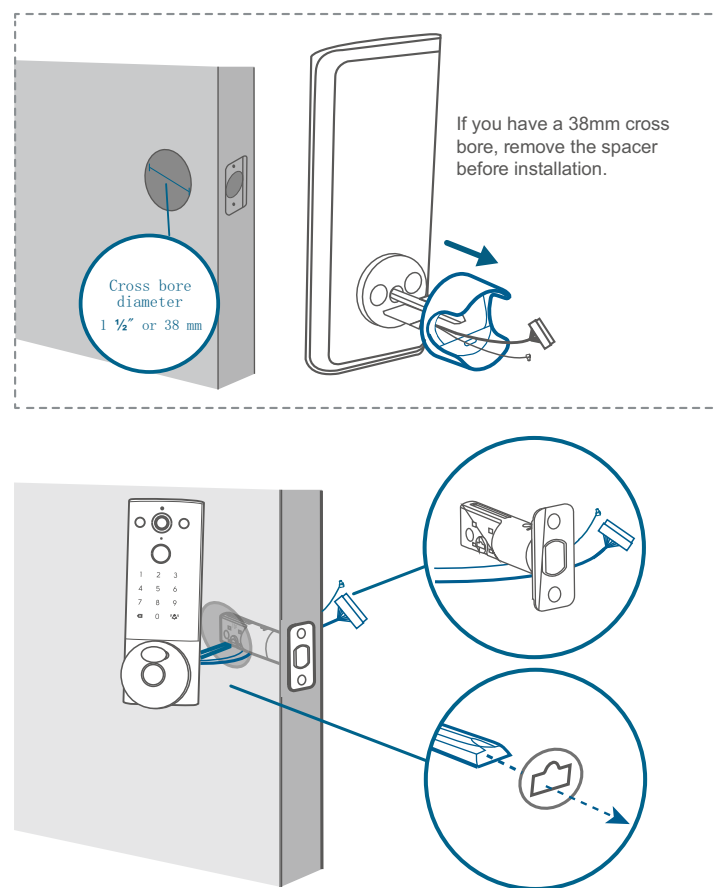


Step 4. Install Interior Assembly

  1. Detach the back cover from the interior assembly.

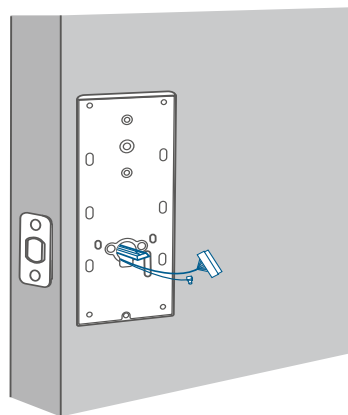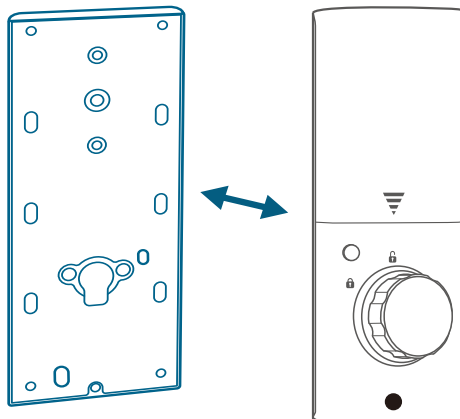


2. Run the wires through the back cover.

 
3. Secure the back cover with screws.

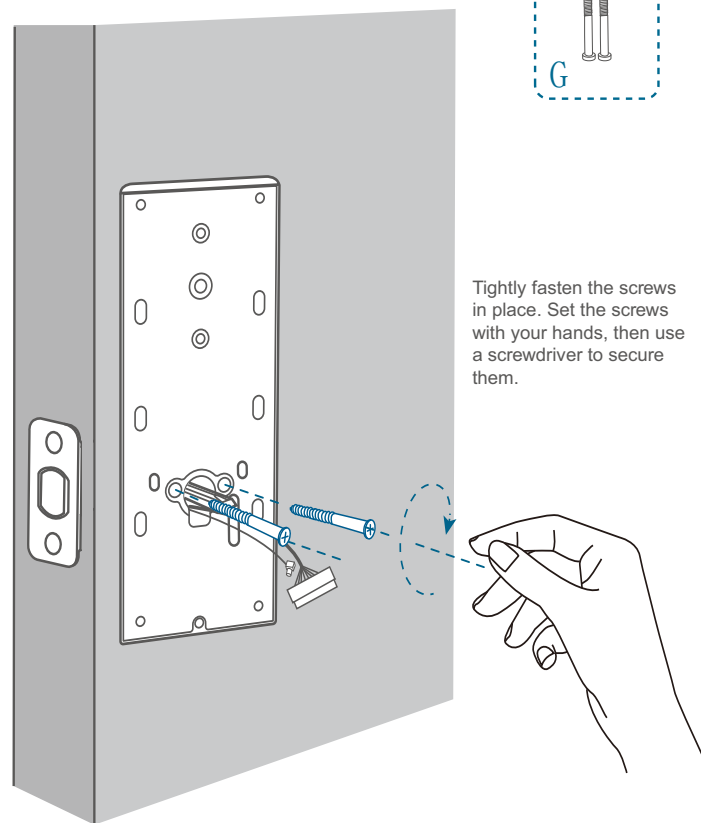


 
4. (Optional) If the back cover is not fastened tightly to the door, use the additional screw provided.

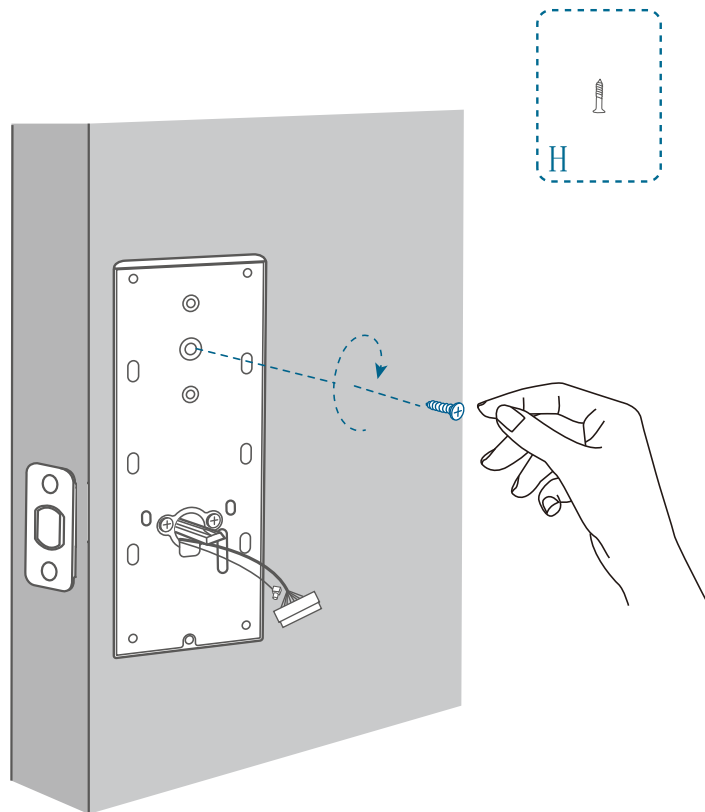

 
5. Wire to the interior assembly .

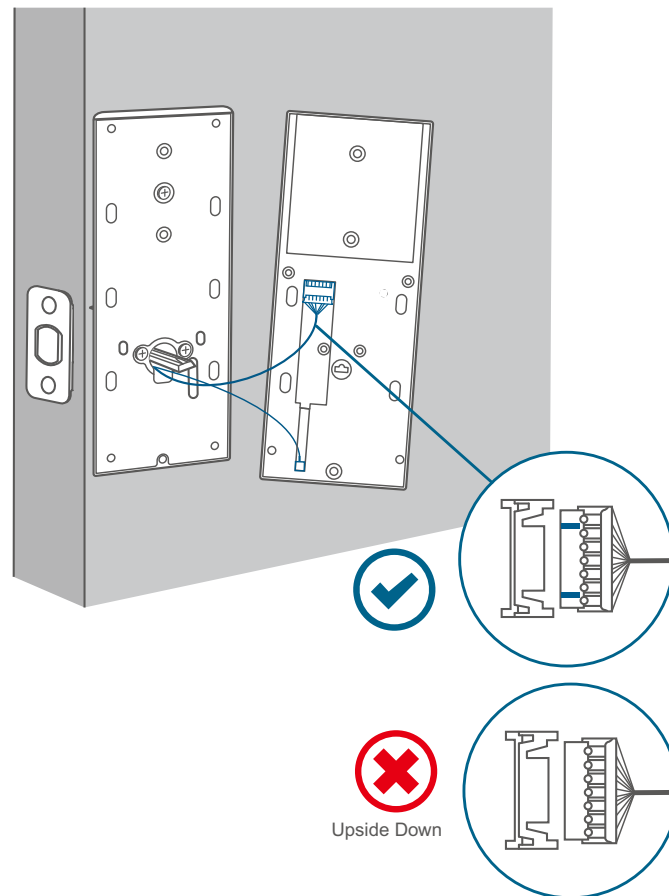


  6. Mount the interior assembly. Make sure both wires are tucked into the cabin on the back of the interior assembly.

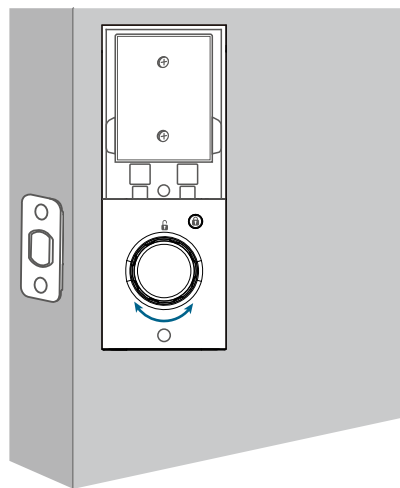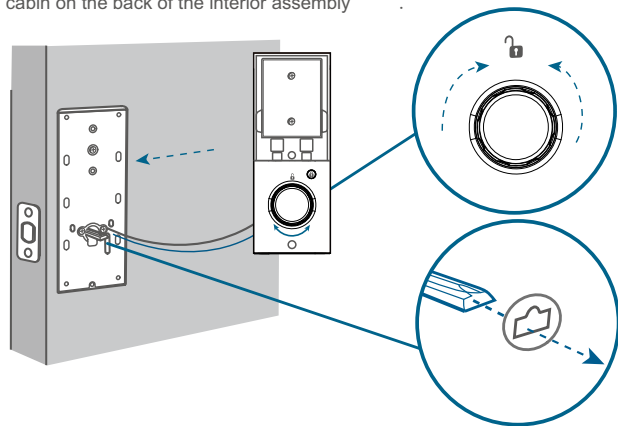


  Check if the deadbolt retracts by turning the thumbturn

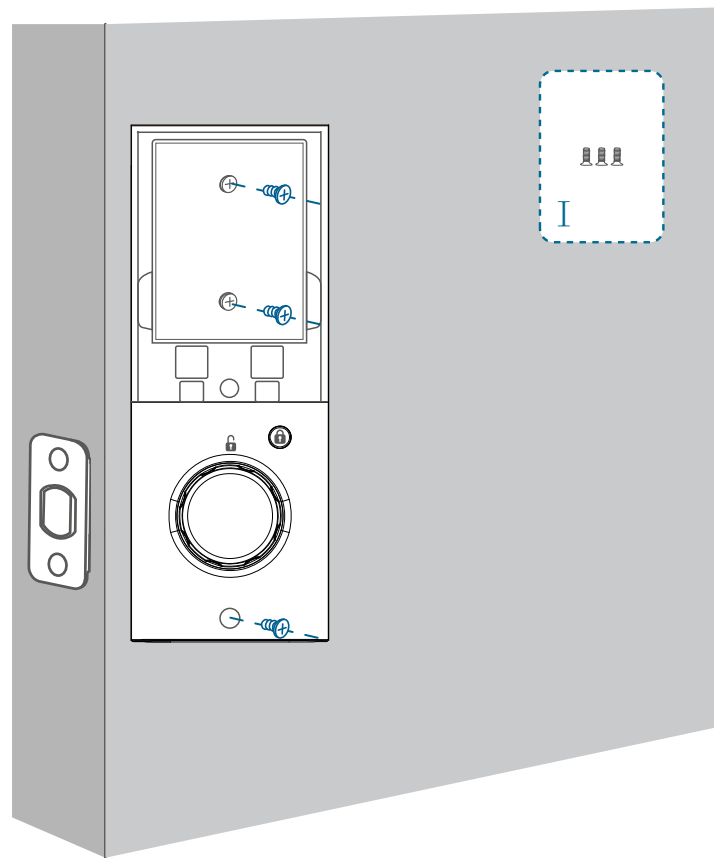

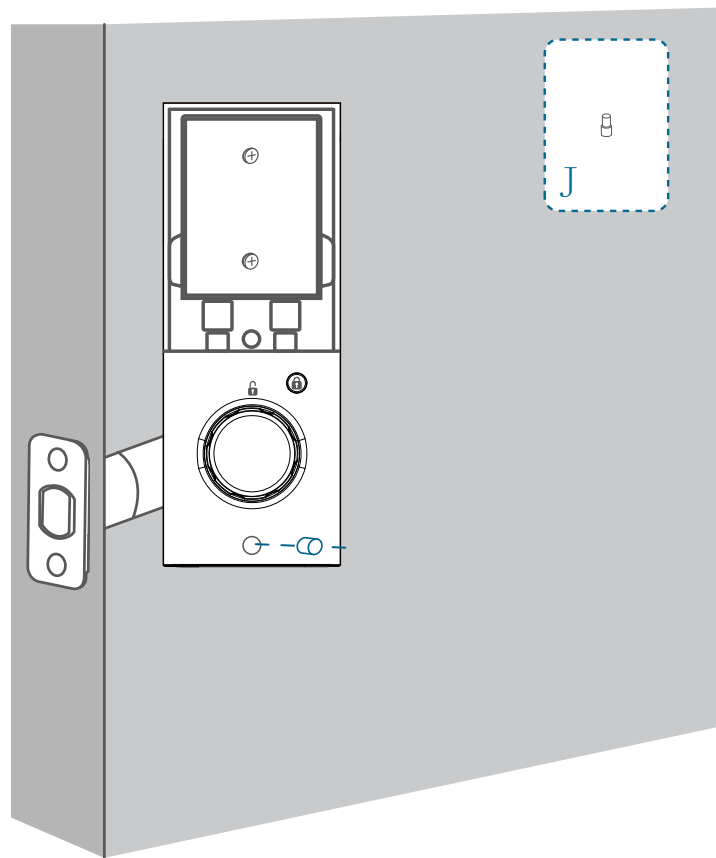


 7. Fully charge the battery before first use. It might take about 6 hours.

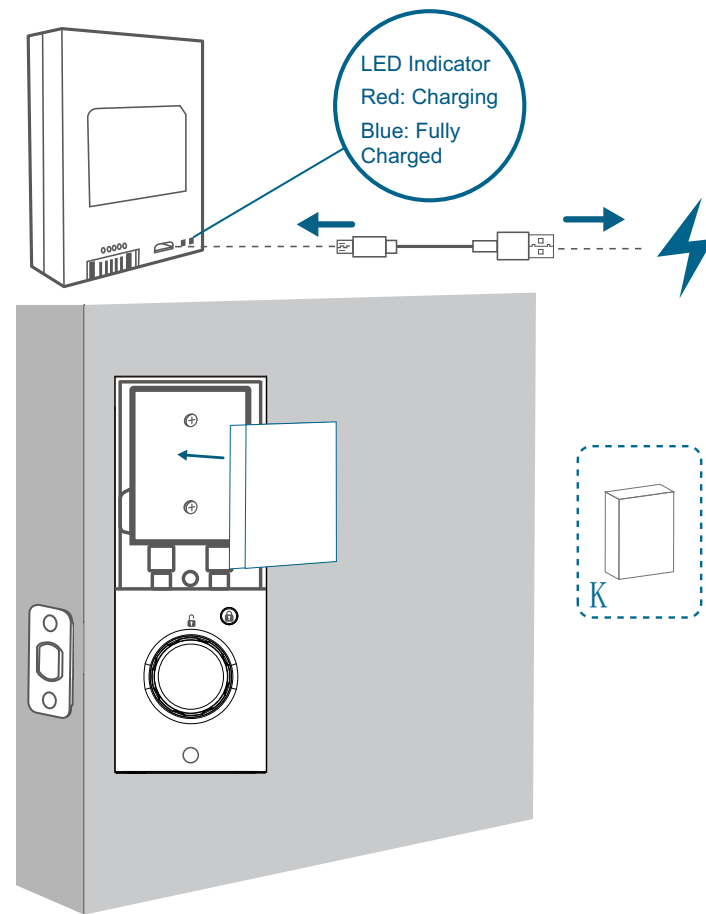


POWERING DOORBELL CHIME

 
Step 1: Supply power to your Chime and Doorbell.

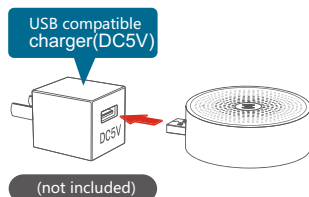

 Step 2: A short press on the RESET button on the Chime, and you will see the indicator flashes blue, indicating device is in pairing mode.

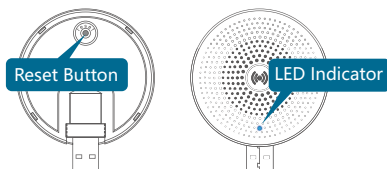

 Step 3: Press the doorbell button, and the Chime will sound to react. Pairing succeeds, and the Chime indicator will be in solid blue.

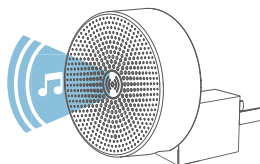

SETTING UP THE SYSTEM

1. Download and install the eufy Security app, then sign up for an account.



Download on the
App Store

GET IT ON
Google Play

2. Follow on-screen instructions to add the doorbell chime first, and then the smart lock to your device list.



1 doorbell chime can link up to 4 devices.

Make sure your Video Smart Lock battery is charged, or it may fail to be added to the eufy Security app.

6 / NOTICE

Class II equipment

Warning

- replacement of a battery with an incorrect type that can defeat a safeguard;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 **CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**
IP protection class of model T8530: IP65 for exterior assembly, IPX0 for interior assembly.

Notice (United States Of America)

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in **a particular installation**. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and

receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

The following importer is the responsible party

Company Name: POWER MOBILE LIFE, LLC

Address: 10900 NE 8th St, Ste 501, Bellevue WA 98004

Telephone: 1-800-988-7973

Notice (Australia)

Do not use the Device in the environment at too high or too low temperature, never expose the Device under strong sunshine or too wet environment.

It is recommended to supply the device in an environment with a temperature that ranges from 5 ° C to 25 ° C

When supplying, please place the device in an environment that has a normal room temperature and good ventilation.

Warning:

- replacement of a battery with an incorrect type that can defeat a safeguard;
- disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion;
- leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; and
- a battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

 **CAUTION RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

 Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

 This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.