

geminⁱ



MPA-K100

**Portable Bluetooth Karaoke Speaker
with Wireless Microphones and Party Lights**

©2026 ICAD Holdings LLC. All Rights Reserved.
Bluetooth® is a registered trademark of Bluetooth SIG Inc
Product specifications and colors may vary from photo.

Manufactured and serviced by:
ICAD Holdings LLC
458 Florida Grove Road
Perth Amboy, NJ 08861 USA
(732)587-5466
geminisound.com

INDEX

WHAT’S INCLUDED3

PRECAUTIONS 4

FEATURES.....5

PRODUCT OVERVIEW6

OPERATING INSTRUCTIONS8

TROUBLESHOOTING 11

SPECIFICATIONS..... 12

FCC COMPLIANCE STATEMENT... 13

LEGALITY & SAFETY14

WARRANTY & REPAIR..... 15

MANUAL EN ESPAÑOL.....16

WHAT’S INCLUDED

- 1 x MPA-K100 Speaker
- 2 x Wireless Microphones
- 1 x USB Charging Cable
- 1 x User Manual

PRECAUTIONS

PLEASE READ THESE INSTRUCTIONS GIVEN IN THIS MANUAL AND THOSE MARKED ON THE UNIT

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

WARNINGS

Fire and electric shock hazard

- 1 - Do not place any open flame sources, such as lighted candles, on or near the apparatus.
- 2 - Do not attempt to service the apparatus yourself.
- 3 - Opening or removing covers may expose you to dangerous voltages or other hazards and will void the manufacturer's warranty.
- 4 - To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- 5 - Lightning storms Unplug this apparatus during lightning storms.
- 6- Object and liquid entry: Never insert objects of any kind through the openings of this apparatus, as it may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Care should be taken so that objects do not fall and liquids are not spilled into the apparatus through openings in the enclosure

Battery charging

- 1 -To reduce the risk of fire or electric shock, do not expose the apparatus to rain or moisture while charging.
- 2 - The apparatus should not be exposed to dripping or splashing; and objects filled with liquids, such as vases, should not be placed on or near it while being charged.
- 3- Do not continue charging the battery if it does not reach full charge within the specified charging time. Overcharging may cause the battery to become hot, rupture, or ignite.
- 4 - Do not attempt to charge the battery in temperatures outside the range of 32°-104°F(0°-40°C).
- 5 - If you see any heat deformation or leakage, properly dispose of the battery.
- 6 - If the battery begins to leak, do not allow the liquid to come into contact with your skin or eyes. If contact has been made, wash the affected area with plenty of water and seek medical attention immediately.

FEATURES

Welcome to Gemini!

The MPA-K100 is a portable Bluetooth karaoke speaker designed for sing-alongs, family parties, backyard cookouts, and anywhere you want to bring people together with music.

Here's what makes it worth unpacking:

CLEAR, ROOM-FILLING SOUND

A 160 Watt full-range speaker delivers clear vocals and tight bass—loud enough to fill a living room or small backyard, with plenty of headroom for a sing-along.

KARAOKE-READY OUT OF THE BOX

Two wireless microphones come included. No extra gear, no setup hassle. Turn the speaker on, and the mics connect automatically—sing solo or hand one to a friend.

COLOR-CHANGING PARTY LIGHTS

Six selectable lighting modes pulse along with the music when you want party energy. Turn them off for clean playback when you just want the sound.

PLAY ANYTHING!


Stream from your phone over Bluetooth, or plug in USB, microSD, or a 1/8" aux cable. Pair two MPA-K100 units wirelessly for true left-right stereo across the room.

PLAY ANYWHERE!


The built-in rechargeable battery runs 7–8 hours with the lights on at half volume, and recharges in about 3 hours. At 4.3 lbs with a built-in carry handle, it goes wherever you do. IPX4-rated splash resistance means it can handle light rain and backyard splashes without missing a beat.*

****Please note: IPX4 splash resistance applies to the speaker only, with the rubber port cover securely in place. Not rated for use while charging or with the port cover open. Wireless microphones are not splash-resistant, do not expose to water.***

PRODUCT OVERVIEW

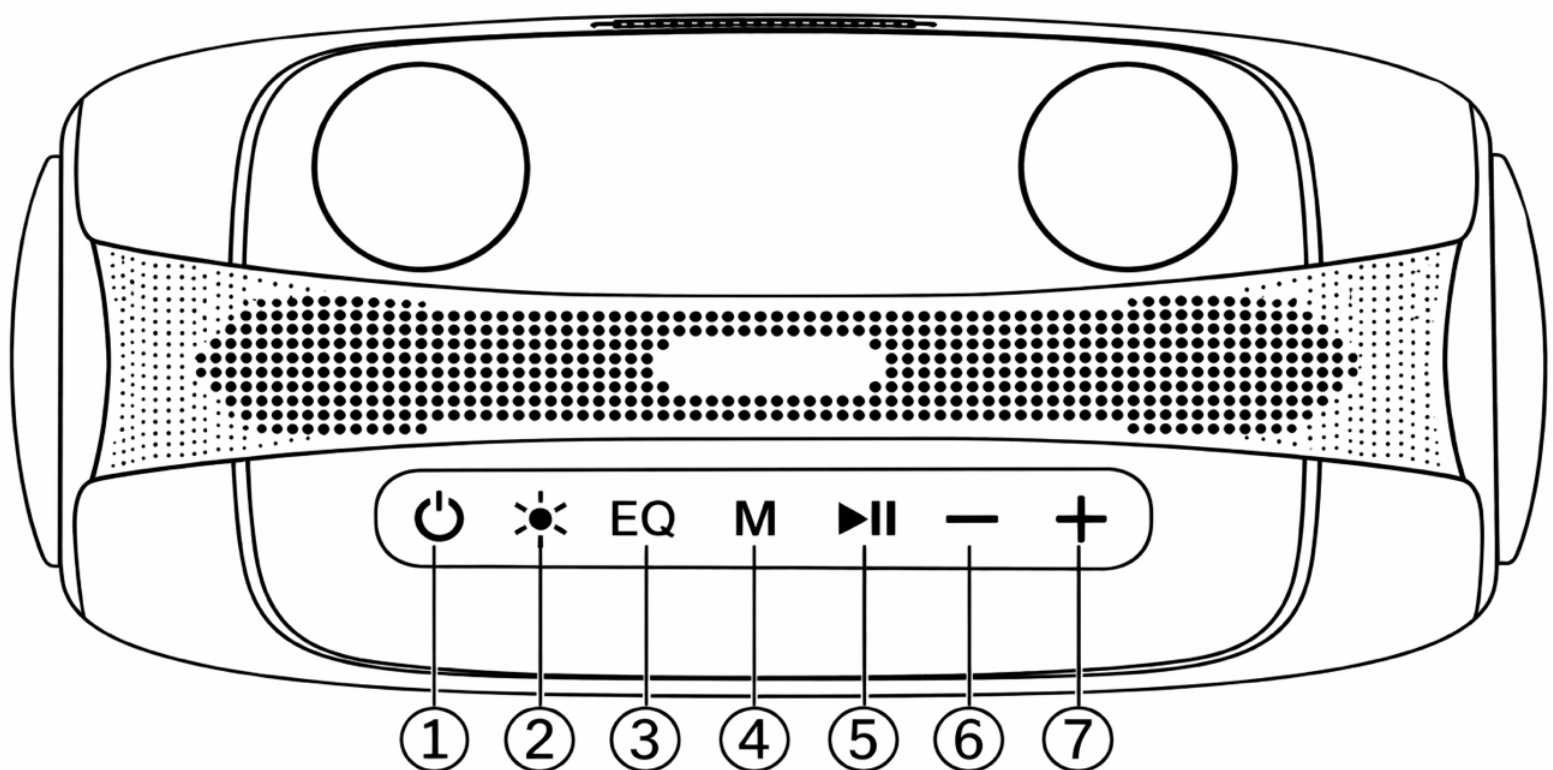

- 1. Power Button (ON/OFF):** Press and hold to turn the speaker on or off.
- 2. LED Light Button:** Press to cycle through six color-changing party light modes, or hold to turn lights off.
- 3. EQ Button:** Press to cycle through equalizer presets: Normal, Bass.
- 4. Mode Button:** Press to switch between input sources: Bluetooth, USB, microSD, and Aux.
- 5. Play/Pause Button:** Press to play or pause the current track.
- 6. Previous / Volume Down:** Press and hold to go to the previous track. Press to decrease volume.
- 7. Next / Volume Up:** Press and hold to skip to the next track. Press to increase volume.

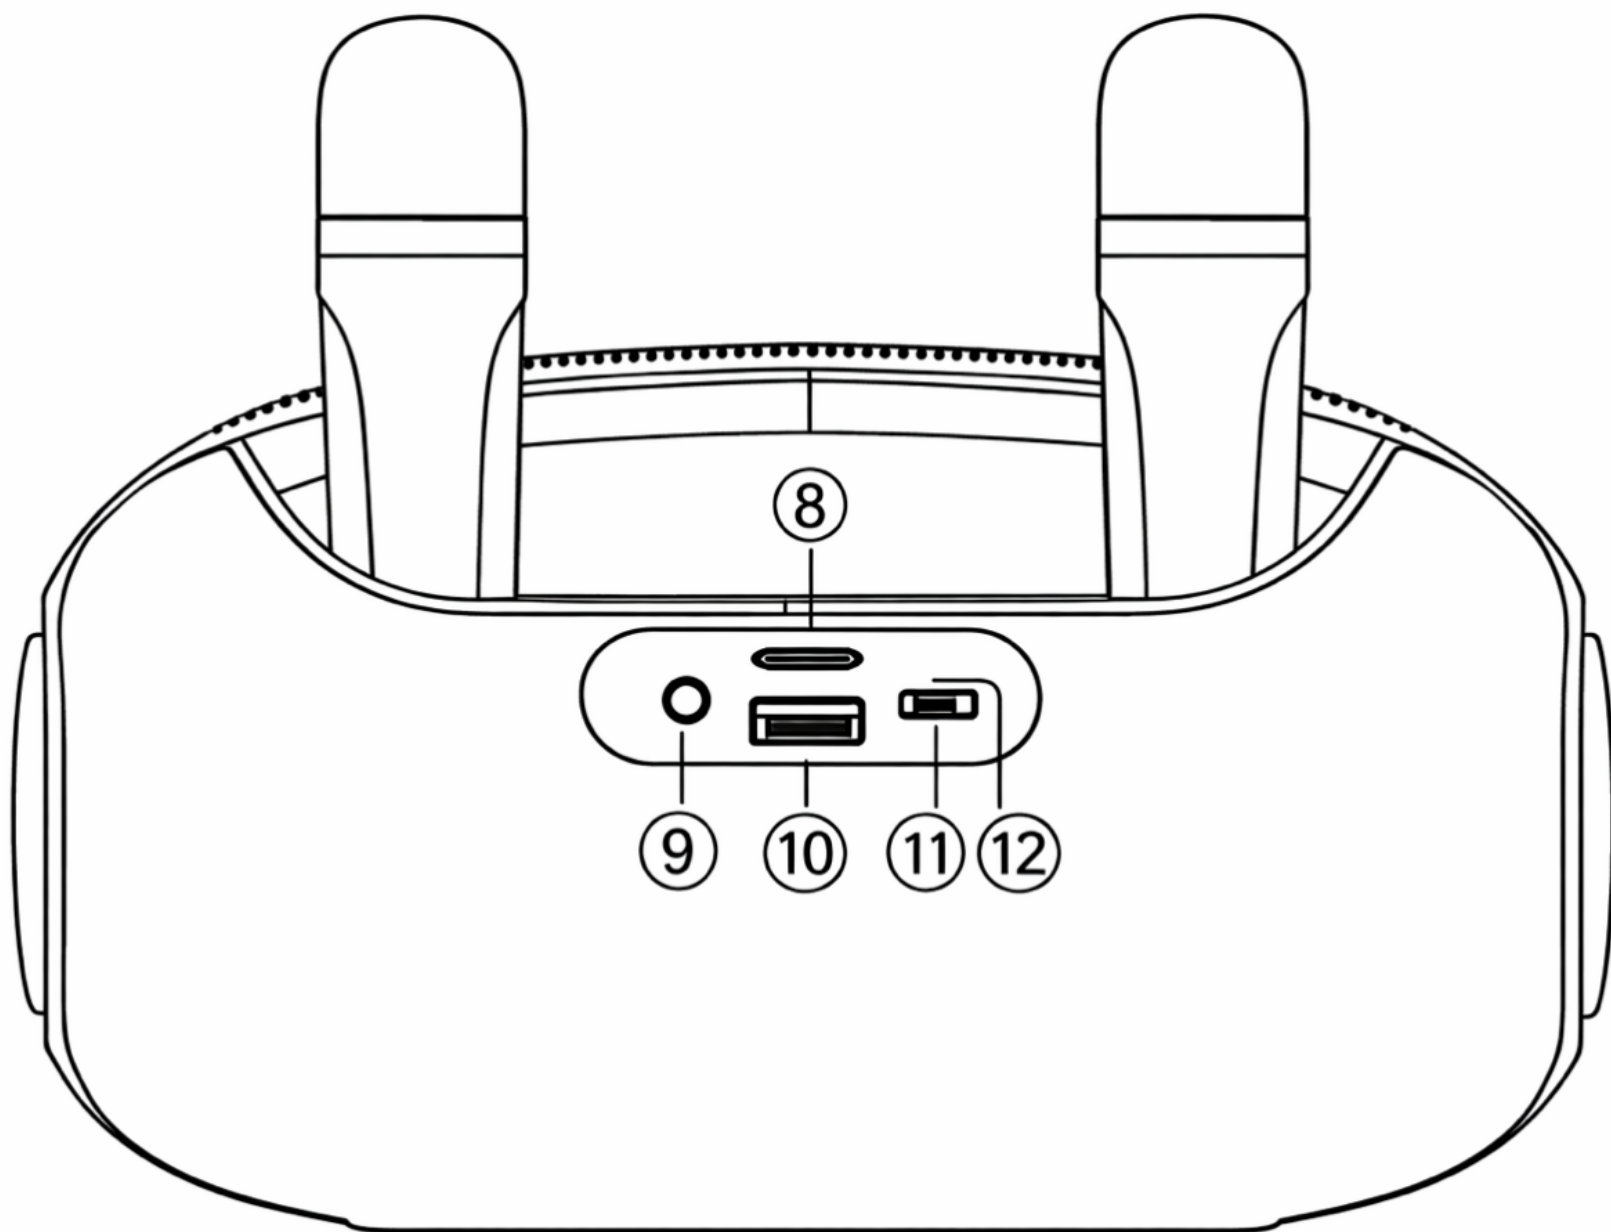

- 8. **Micro SD Card Slot:** Insert a microSD card (up to 32 GB) loaded with MP3 files.
- 9. **1/8" Aux Input:** Connect an external audio source with a standard aux cable.
- 10. **USB-A Port:** Insert a USB flash drive (up to 32 GB) loaded with MP3 files.
- 11. **USB-C Charging Port:** Connect the included charging cable to recharge the speaker.
- 12. **Charging Indicator:** Lights red while charging. Turns off when fully charged.

OPERATING INSTRUCTIONS

Bluetooth Connection

Stream music wirelessly from your phone, tablet, or laptop.

1. Press and hold the Power Button to turn on the speaker. You'll hear a startup tone.
2. The speaker enters Bluetooth pairing mode automatically on first power-up. The Bluetooth indicator will begin flashing.
3. On your phone or tablet, open Bluetooth settings and search for available devices. Select "Gemini MPA-K100" from the list.
4. Once connected, the indicator stays solid. Play music from your device—you'll hear it through the speaker.

Note:

- *Bluetooth range is approximately 33 ft (10 m). Walls and furniture may reduce range.*
- *If you can't reconnect, remove "Gemini MPA-K100" from your device's Bluetooth list and pair again from scratch.*

TWS (Wireless Stereo Pairing)

Link two MPA-K100 speakers together for true left-right stereo sound.

1. Make sure Bluetooth is turned off on your phone or tablet.
2. Turn on both MPA-K100 speakers using the Power Button.
3. On one of the two speakers, press and hold the M button. You'll hear a tone confirming the speakers are paired.
4. Activate Bluetooth on your phone and select "Gemini MPA-K100" from the device list. A beep confirms pairing is complete.

5. Music now plays in stereo across both speakers—one handles the left channel, the other handles the right.

Note:

- To unpair, press and hold M on either unit.
- Both speakers must be disconnected from all other Bluetooth devices before TWS pairing.

USB and microSD Playback

Play MP3 files directly from a USB flash drive or microSD card—no phone needed.

1. Insert a USB flash drive into the USB-A port, or a microSD card into the Micro SD Card Slot.
2. The speaker detects the media automatically and begins playback.
3. Use the Play/Pause button to pause or resume. Use Previous/Next to skip tracks. Press Previous/Next to adjust volume.

Note:

- *Supported format: MP3. Maximum card/drive size: 32 GB.*
- *Press the Mode button to switch between USB and microSD if both are inserted.*

Aux Input

Connect an external audio source using a standard 1/8" (3.5 mm) aux cable.

1. Plug one end of a 1/8" aux cable into the Aux Input on back of speaker.
2. Plug the other end into your audio source (phone, tablet, laptop, or media player).
3. Press the Mode button if needed to switch to Aux mode. Play audio from your source device.

LED Party Lights

Set the mood with built-in color-changing lights that pulse along with your music.

1. Press the LED Light Button to turn the lights on. Each press cycles through six different color modes.
2. To turn the lights off, press and hold the LED Light Button.

Note:

- *Turning the lights off can extend battery life. At half volume with lights off, you'll get the longest play time.*

Wireless Microphones

Your MPA-K100 comes with two wireless microphones for karaoke, announcements, or hosting.

1. Turn on a mic using the power switch on the mic body.
2. The microphone connects to the MPA-K100 automatically—no pairing steps needed.
3. Speak or sing into the mic. Your voice plays through the speaker along with any music.

Note:

- *Both mics can be used at the same time for duets.*
- *Each mic has its own built-in rechargeable battery (3.7V, 500 mAh). Charge them with USB-C cable.*
- *Keep the mic within 10 m (33 ft) of the speaker for best performance.*
- *The microphones are not water-resistant. Keep them dry and away from rain and splashes.*

EQ (Equalizer/Bass Boost)

Adjust the sound profile to suit your music or environment.

1. Press the EQ Button on the speaker to cycle through the available equalizer presets.
2. Each press silently switches to the next preset. The change takes effect immediately — adjust to the setting that sounds best for your content.

Presets: Normal / X Drive Bass Boost

Charging

Recharge your MPA-K100 using the included USB charging cable.

1. Turn the speaker off.
2. Connect the USB-C end of the charging cable to the USB-C Charging Port on the speaker.
3. Connect the other end to a USB power source (wall adapter, computer, or portable charger). The Charging Indicator lights red.

4. When fully charged, the Charging Indicator turns off. A full charge takes about 3 hours.

Note:

- *You can use a 5V / 2A adapter for the fastest charge time. Higher-wattage adapters will not charge faster.*
- *Charging while playing is not recommended and may extend charge time.*
- *Do not expose the speaker to rain or splashes while charging or while the USB-C port cover is open.*

TROUBLESHOOTING

Issue	Solution
Won't power on	Make sure the battery is charged. Connect the charging cable and wait a few minutes, then try again.
No sound	Check the volume level. Make sure the correct input mode is selected (Bluetooth, USB, microSD, or Aux). Try a different audio source.
Bluetooth won't connect	Make sure no other device is already connected. Remove "MPA-K100" from your device's saved Bluetooth list and pair again.
Bluetooth connected but no audio	Check volume on both the speaker and your phone. Make sure audio is playing on your device and the Mode is set to Bluetooth.
TWS pairing fails	Make sure both speakers are disconnected from all other Bluetooth devices before pairing them together.
Battery won't charge or dies quickly	Use a 5V / 2A power source. Avoid charging while playing. If the battery no longer holds a charge after extended use, contact Gemini Sound support.
Microphone not working	Make sure the microphone is powered on. Check that it's within 10 m of the speaker. Try turning the mic off and on again.
LED lights not responding	Press the LED Light Button to cycle through modes. If no lights appear, the feature may be turned off—press and hold to reset.
Audio distortion at high volume	Lower the volume slightly. Distortion at maximum volume is normal for portable speakers at close range.

Still having trouble?

Contact Gemini Sound support at (732) 346-0061 or visit geminisound.com.

SPECIFICATIONS

Active/Passive	Active
Amplifier Type	Class D
Driver Size	3” (78 mm) Full-Range
Audio Power	160 Watts RMS
Inputs	USB, microSD, 1/8” (3.5 mm) Aux
Media Sources	Bluetooth, USB, microSD, Aux
Bluetooth	Bluetooth 5.4
Bluetooth Range	10 m (33 ft)
TWS	Yes
Wireless Microphones	2 included
Frequency Response	100 Hz – 18 kHz
Max SPL @ 1 m	80 dB
Party Lighting	6 Color-Changing Modes (RGB)
IP Rating	IPX4
Construction Material	ABS + Fabric
Speaker Battery	Rechargeable Li-ion, 7.4V, 2400 mAh, 17.76 Wh
Microphone Battery	Rechargeable Li-ion, 3.7V, 500 mAh, 1.85 Wh (each)
Charge Time	~3 Hours
Play Time	Up to 7–8 Hours (50% vol, LED on); ~3.5 Hours (full vol)
Charging Input	5V / 2A (USB-C)
Unit Dimensions (H x W x L)	7.6 x 5.6 x 10.4 in (192 x 142 x 265 mm)
Unit Weight	4.3 lbs (1.95 kg)
FCC ID	2BRR7-MPAK100

FCC COMPLIANCE STATEMENT

Responsible Party Name:

ICAD Holdings LLC

Company address:

458 Florida Grove Road

Perth Amboy, NJ, 08861 USA

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. The operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For Mountable Outdoor Bluetooth Speakers this equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC ID: 2BRR7-MPAK100

LEGALITY & SAFETY

The device is not intended for use by people (including children) with reduced physical, sensory or mental capacity. People who have not read the manual, unless they have received an explanation by someone responsible for their safety, should not use this unit. Children should be monitored to ensure that they do not play with the device. The device should always be readily accessible. The device should not be exposed to water. No objects filled with liquids, such as vases, shall be placed on the device. Always leave a minimum distance of 10 cm around the unit to ensure sufficient ventilation. Open flame sources, such as candles, should not be placed on top of the device. The device is intended for use only in a temperate climate. At full volume, prolonged listening may damage your hearing and cause temporary or permanent deafness, hearing drone, tinnitus, or hyperacusis. Listening at high volume is not recommended. One hour per day is not recommended either. Danger of explosion if battery is incorrectly replaced or not replaced by the same type or equivalent. The battery should not be exposed to excessive heat such as sunshine or fire. Different types of batteries, or new and used batteries, should not be mixed. The battery must be installed according to its polarity. If the battery is worn, it must be removed from the product. The battery must be disposed of safely. Always use collection bins to protect the environment. The battery can only be replaced by the maker of this product, the sales department, or a qualified person. Switch the device off where the use of the device is not allowed or where there is a risk of causing interference or danger - for examples: on an aircraft, or near medical equipment, fuel, chemicals or blasting sites. Check the current laws and regulations regarding the use of this device in the areas where you drive. Do not handle the device when driving. Concentrate fully on driving. All wireless devices are susceptible to interference which may affect their performance. All our devices conform to international/national standards and regulations, and we aim to limit user exposure to electromagnetic fields. These standards and regulations were adopted after the completion of extensive scientific research. This research established no link between the use of the mobile headset and any adverse effects on health if the device is used in accordance with standard practices. Only qualified people are authorized to install or repair this product. Only use batteries, chargers and other accessories which are compatible with this equipment. Do not connect incompatible products. This equipment is not waterproof. Keep it dry. Keep your device in a safe place, out of the reach of young children. The device contains small parts which may present a choking hazard to kids

WARRANTY & REPAIR

A. ICAD Holdings LLC guarantees its products to be free from defects in materials and workmanship for one (1) year from the original purchase date. Exceptions: Laser assemblies on CD Players, batteries, cartridges, and crossfaders are covered for 90 days.

B. This limited warranty does not cover damage or failure caused by abuse, misuse, abnormal use, faulty installation, improper maintenance or any repairs other than those provided by an authorized Gemini Service Center.

C. There are no obligations of liability on the part of ICAD Holdings LLC for consequential damages arising out of or in connection with the use or performance of the product or other indirect damages with respect to loss of property, revenues, of profit, or costs of removal, installation, or reinstallation.

All implied warranties for ICAD Holdings LLC, including implied warranties for fitness, are limited in duration to one (1) year from the original date of purchase, unless otherwise mandated by local statutes.

MANUAL EN ESPAÑOL

INTRODUCCIÓN

El MPA-K100 es un altavoz portátil Bluetooth para karaoke, diseñado para sing-alongs, fiestas familiares, asados al aire libre y cualquier lugar donde quieras reunir a la gente con música.

SONIDO CLARO QUE LLENA EL AMBIENTE

Un altavoz de rango completo de 160W ofrece voces nítidas y graves definidos, con potencia suficiente para llenar una sala o un patio pequeño.

LISTO PARA KARAOKE DESDE EL PRIMER MOMENTO

Se incluyen dos micrófonos inalámbricos. Sin accesorios adicionales ni configuración complicada. Enciende el altavoz y los micrófonos se conectan automáticamente.

LUCES DE FIESTA A TODO COLOR

Seis modos de iluminación pulsantes se sincronizan con la música para crear ambiente. Apágalas cuando solo quieras el sonido.

REPRODUCE DESDE CUALQUIER FUENTE


Transmite desde tu teléfono por Bluetooth, o conecta por USB, microSD o cable auxiliar de 1/8". Empareja dos unidades MPA-K100 para estéreo izquierda-derecha verdadero.

POTENCIA PORTÁTIL


La batería recargable integrada ofrece 7-8 horas de reproducción con las luces encendidas a la mitad del volumen, y se recarga en aproximadamente 3 horas. Con 1,95 kg y asa integrada, te acompaña a donde vayas. La resistencia a salpicaduras con clasificación IPX4 le permite soportar lluvia ligera y salpicaduras al aire libre sin perder el ritmo.*

****Nota: La resistencia a salpicaduras IPX4 se aplica solo al altavoz, con la tapa de goma del puerto firmemente colocada. No está clasificada para uso durante la carga ni con la tapa del puerto abierta. Los micrófonos inalámbricos no son resistentes a las salpicaduras; no los expongas al agua.***

DESCRIPCIÓN DEL PRODUCTO

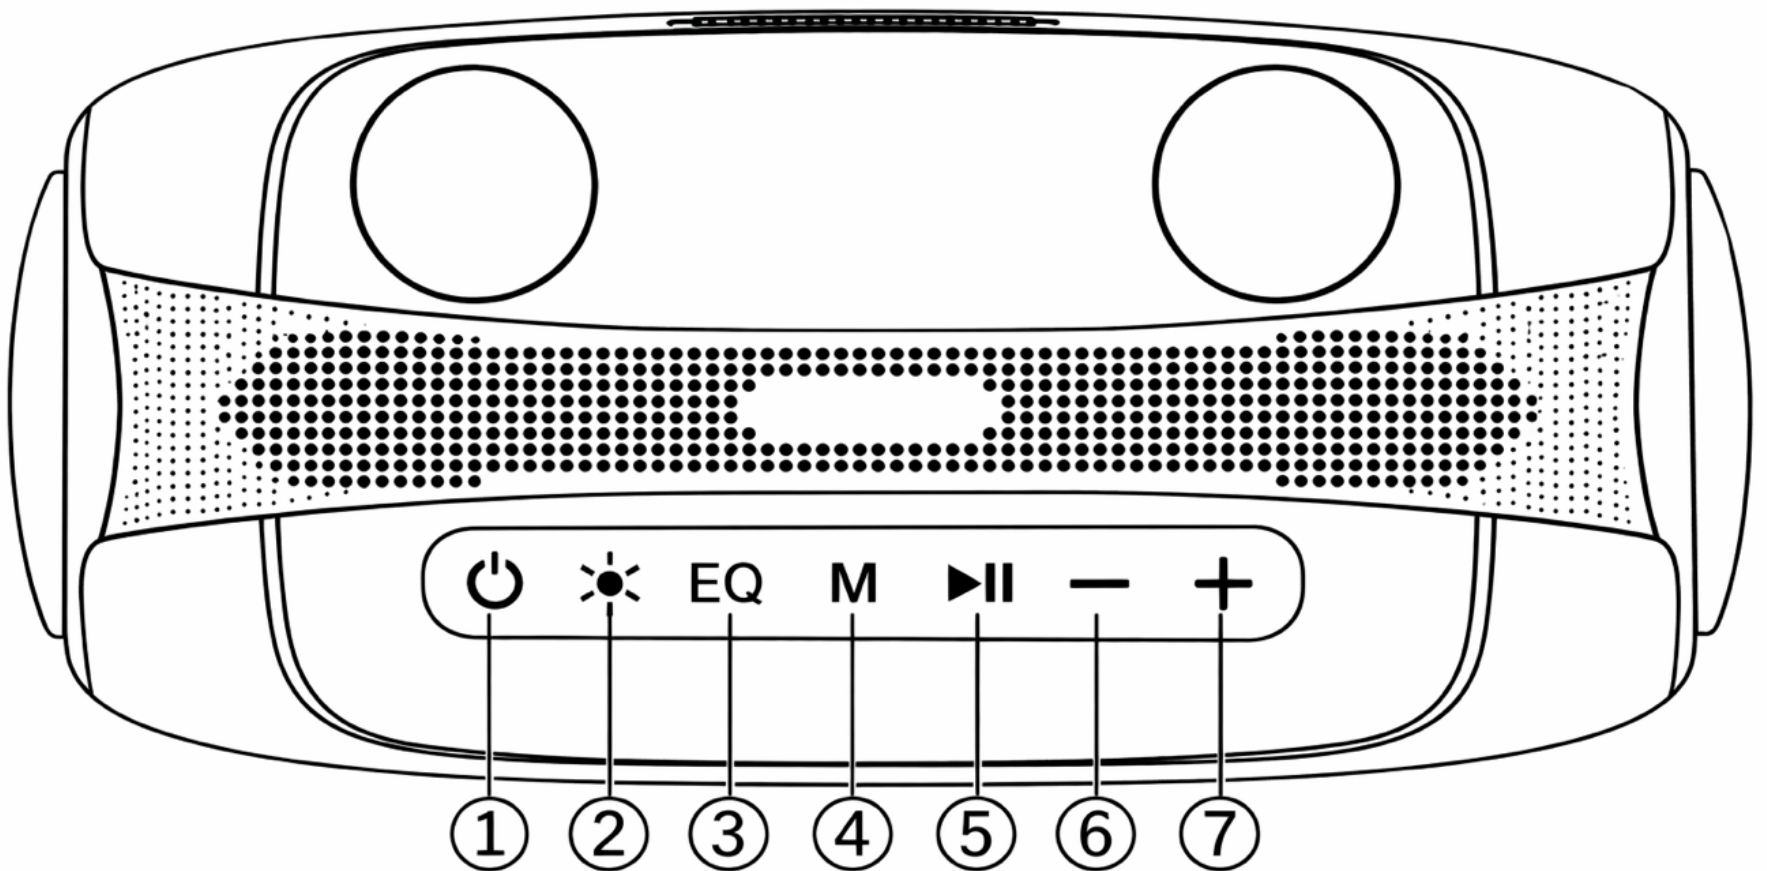

1. **Botón de encendido (ON/OFF):** Mantén pulsado para encender o apagar el altavoz.
2. **Botón de luces LED:** Pulsa para cambiar entre los seis modos de iluminación; mantén pulsado para apagar las luces.
3. **Botón EQ:** Pulsa para cambiar entre los preajustes del ecualizador: Normal, Graves.
4. **Botón de modo:** Pulsa para cambiar entre fuentes de entrada: Bluetooth, USB, microSD y Aux.
5. **Botón de reproducir/pausar:** Pulsa para reproducir o pausar la pista actual.
6. **Anterior / Bajar volumen:** Mantén pulsado para ir a la pista anterior. Pulsa para bajar el volumen.
7. **Siguiente / Subir volumen:** Mantén pulsado para pasar a la siguiente pista. Pulsa para subir el volumen.

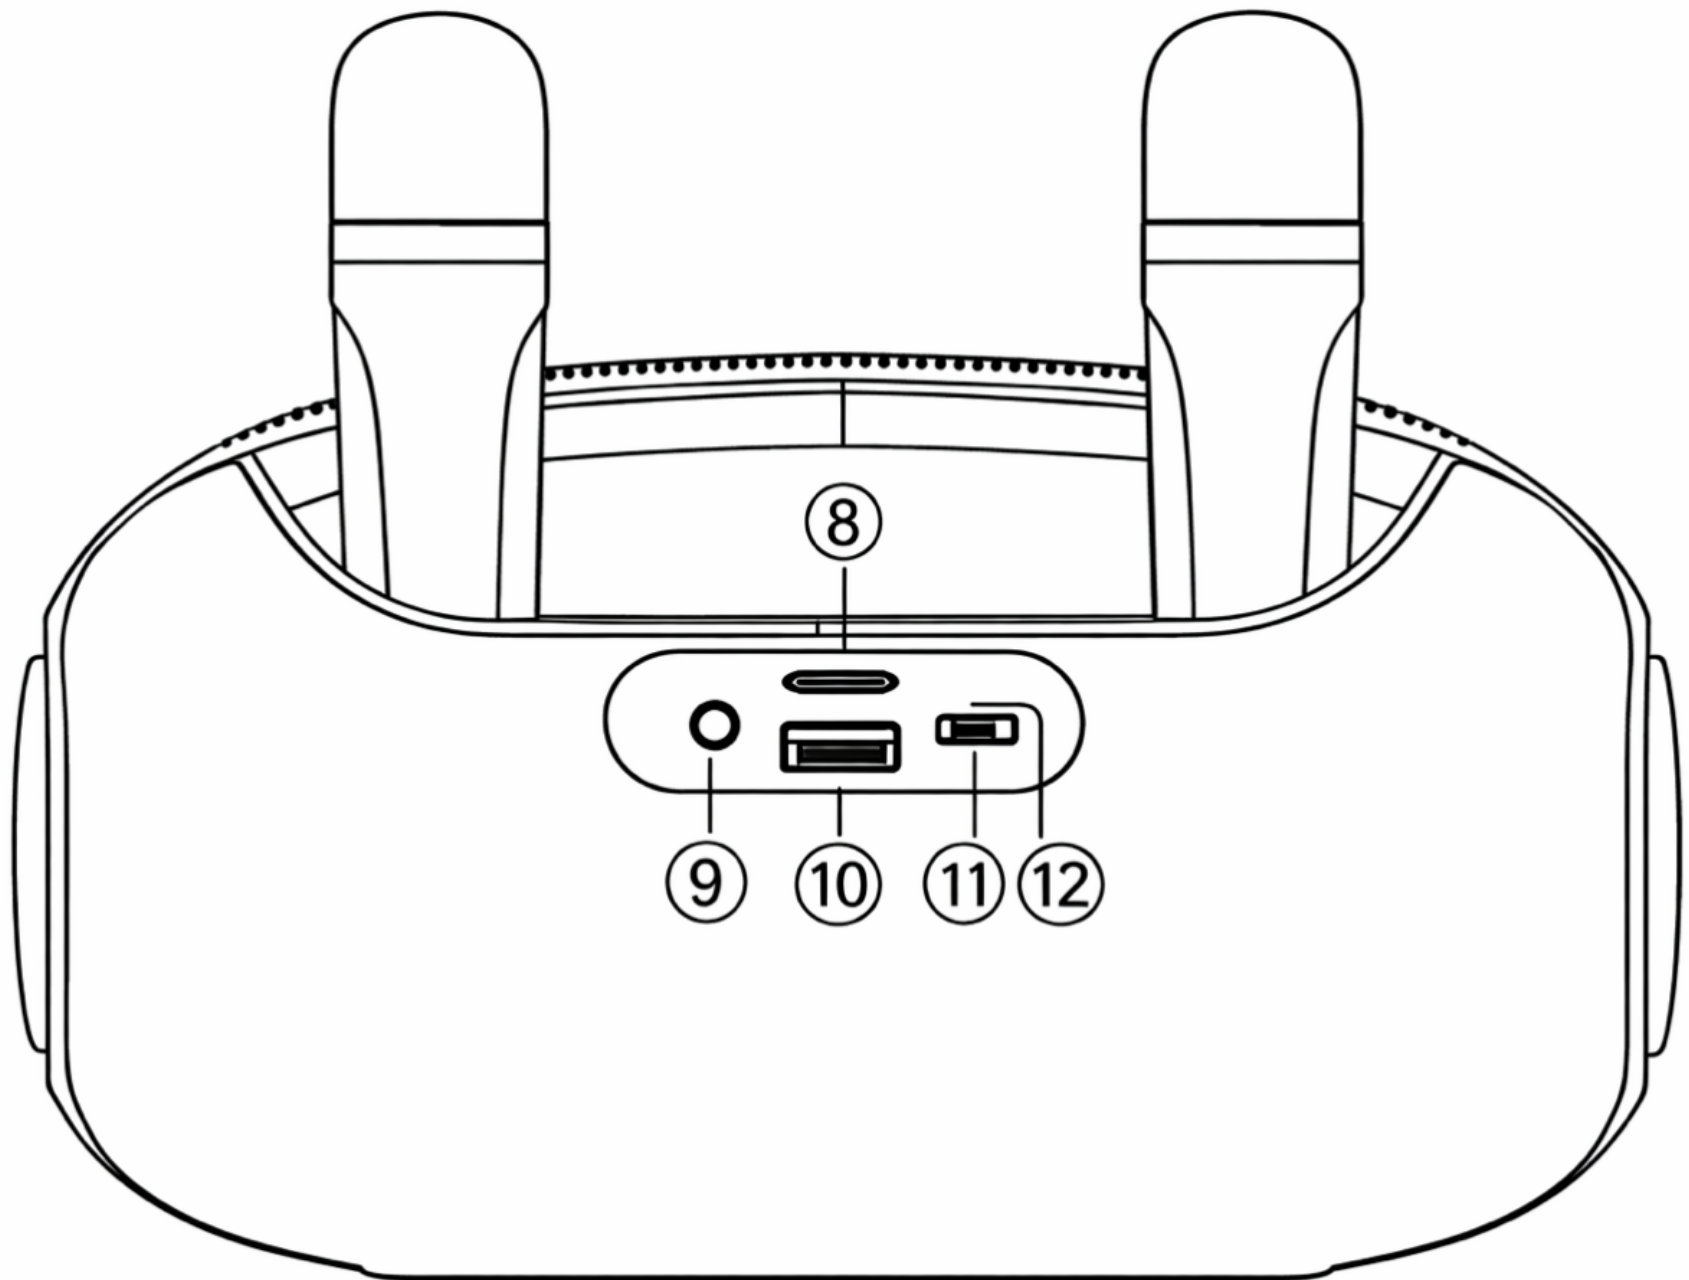

- 8. **Ranura para tarjeta microSD:** Inserta una tarjeta microSD (hasta 32 GB) con archivos MP3.
- 9. **Entrada Aux de 1/8":** Conecta una fuente de audio externa con un cable auxiliar estándar.
- 10. **Puerto USB-A:** Inserta una memoria USB (hasta 32 GB) con archivos MP3.
- 11. **Puerto de carga USB-C:** Conecta el cable de carga incluido para recargar el altavoz.
- 12. **Indicador de carga:** Se ilumina en rojo durante la carga. Se apaga cuando la carga es completa.

INSTRUCCIONES DE USO

Conexión Bluetooth

Transmite música de forma inalámbrica desde tu teléfono, tableta u ordenador portátil.

1. Mantén pulsado el botón de encendido para encender el altavoz. Escucharás un tono de inicio.
2. El altavoz entra automáticamente en modo de emparejamiento Bluetooth al encenderse por primera vez. El indicador Bluetooth comenzará a parpadear.
3. En tu teléfono o tableta, abre los ajustes de Bluetooth y busca dispositivos disponibles. Selecciona “Gemini MPA-K100” de la lista.
4. Una vez conectado, el indicador permanece fijo. Reproduce música desde tu dispositivo.

Nota:

- *El alcance Bluetooth es de aproximadamente 10 m (33 ft). Las paredes y los muebles pueden reducir el alcance.*
- *Si no puedes volver a conectar, elimina “Gemini MPA-K100” de la lista Bluetooth de tu dispositivo y empareja de nuevo.*

TWS (Emparejamiento estéreo inalámbrico)

Conecta dos altavoces MPA-K100 para obtener sonido estéreo izquierda-derecha real.

1. Asegúrate de que el Bluetooth esté apagado en tu teléfono o tableta.
2. Enciende ambos altavoces MPA-K100 con el botón de encendido.
3. En uno de los dos altavoces, mantén pulsado el botón M. Escucharás un tono que confirma el emparejamiento.
4. Activa el Bluetooth en tu teléfono y selecciona “*Gemini MPA-K100*” de la lista. Un pitido confirma que el emparejamiento se ha completado.
5. La música se reproduce en estéreo en ambos altavoces: uno gestiona el canal izquierdo y el otro el derecho.

Reproducción por USB y microSD

Reproduce archivos MP3 directamente desde una memoria USB o tarjeta microSD, sin necesidad de teléfono.

1. Inserta una memoria USB en el puerto USB-A o una tarjeta microSD en la ranura correspondiente.
2. El altavoz detecta el soporte automáticamente e inicia la reproducción.
3. Usa el botón de reproducir/pausar para pausar o reanudar. Usa Anterior/Siguiente para cambiar pistas. Pulsa Anterior/Siguiente para ajustar el volumen.

Nota:

- *Formato compatible: MP3. Tamaño máximo de tarjeta/memoria: 32 GB.*
- *Pulsa el botón de modo para cambiar entre USB y microSD si ambos están insertados.*

Entrada auxiliar

Conecta una fuente de audio externa mediante un cable auxiliar estándar de 1/8" (3,5 mm).

1. Conecta un extremo del cable auxiliar a la entrada Aux del altavoz.
2. Conecta el otro extremo a tu fuente de audio (teléfono, tableta, portátil o reproductor multimedia).
3. Pulsa el botón de modo si es necesario para cambiar al modo Aux. Reproduce audio desde tu dispositivo.

Luces de fiesta LED

Crea el ambiente con luces de colores integradas que parpadean al ritmo de la música.

1. Pulsa el botón de luces LED para encenderlas. Cada pulsación cambia entre seis modos de color.
2. Para apagar las luces, mantén pulsado el botón de luces LED.

Nota: Apagar las luces puede prolongar la duración de la batería. Con las luces apagadas a la mitad del volumen obtendrás la mayor duración de reproducción.

Micrófonos inalámbricos

Tu MPA-K100 incluye dos micrófonos inalámbricos para karaoke, anuncios o presentaciones.

1. Enciende un micrófono con el interruptor de encendido del cuerpo del micrófono.
2. El micrófono se conecta al MPA-K100 automáticamente, sin necesidad de emparejamiento.
3. Habla o canta por el micrófono. Tu voz se reproduce a través del altavoz junto con la música.

Nota:

- *Ambos micrófonos pueden usarse al mismo tiempo para dúos.*
- *Cada micrófono tiene su propia batería recargable integrada (3,7 V, 500 mAh). Cárgalos con un cable USB-C.*
- *Mantén el micrófono a menos de 10 m (33 ft) del altavoz para un rendimiento óptimo.*
- *Los micrófonos inalámbricos no son resistentes al agua. Mantenlos secos y alejados de la lluvia y las salpicaduras.*

EQ (Ecualizador)

Ajusta el perfil de sonido según tu música o entorno.

1. Pulsa el botón EQ del altavoz para cambiar entre los preajustes disponibles del ecualizador.
2. Cada pulsación selecciona el siguiente preajuste. Escucha y elige el que mejor suene para tu contenido.

Preajustes: Normal, Graves.

Carga

Recarga tu MPA-K100 con el cable USB de carga incluido.

1. Apaga el altavoz.
2. Conecta el extremo USB-C del cable de carga al puerto de carga USB-C del altavoz.
3. Conecta el otro extremo a una fuente de alimentación USB (adaptador de pared, ordenador o cargador portátil). El indicador de carga se ilumina en rojo.
4. Cuando esté completamente cargado, el indicador de carga se apaga. La carga completa tarda aproximadamente 3 horas.

Nota:

- *Puedes usar un adaptador de 5V / 2A para el tiempo de carga más rápido. Los adaptadores de mayor potencia no cargan más rápido.*
- *No se recomienda cargar mientras se reproduce, ya que puede prolongar el tiempo de carga.*
- *No expongas el altavoz a la lluvia ni a salpicaduras durante la carga ni con la tapa del puerto USB-C abierta.*

ESPECIFICACIONES

Activo/Pasivo	Activo
Tipo de amplificador	Clase D
Tamaño del altavoz	3” (78 mm) rango completo
Potencia	160W
Entradas	USB, microSD, Aux 1/8” (3,5 mm)
Fuentes de reproducción	Bluetooth, USB, microSD, Aux
Bluetooth	Bluetooth 5.4
Alcance Bluetooth	10 m (33 ft)
TWS	Sí
Micrófonos inalámbricos	2 incluidos
Respuesta en frecuencia	100 Hz – 18 kHz
SPL máx. @ 1 m	80 dB
Iluminación de fiesta	6 modos de cambio de color (RGB)
Clasificación IP	IPX4
Material de construcción	ABS + tela
Batería del altavoz	Li-ion recargable, 7,4 V, 2400 mAh, 17,76 Wh
Batería del micrófono	Li-ion recargable, 3,7 V, 500 mAh, 1,85 Wh (c/u)
Tiempo de carga	~3 horas
Duración de reproducción	Hasta 7-8 h (50% vol., LED encendido); ~3,5 h (vol. máx.)
Entrada de carga	5V / 2A (USB-C)
Dimensiones (Al x An x L)	192 x 142 x 265 mm (7,6 x 5,6 x 10,4 in)
Peso de la unidad	1,95 kg (4,3 lbs)
FCC ID	2BRR7-MPAK100

geminini[®]

At Gemini, our highest priority is making your experience unforgettable. Need help with setting up, troubleshooting, or looking for some tips? We're here for you, Monday through Friday 9AM-5PM EST

WELCOME TO THE GEMINI FAMILY!



hello@geminisound.com



1-844-GEMINI9



www.geminisound.com



@GeminiSoundHQ