


说明书

二折页 (风琴折)

尺寸:168*118.8mm

黑色虚线是折痕线，黑色虚线不要印出来

Pairing

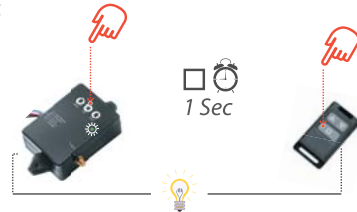

REMOTE CONTROL AND CONTROLLER PAIRING OPERATION:

1. Short press the pairing button on the controller; the pairing indicator lamp (green light) will start flashing. Then, short press the pairing button on the remote control. The controller's pairing indicator lamp will change from flashing to steady, indicating successful pairing.
2. If the remote control needs to be replaced and re-paired, long press the pairing button on the controller for 3 seconds until the pairing indicator lamp turns off. Then, repeat the pairing operation as described in Step 1.

Contents



Operating Instructions

Wireless Dump Trailer Remote Controller



Please read all operating instructions before installing and operating the system.

Keep the manual for future reference.


Parameter

Operating at a 915 MHz remote-control frequency, with an effective control range exceeding 30 meters.


Product Information

TX	
Operating Voltage	DC12V
Transmission Frequency	915MHz
Battery Type	12V27A

RX (12V Voltage Version)	
Operating Voltage	DC10-16V
Receiving Frequency	915MHz
Maximum Load Current	Maximum 10A per Output Line
Waterproof Rating	IP67

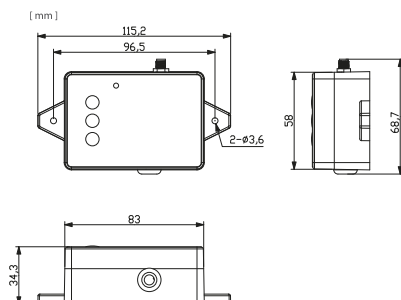

Installation

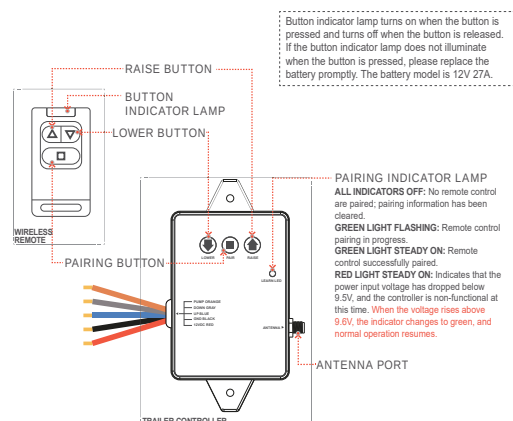

WIRING FUNCTION DESCRIPTION:

- ORANGE WIRE: Hydraulic pump switch wire. When the controller's "↑" and "↓" or the remote control's "▲" and "▼" are pressed, power is output; releasing the buttons cuts off the power.
- GRAY WIRE: Hydraulic pump lowering wire. When the controller's "↓" or the remote control's "▼" is pressed, power is output; releasing the button cuts off the power.
- BLUE WIRE: Hydraulic pump raising wire. When the controller's "↑" or the remote control's "▲" is pressed, power is output; releasing the button cuts off the power.
- BLACK WIRE: Ground wire, connected to the negative terminal of the power supply.
- RED WIRE: 12V DC power input, connected to the positive terminal of the power supply.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The device has been evaluated to meet general RF exposure requirement in portable exposure condition without restriction.