



DIRT BIKE BATTERY DESCRIPTION

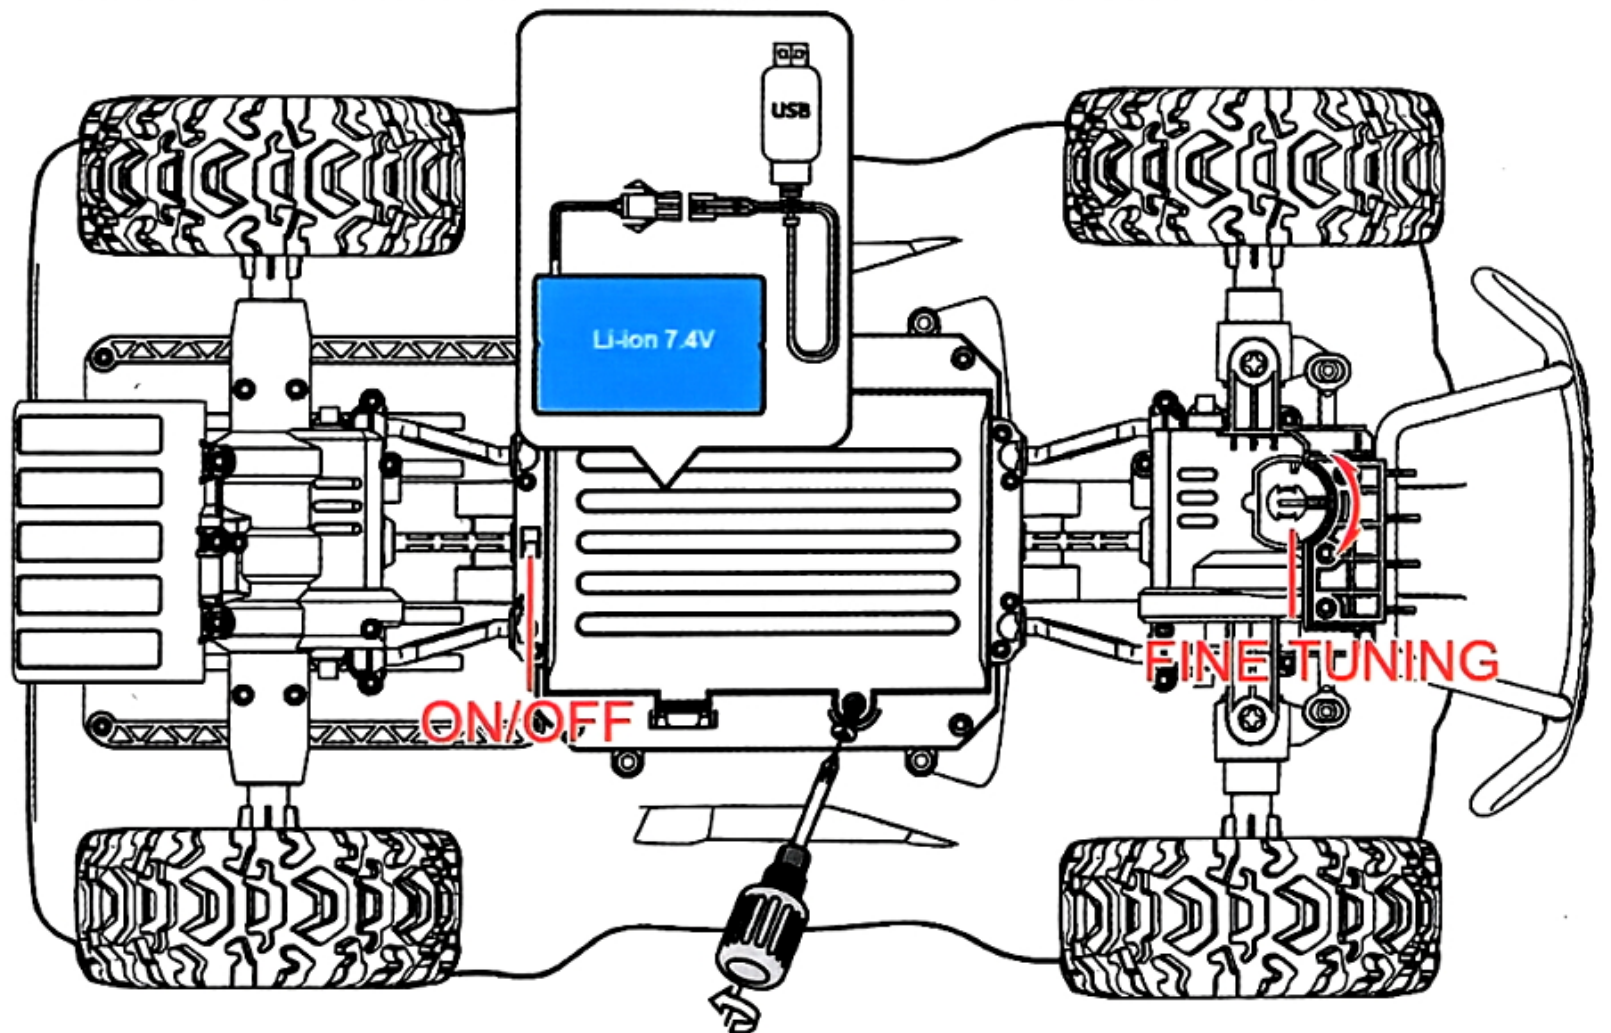

USE 7.4V BATTERY PACK (INCLUDED)
OPEN THE BATTERY COVER, REMOVE THE BATTERY
PACK CONNECT CHARGE LINE CHARGE.

R/C BATTERY DESCRIPTION

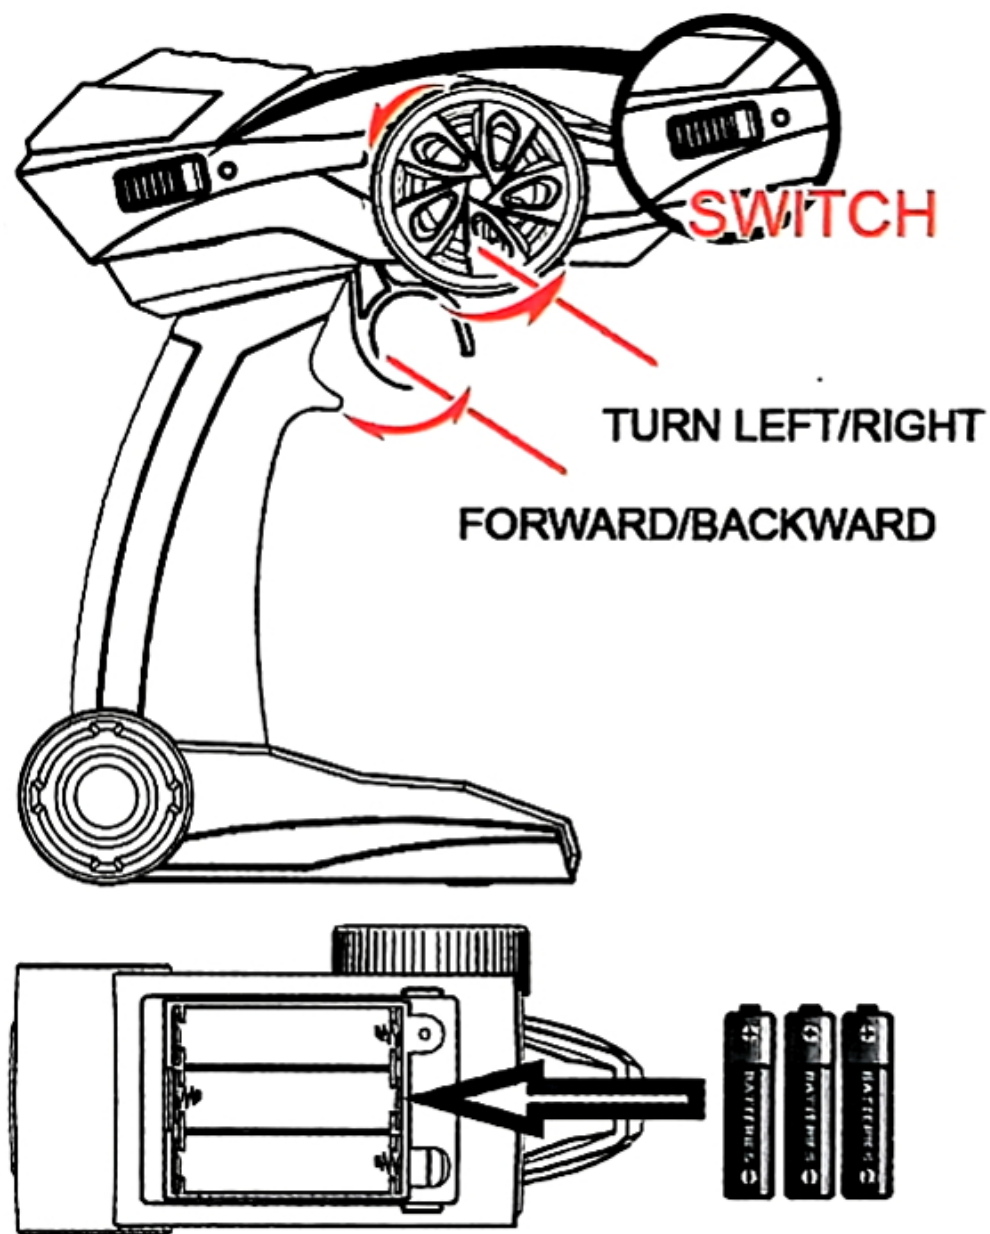

Open the battery cover on the remote control, use 3X 1.5V "AA" batteries (not included), mount the remote control button battery cover. Follow the polarity of the battery compartment tip correctly into the battery, and avoid danger!

- 1) Car use 7.4V rechargeable batteries, remote control with 3X1.5V"AA" non - rechargeable battery
- 2) Non - rechargeable batteries are not to be recharged.
- 3) Rechargeable batteries are to be removed from the toy before being charged{if removable}.
- 4) Rechargeable batteries are only to be charged under adult supervision {if removable}.
- 5) Different types of batteries or new and used batteries are not to be mixed.
- 6) Only batteries of the same or equivalent type as recommended are to be used.
- 7) Batteries are to be inserted with the correct polarity.
- 8) Exhausted batteries are to be removed from the toy.
- 9) The supply terminals are not to be short - circuited. Toy appliances in use successfully in the process, you should periodically check the wires, plugs. Shell and other parts for damage, found damage should discontinue use until the repair is intact.

FCC Statement

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.